





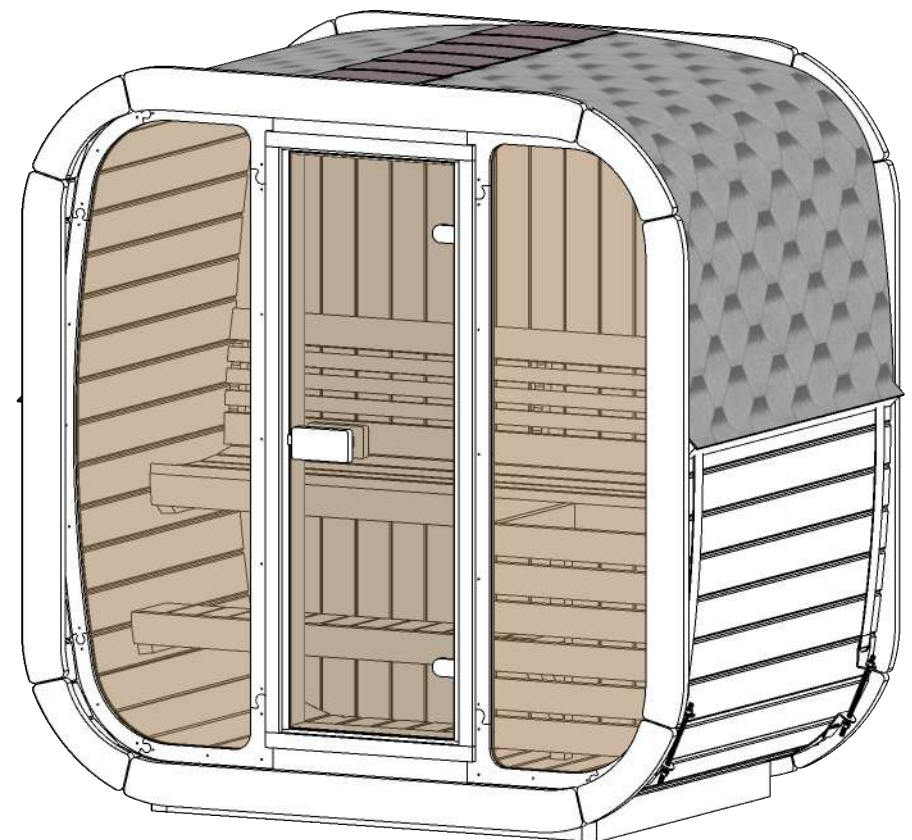


Cube Luxury Series CL4G Outdoor Sauna
50D" x 81W" x 83H"

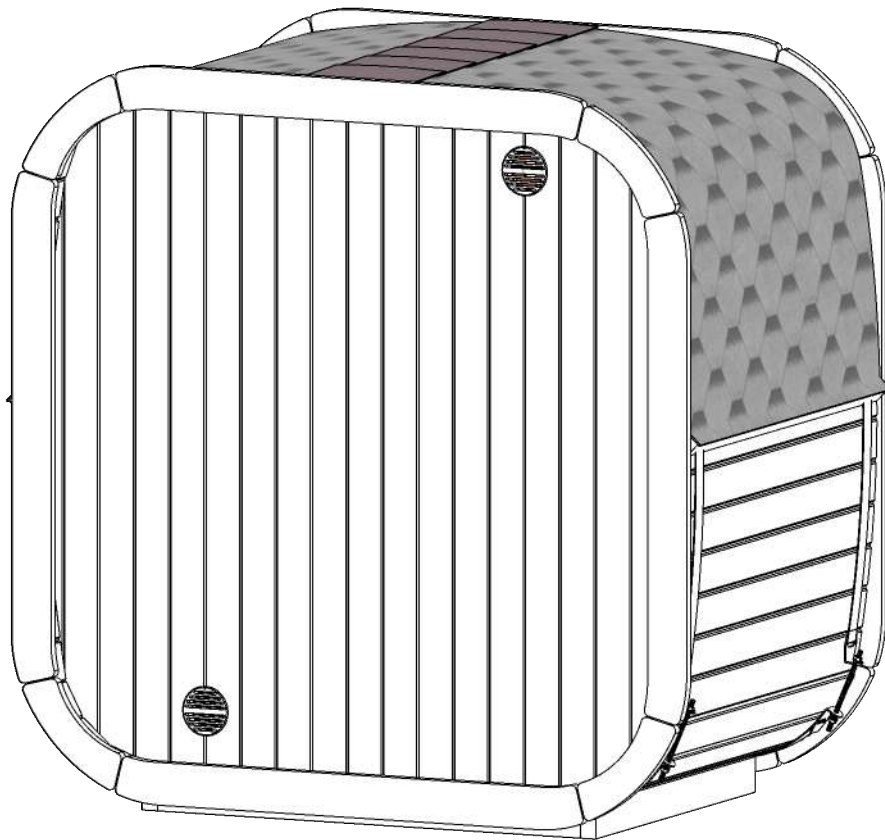


Note: Please read manual before construction


Rev: 1.0_6/2024

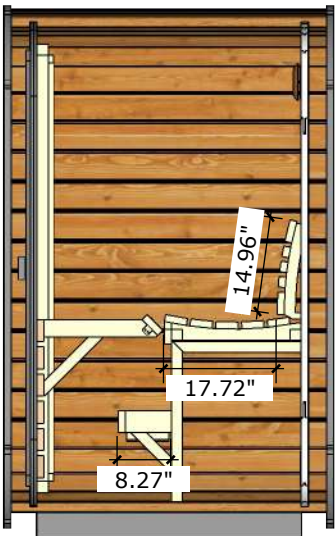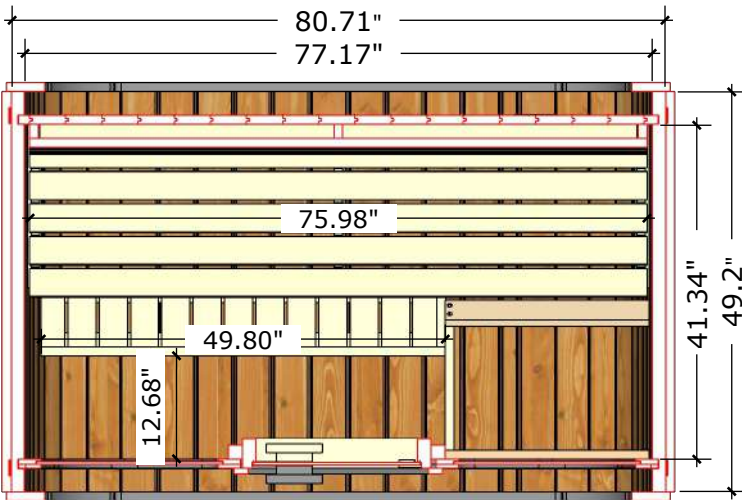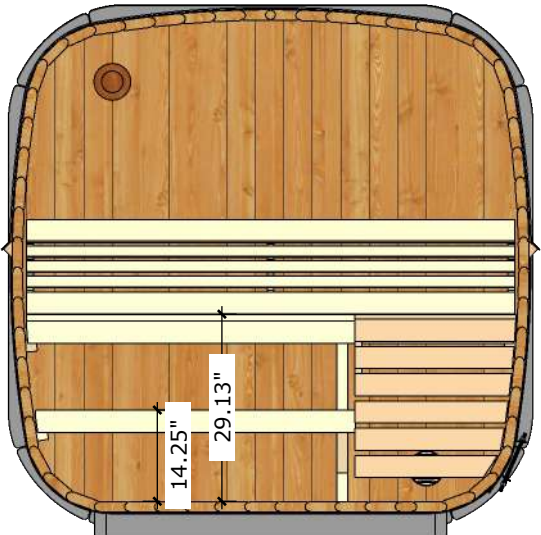


Tools needed

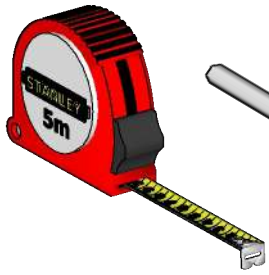


Measuring tape

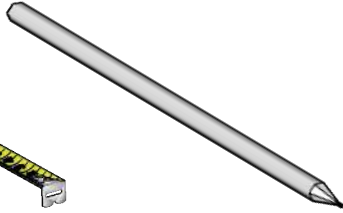


Marker pen

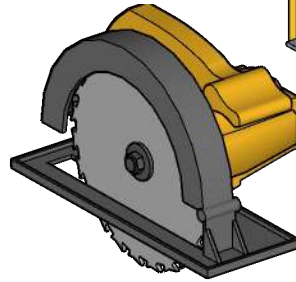

Circular saw

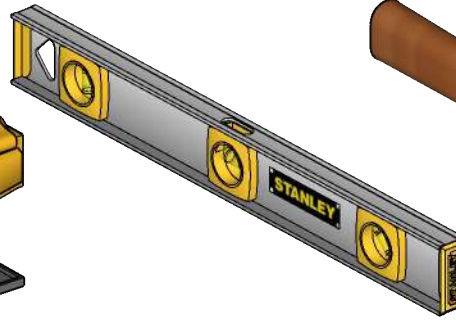

Water level

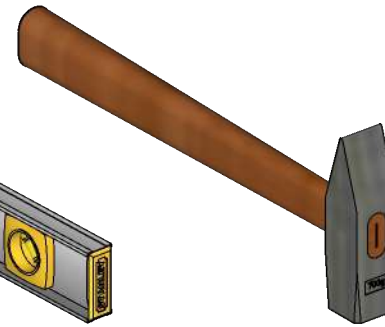


Hammer




Extra hands



Screwdriver

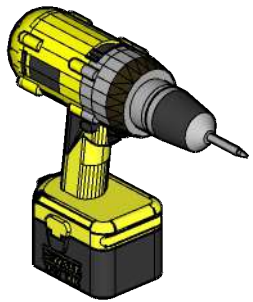


Drill

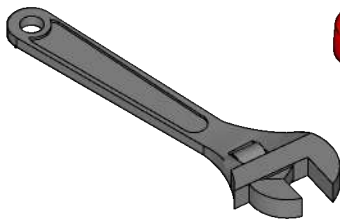

Crescent wrench












Utility knife













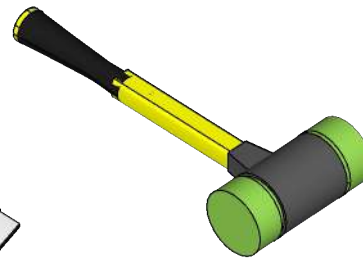














Rubber mallet














Ratchet strap

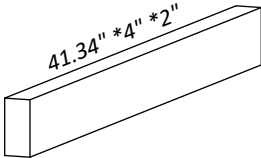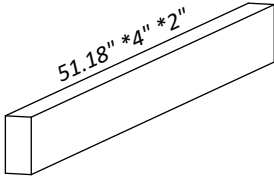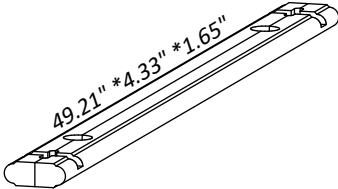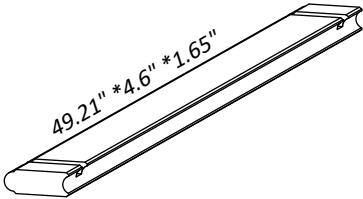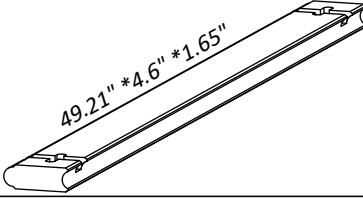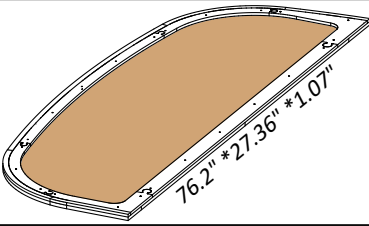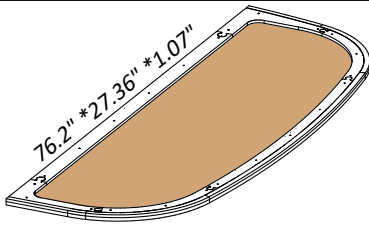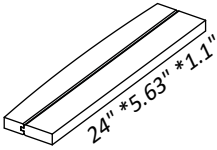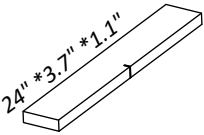DET 1 Article. K-SM100/1050	x2		
DET 2 Article. K-SM100/1300	x3		
DET 3 Article. T-STL117/1250XLM01	x1		
DET W Article. MU-TRAPP	x2 kmpł		
DET 3 Article. T-STL117/1250-01	x64		
DET 3/H Article. T-STL117/1250-01X	x2		
DET Sb Article. IC-TE-20-PR-12/15V	x1		
DET Sa Article. IC-TE-20-PR-12/15P	x1		
DET Ta Article. T-SL117/610UK1	x1		
DET Tb Article. T-TL94/610J	x1		

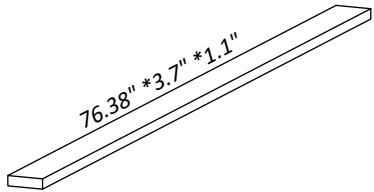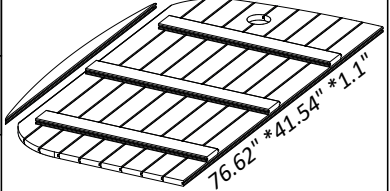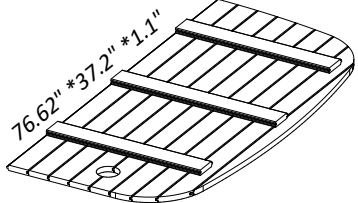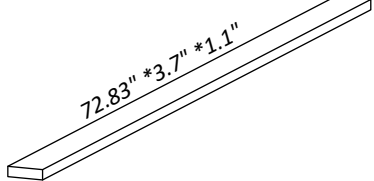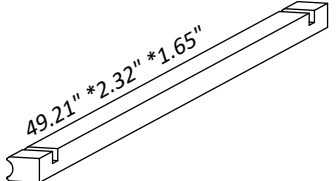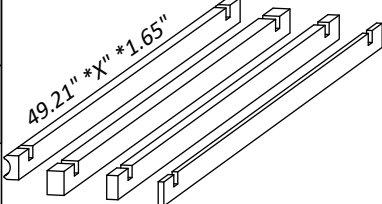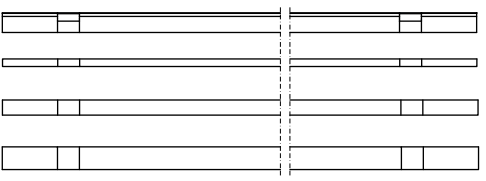DET V Article. KI-VIN-25/40/40-ZN	x4		
DET U1 Article. K-TL94/1940	x1		
DET Y1 Article. T-IC-PTS-20/28-V	x1		
DET Y2 Article. T-IC-PTS-20/28-P	x1		
DET U2 Article. K-TL94/1850	x1		
DET 6 Article. T-STL117/1250XL-01	x2		
DET 6c/d/e/f Article. T-STL117/1250KO-01	x1		 X  1"  3/8"  3/4"  1 3/16"
DET A1 Article. MU-VIT1840-KLZN	x2		
DET A2 Article. MU-VIT4860-KLZN	x2		
DET G Article. MU-VENT-100-PU	x1		

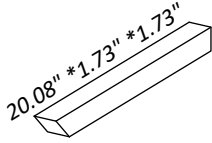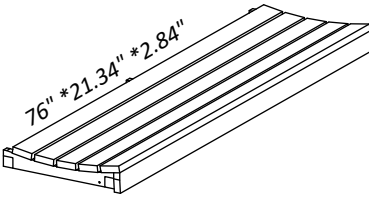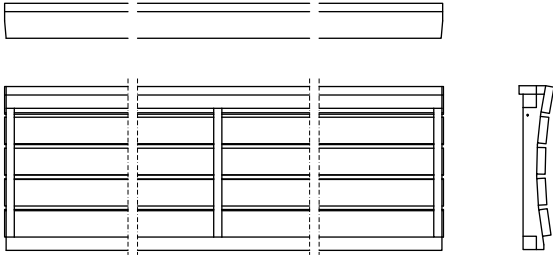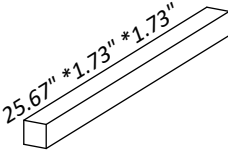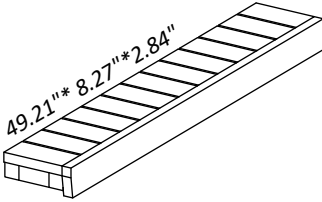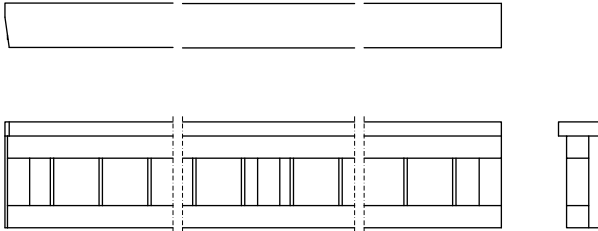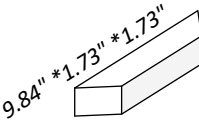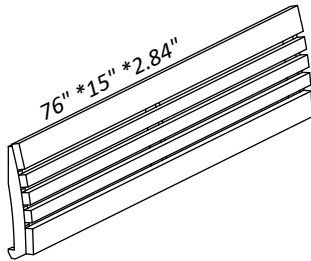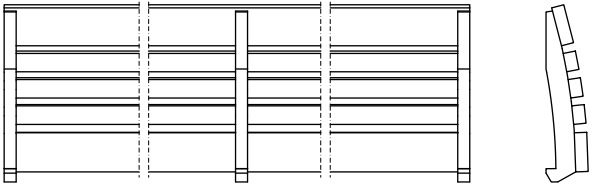
DET F Article. MU-VENT-100-ZN	x3		
DET 10a Article. K-HP44/510XP	x2		
DET 10c Article. K-HP44/170	x1		
DET 10 Article. TL-LAMOD-1930-KA01	x1		
DET 10b Article. K-HP44/652	x1		
DET 12 Article. TL-LAMOD-1250-01	x1		
DET 12a Article. K-HP44/250XP-XP	x1		
DET 14 Article. TL-STMOD-1930-KA01	x1		
DET 21 Article. U-KL-6/17-PR	x1		

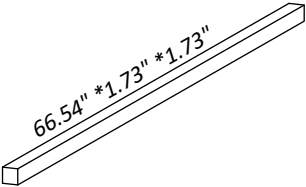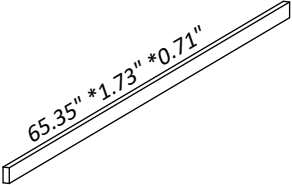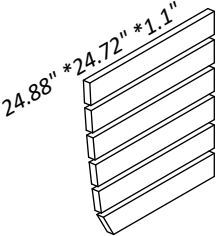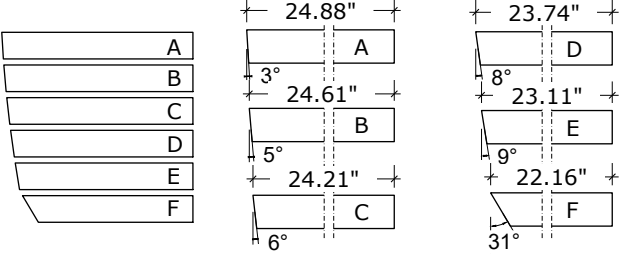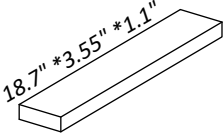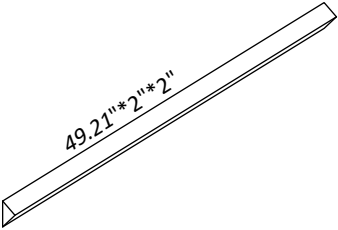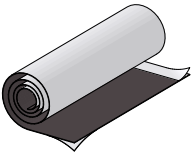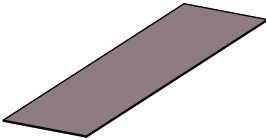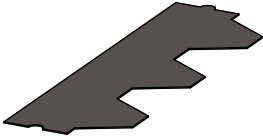DET 21c Article. K-HP44/1690	x2		
DET 21d Article. K-HP44/680	x2		
DET 21a Article. K-HL44/1660	x2		
DET 21b Article. K-HL44/650	x2		
DET 16 Article. TL-PIMOD-632-01	x1		
DET 15 Article. TL-LAV90/475	x1		
DET 22 Article. T-STL-1250-XX	x2		
Underlay felt Article. KAT-AL	26 ´		
DET N Article. KAT-HAR-MUST	x5		
DET O Article. KAT-SIN-MUST	x42		


DET 25a	x8		
Article.			
MU-OL-IC-20-1			
DET 25b	x8		
Article.			
MU-OL-IC-20-2			
Article. KI-KERL-12-RV4		Article. KI-USA-ICO-226	
 D x8 E x8 C x4		 Bit PH2 Torx bits T10 T15 T20 T25 L ~250 K x20 J x40 I x35 H x230 M x55	

CL4G Outdoor Sauna 50D" x 81W" x 83H"


Exterior

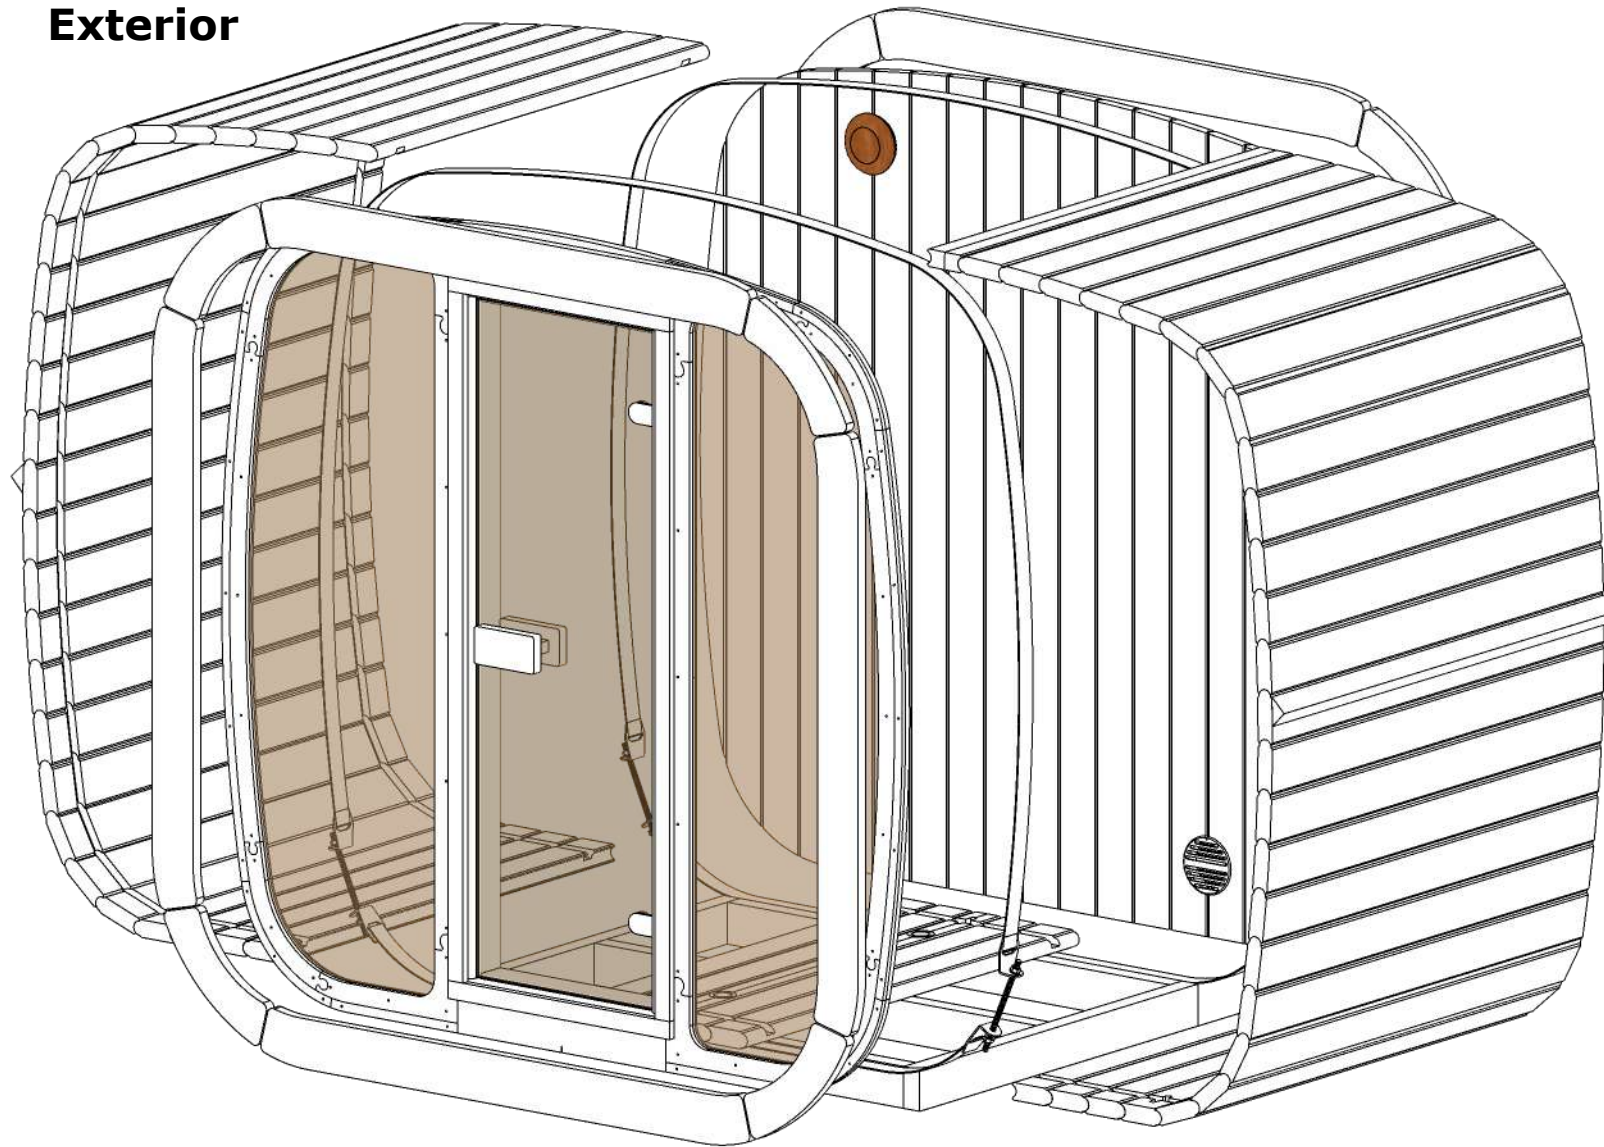


CL4G Outdoor Sauna 50D" x 81W" x 83H"

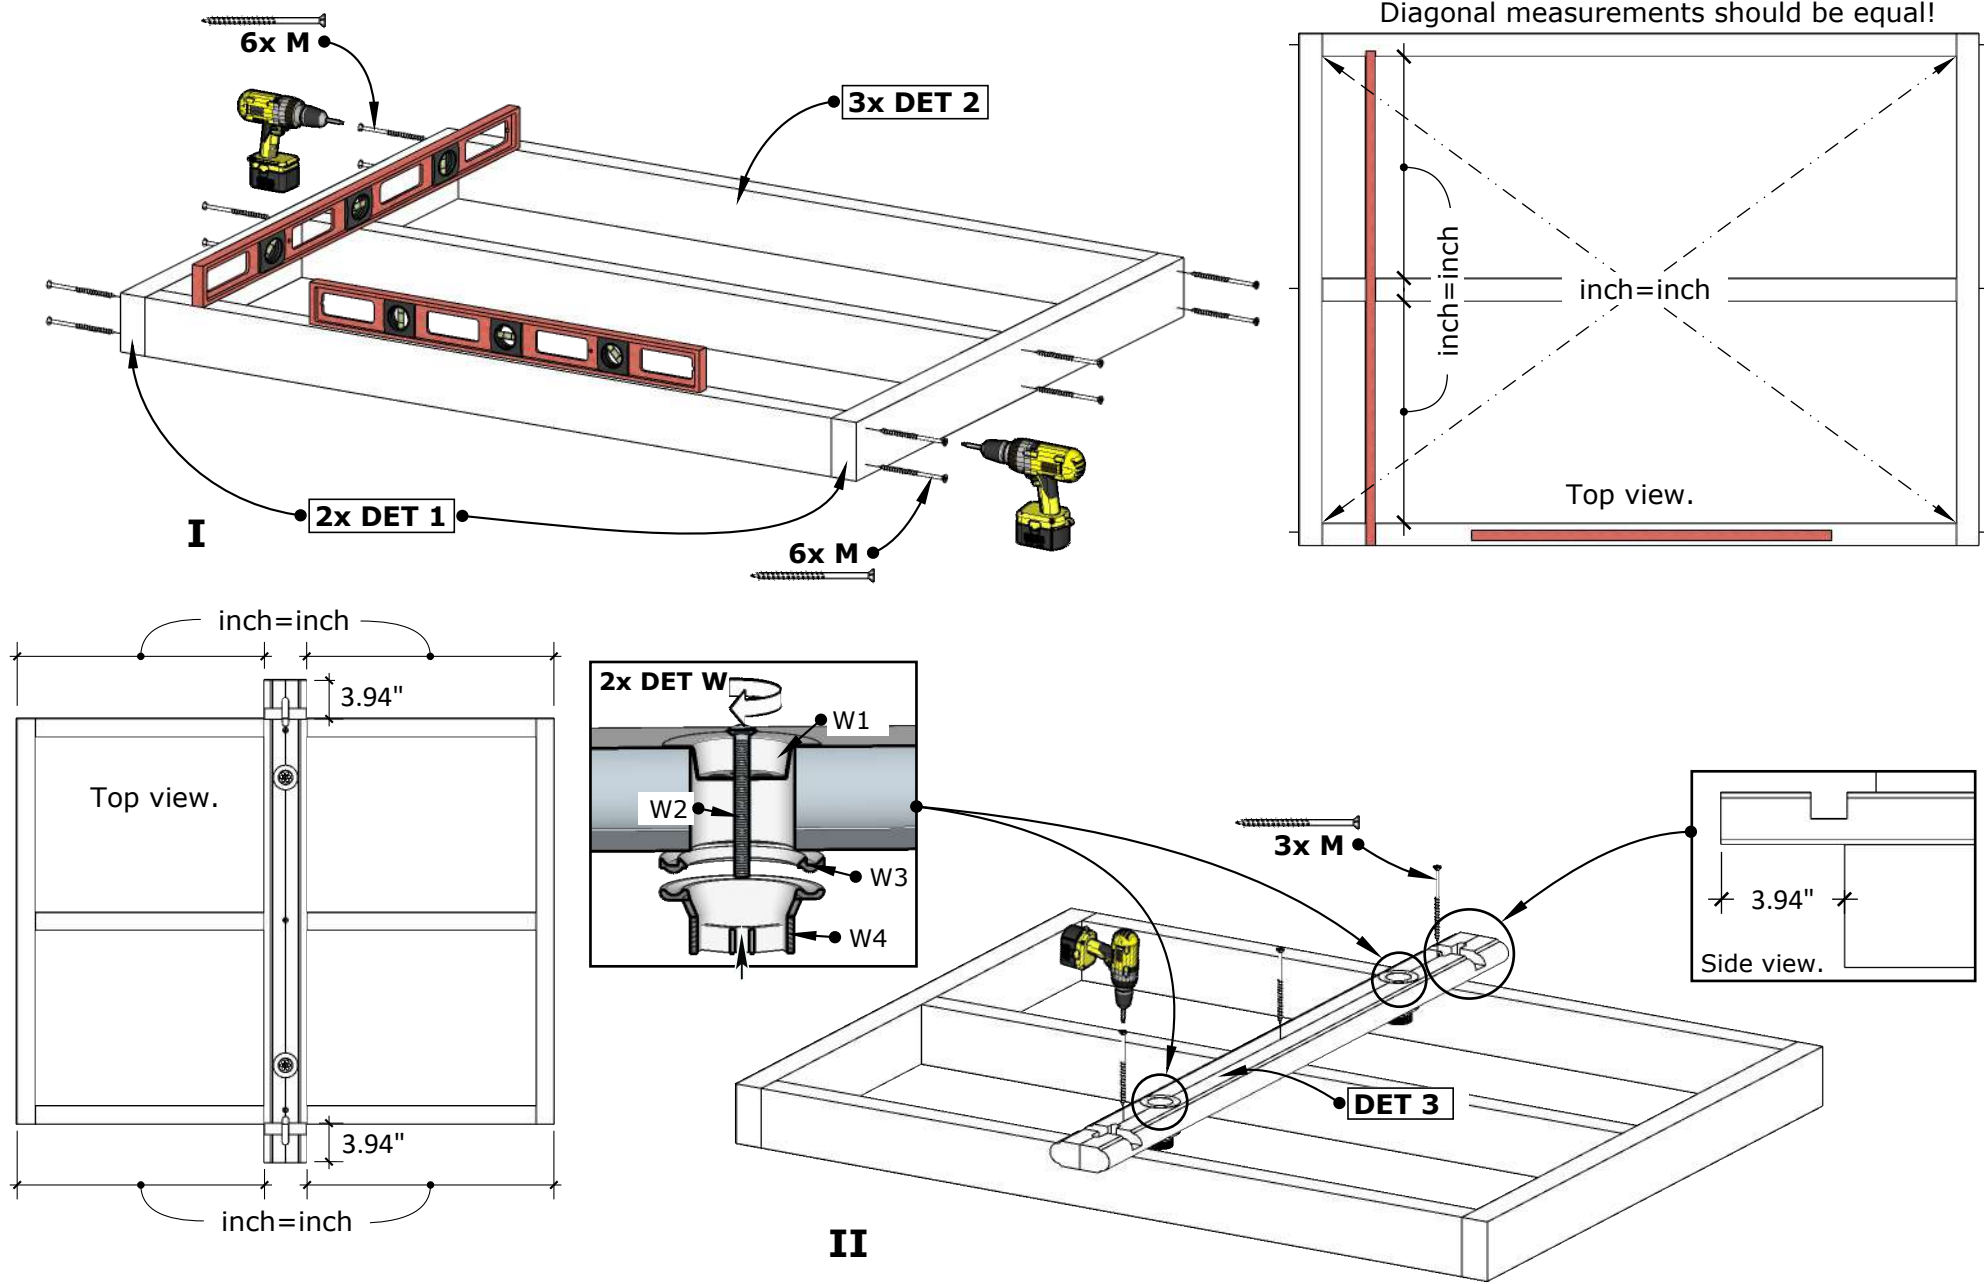

CL4G Outdoor Sauna 50D" x 81W" x 83H"


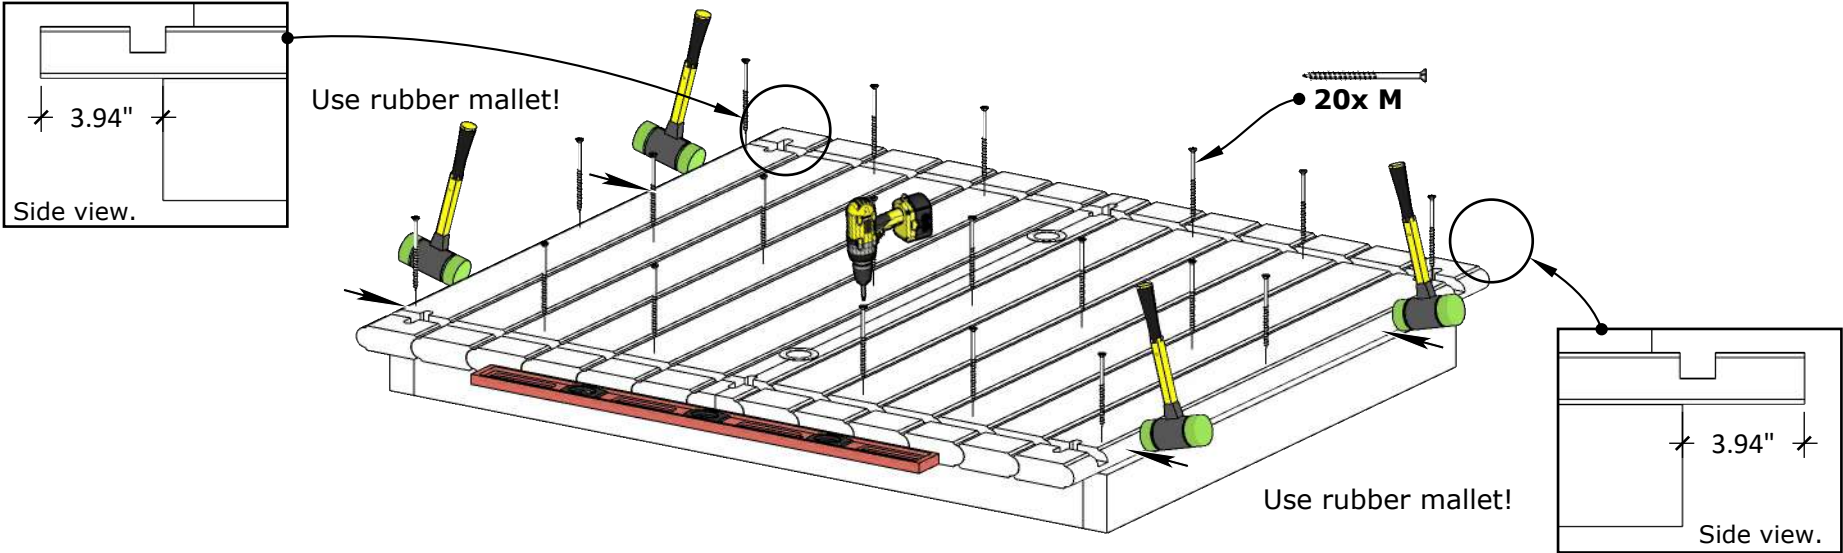


Fix screws over the one board, diagonally in every board.




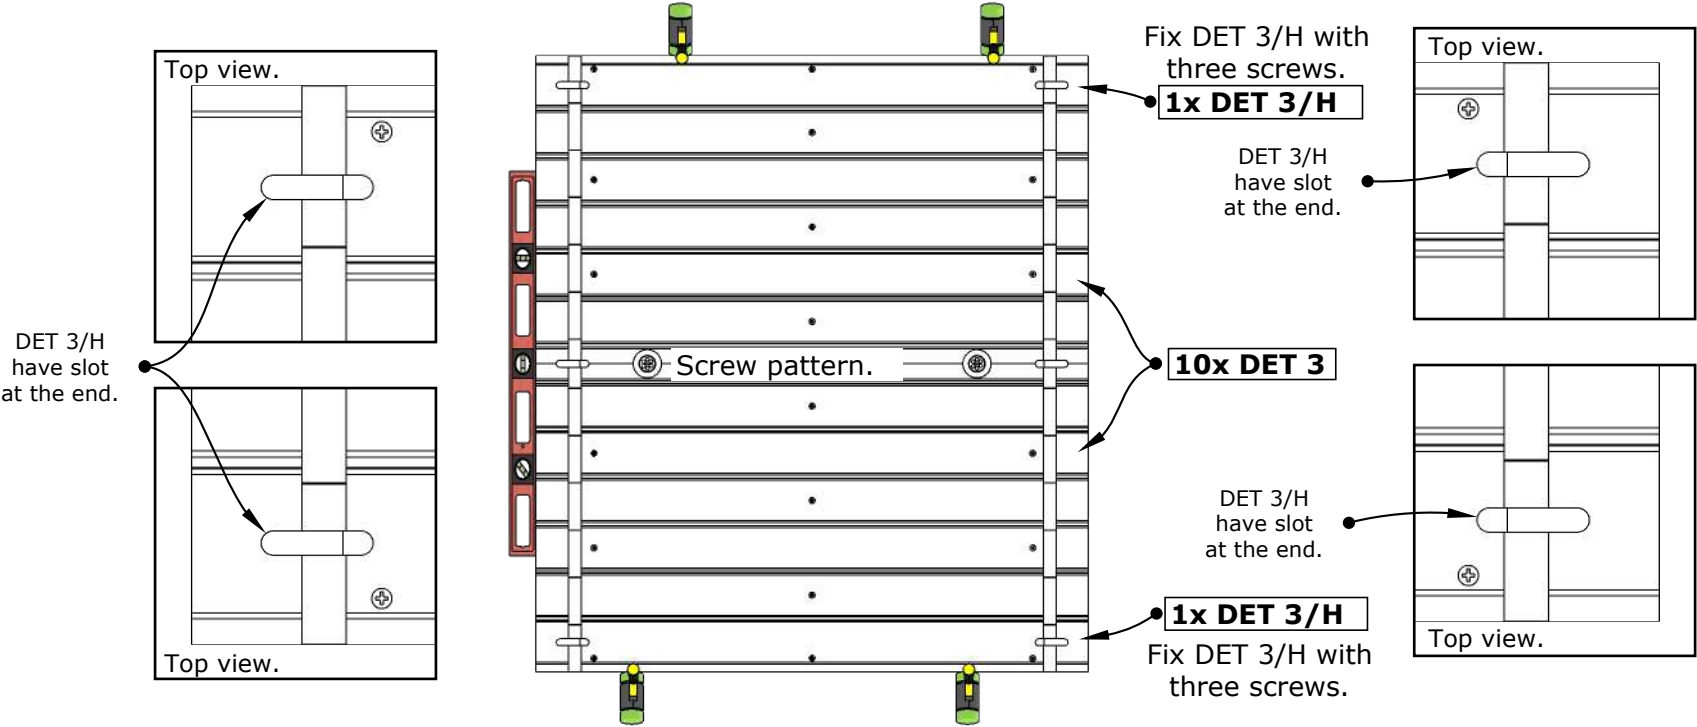


CL4G Outdoor Sauna 50D" x 81W" x 83H"

Front glass-wall assembly

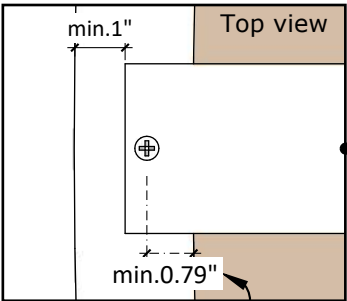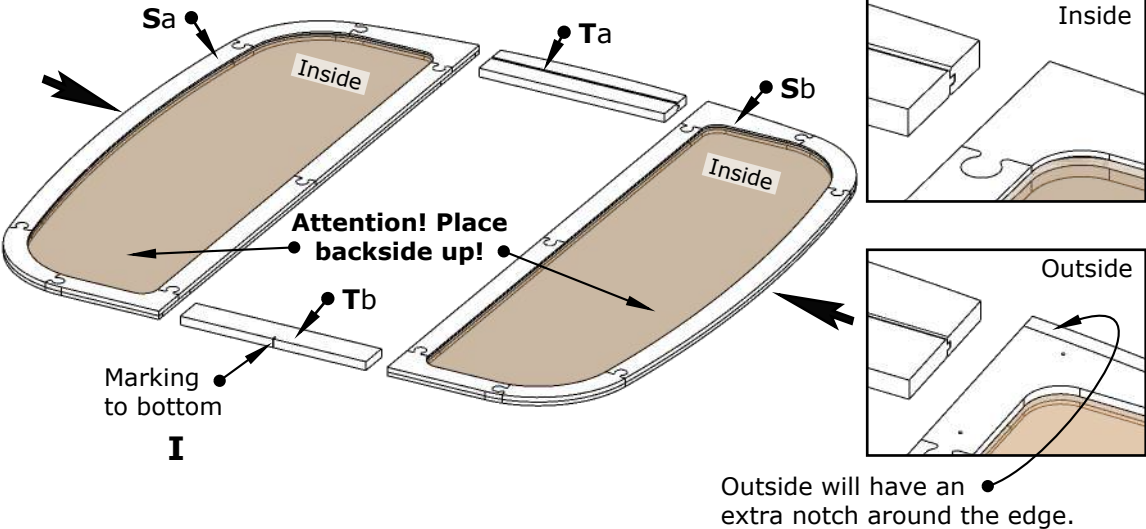



Attention! Be extra careful to not hit the glass!!!

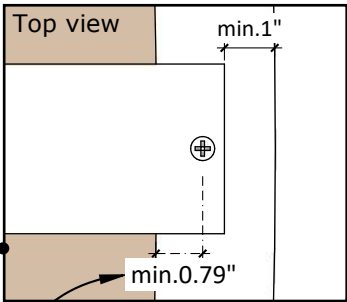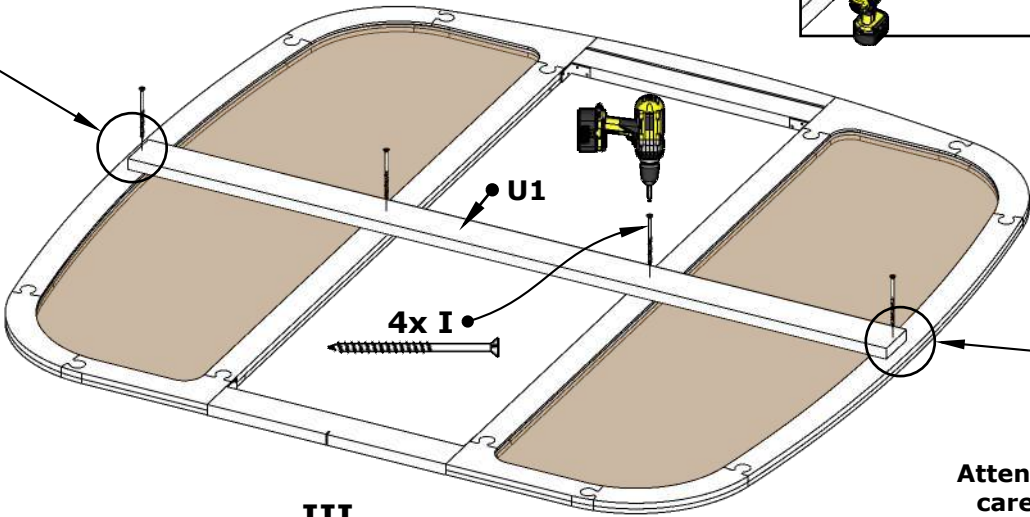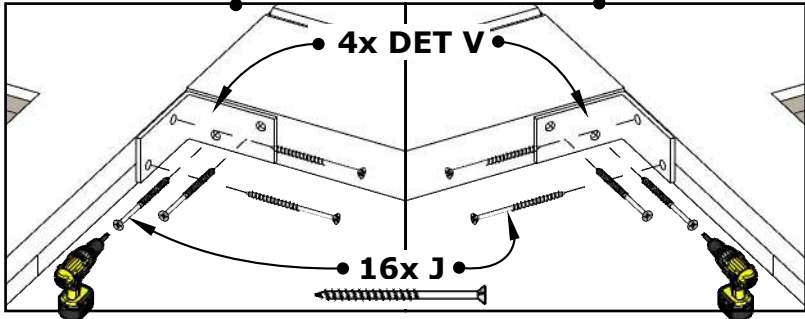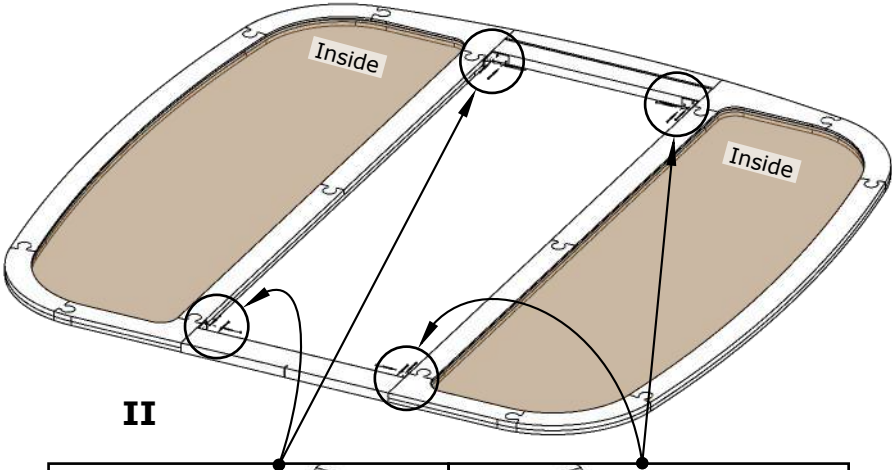


Attention! Be extra careful to not hit the glass!!!

CL4G Outdoor Sauna 50D" x 81W" x 83H"

Wooden back wall assembly

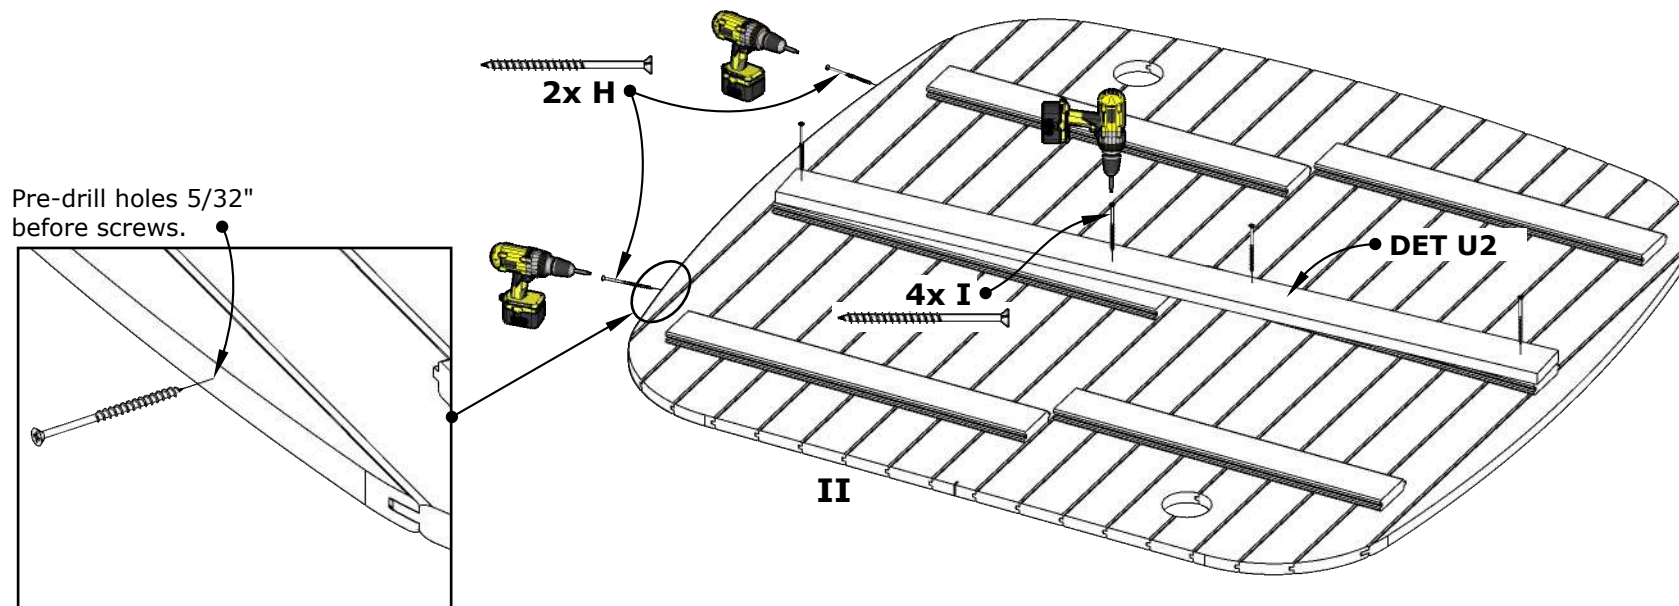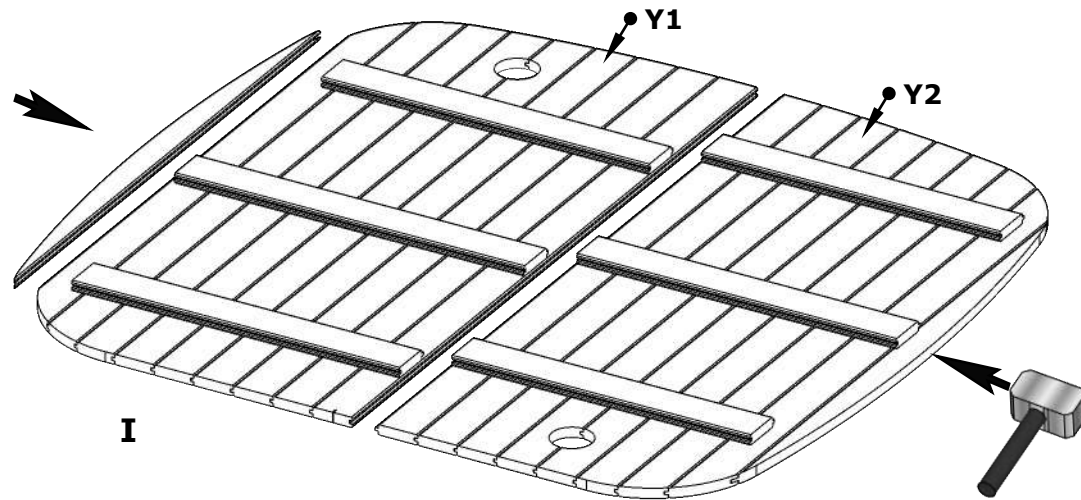


CL4G Outdoor Sauna 50D" x 81W" x 83H"



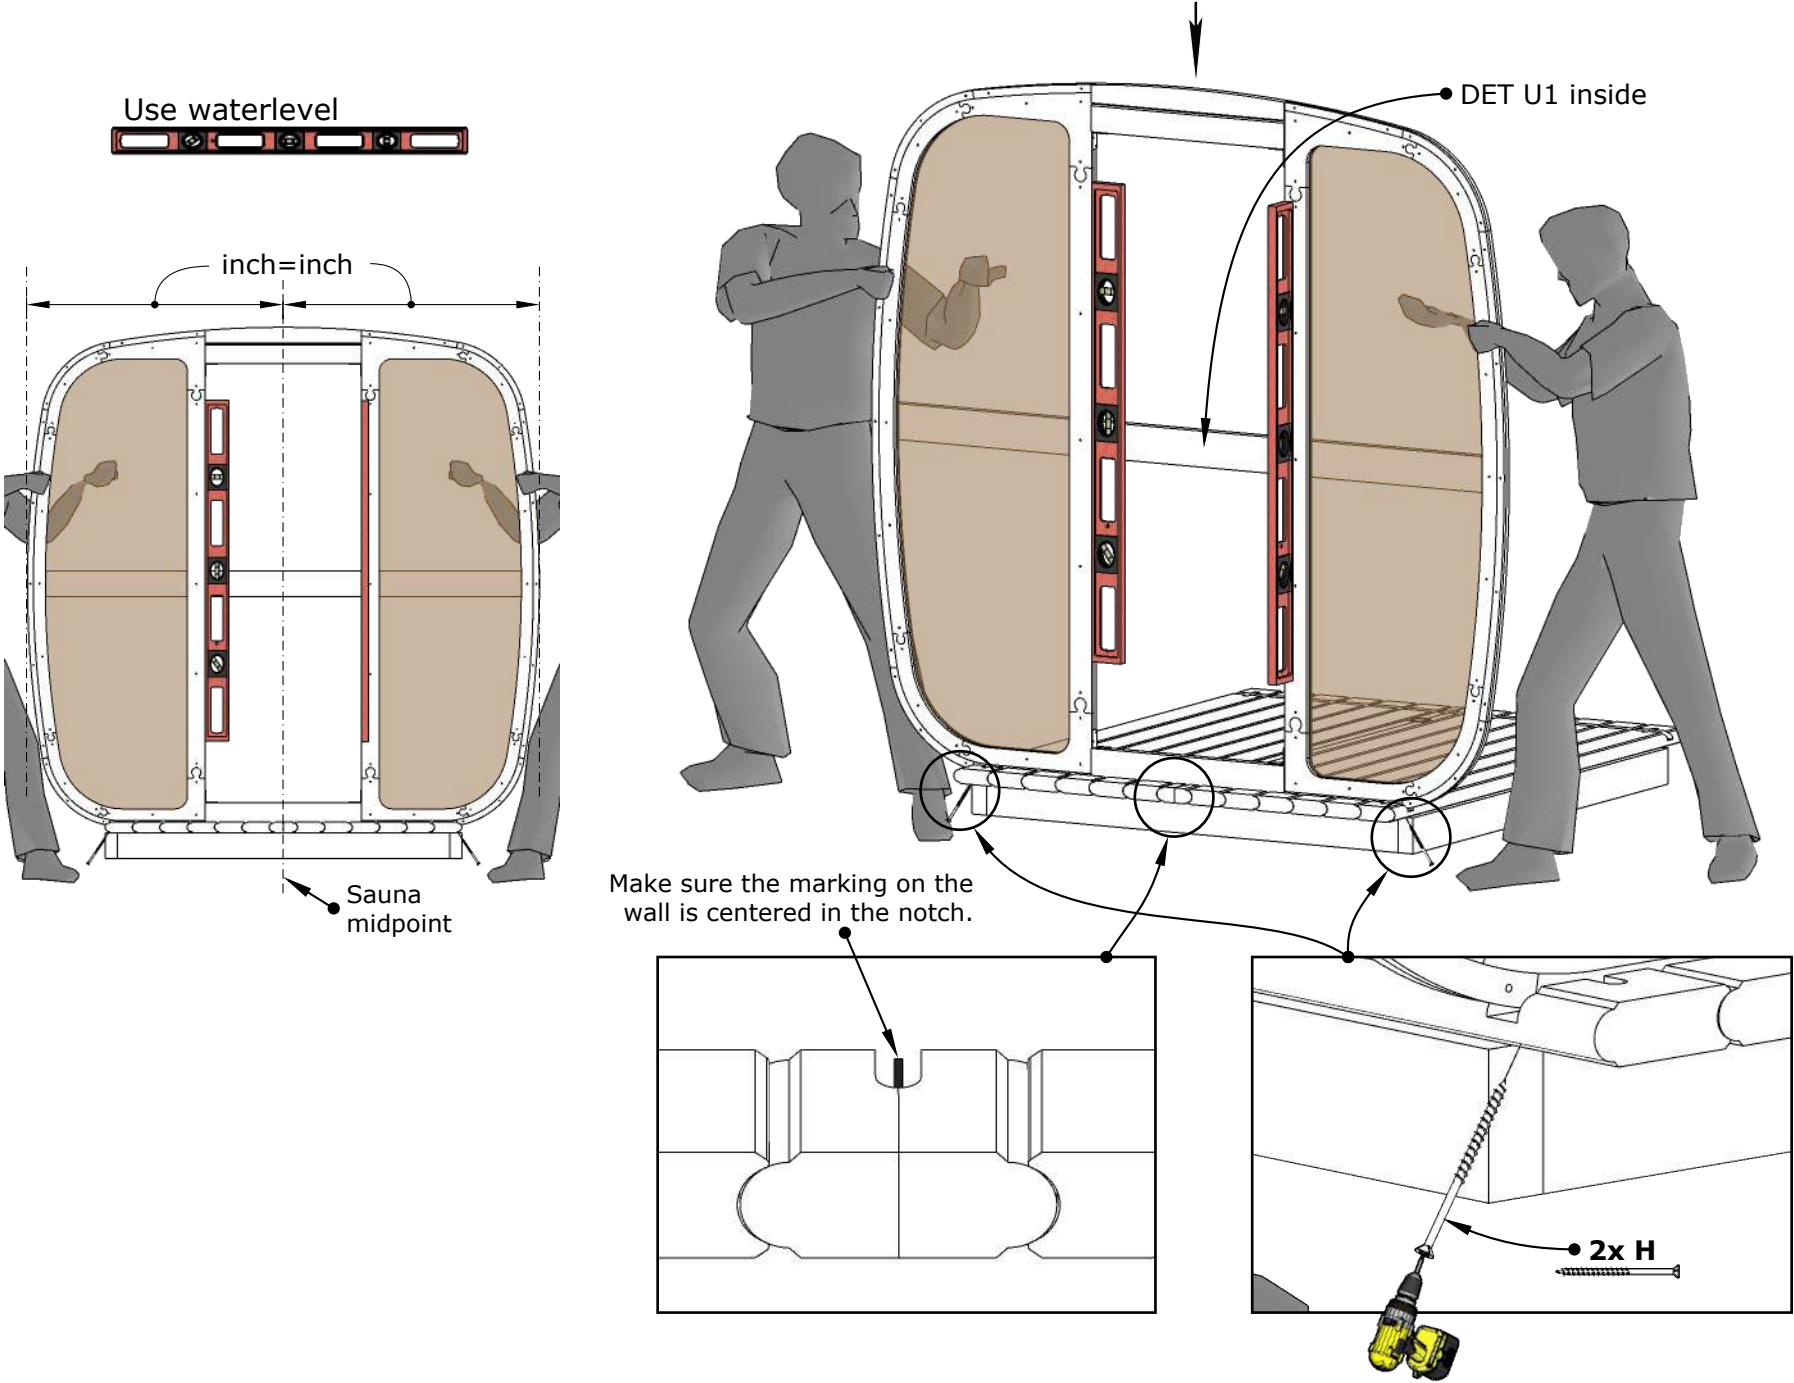


CL4G Outdoor Sauna 50D" x 81W" x 83H"

Use waterlevel

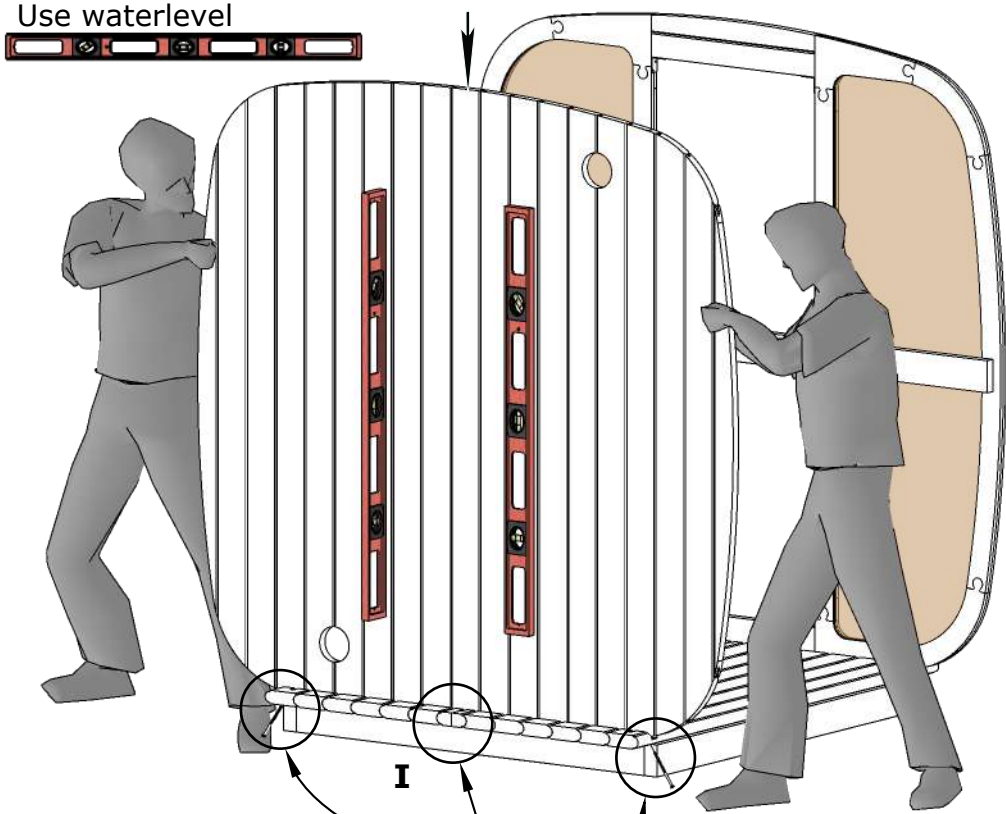



Make sure the marking on the wall is centered in the notch.

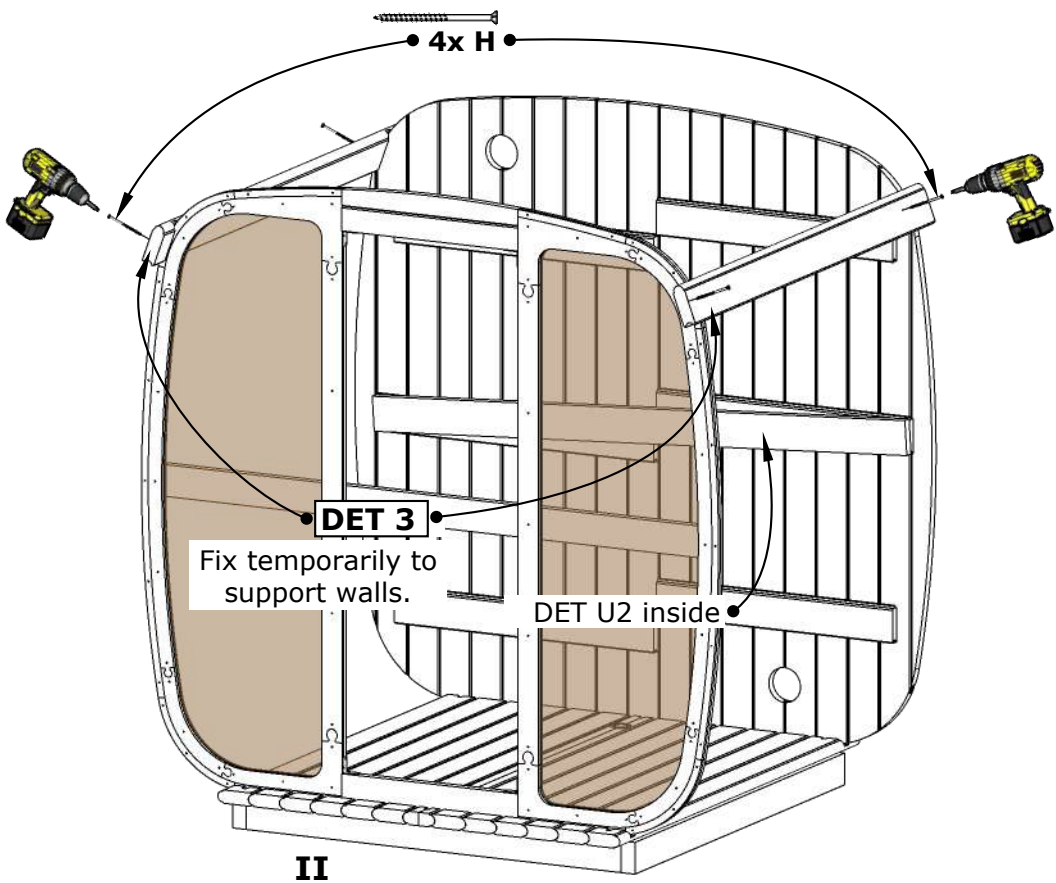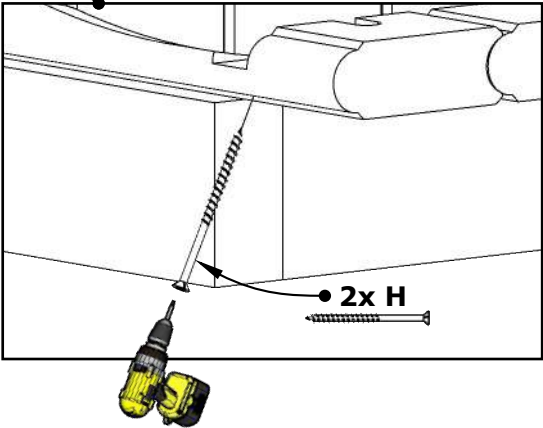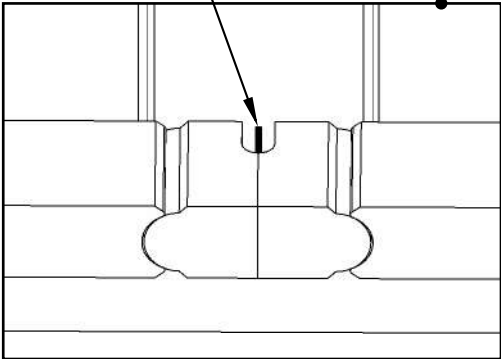

CL4G Outdoor Sauna 50D" x 81W" x 83H"




Remove DET 3 from their temporary positions and use during the next step.

Use rubber mallet!

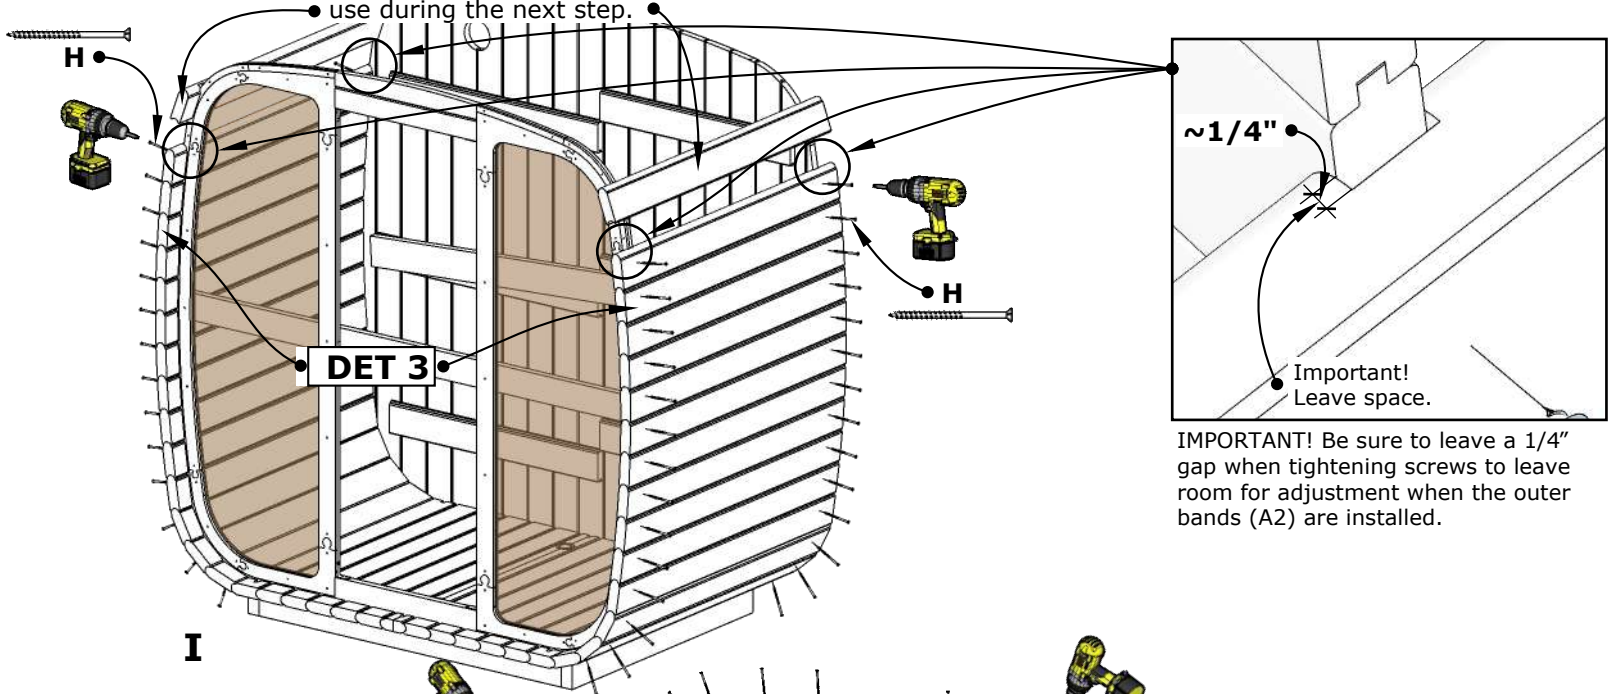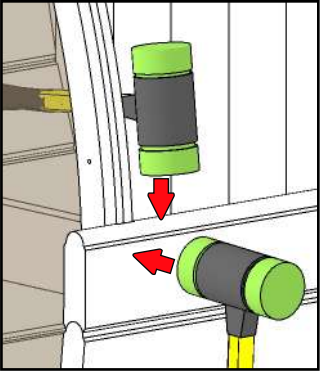


IMPORTANT! Be sure to leave a 1/4" gap when tightening screws to leave room for adjustment when the outer bands (A2) are installed.

See the next page.

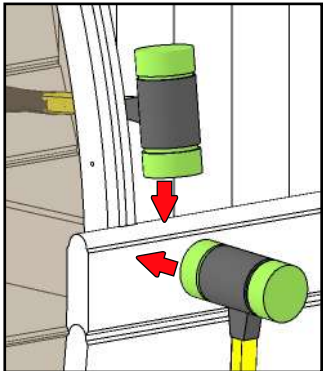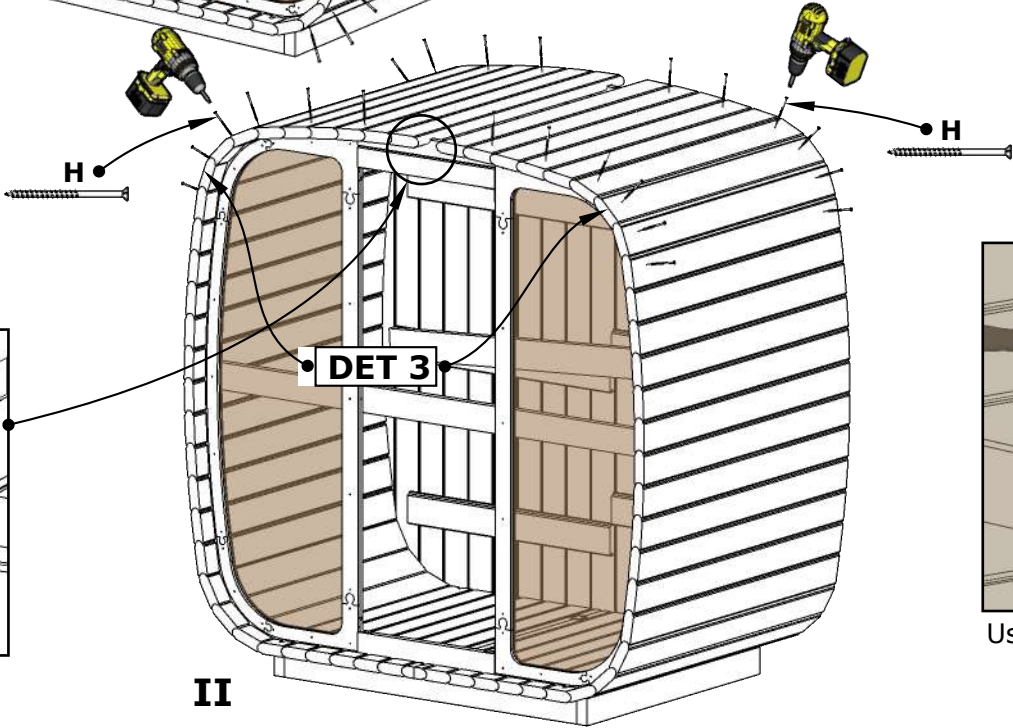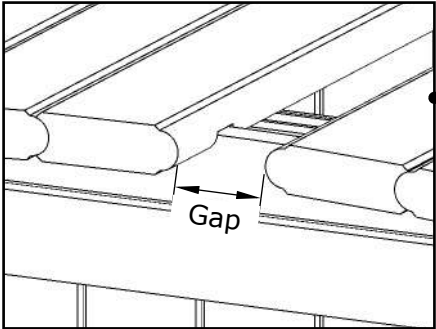


Use rubber mallet!

CL4G Outdoor Sauna 50D" x 81W" x 83H"

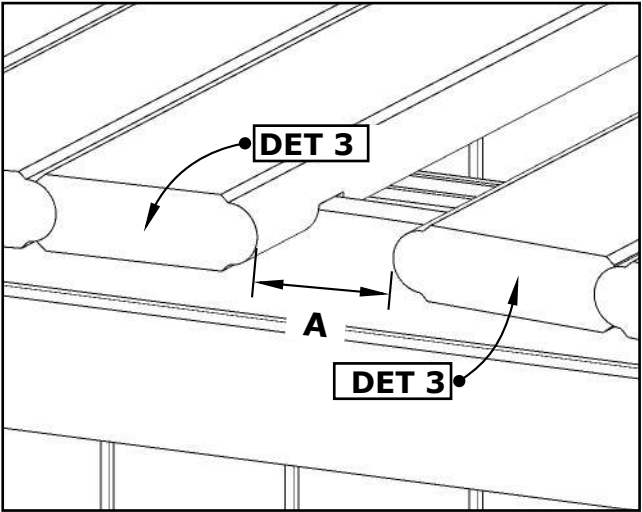


I

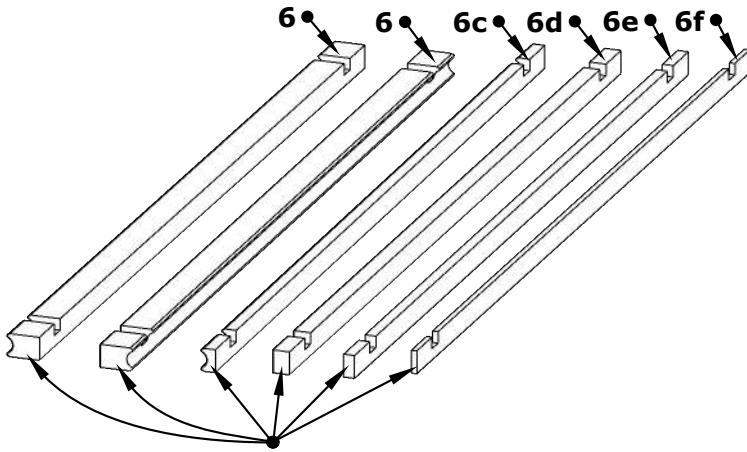


II

Join boards together (as shown in diagram III) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately 1/4" wider than the gap.

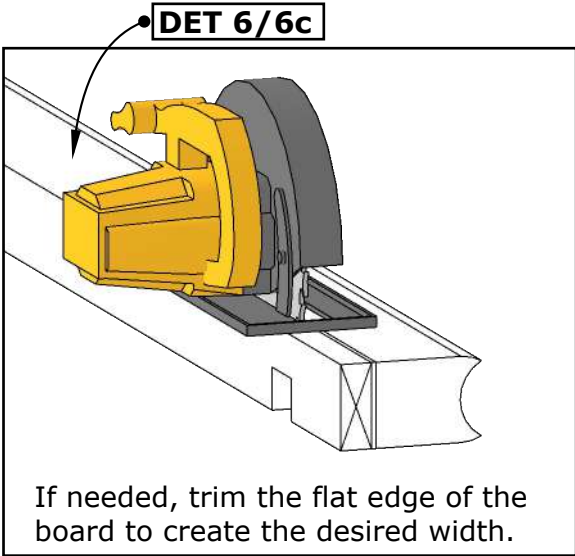


If needed, trim the flat edge of the board to create the desired width.

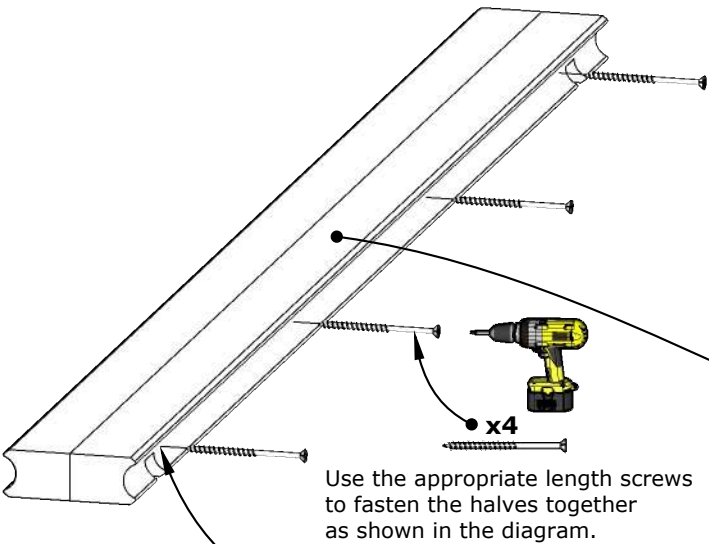


III


Pre-drill holes Ø 5/32"

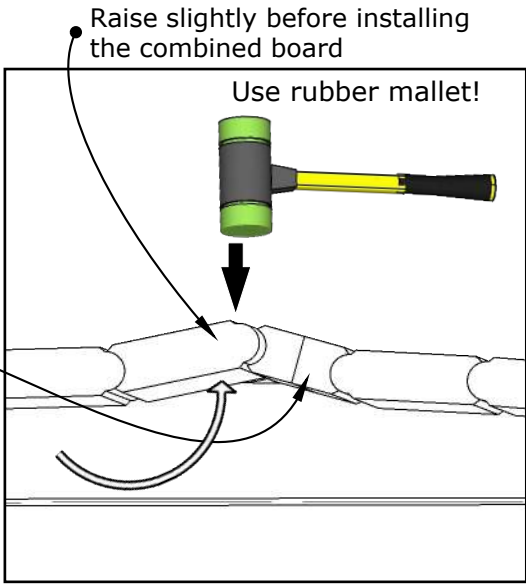



IV

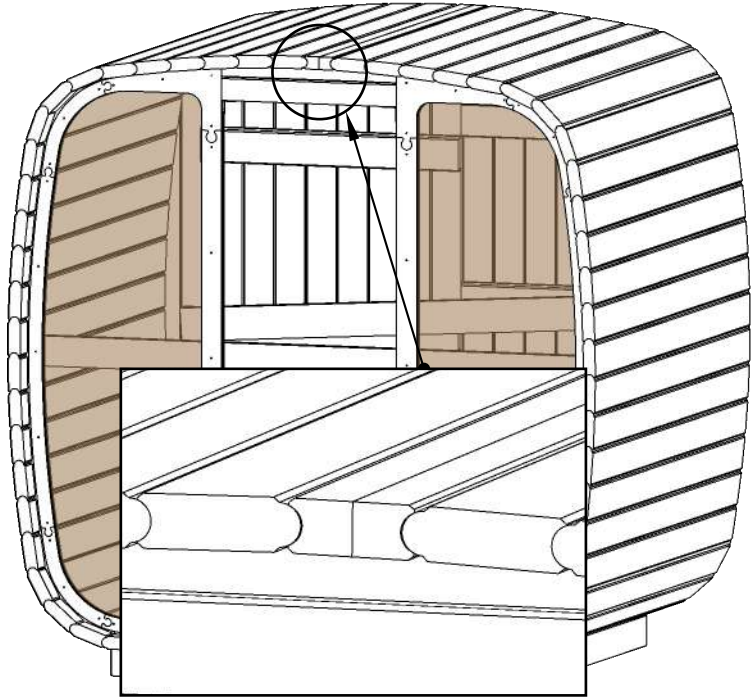


CL4G Outdoor Sauna 50D" x 81W" x 83H"

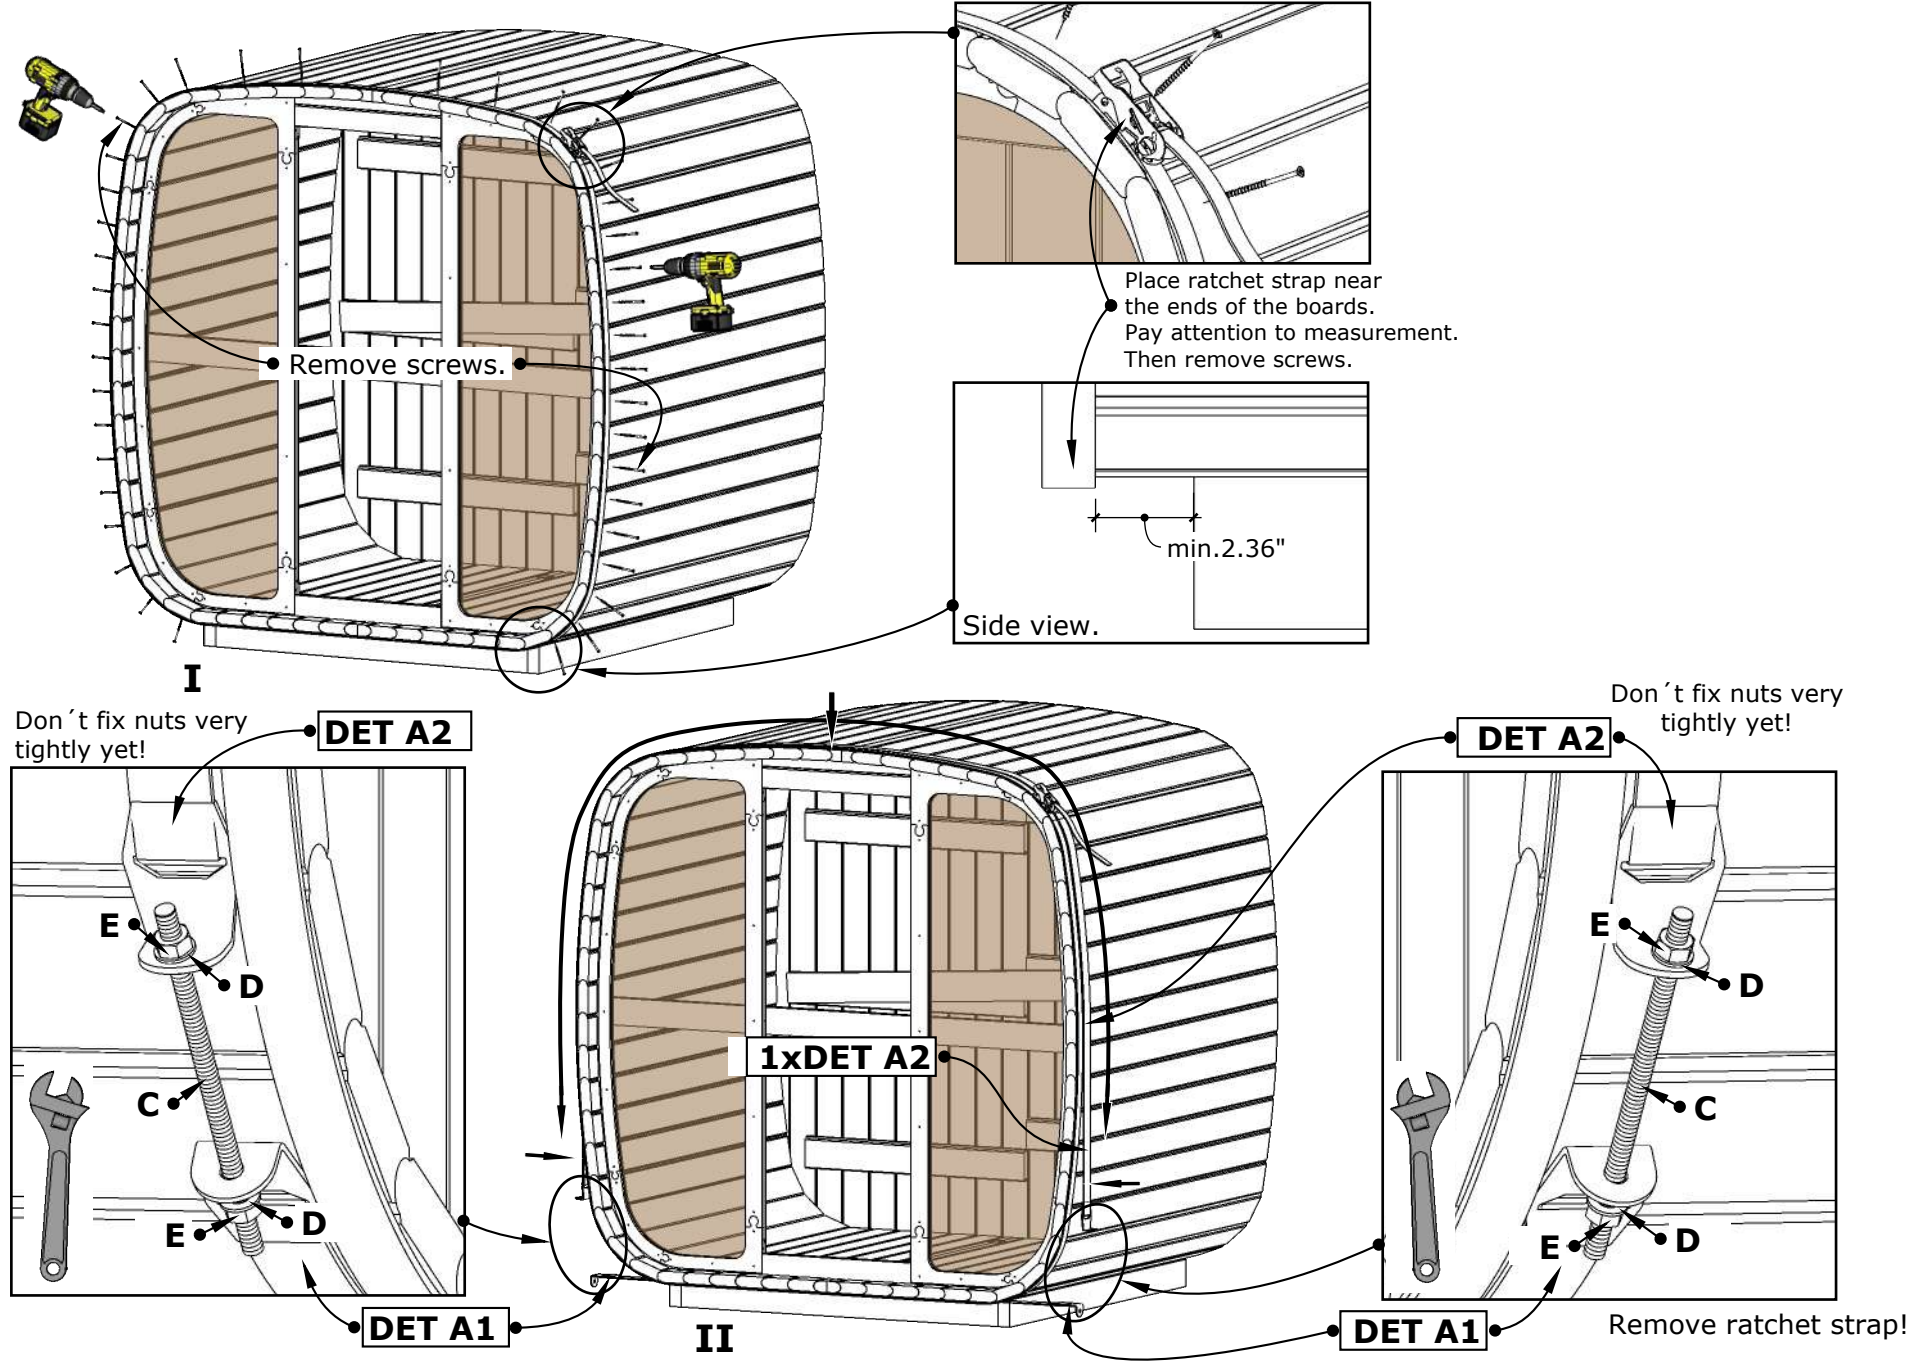

CL4G Outdoor Sauna 50D" x 81W" x 83H"

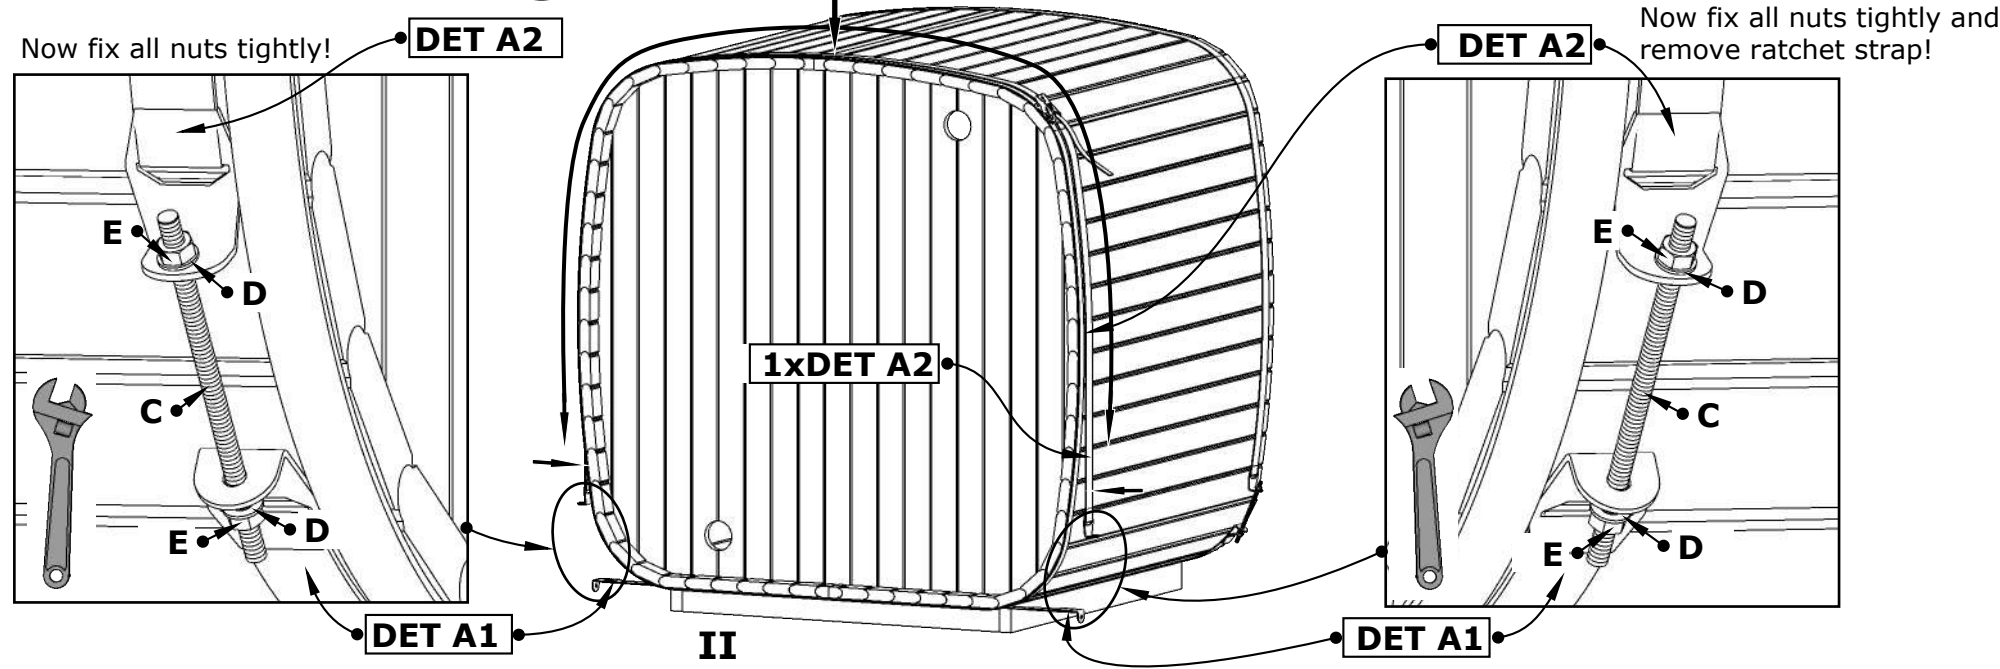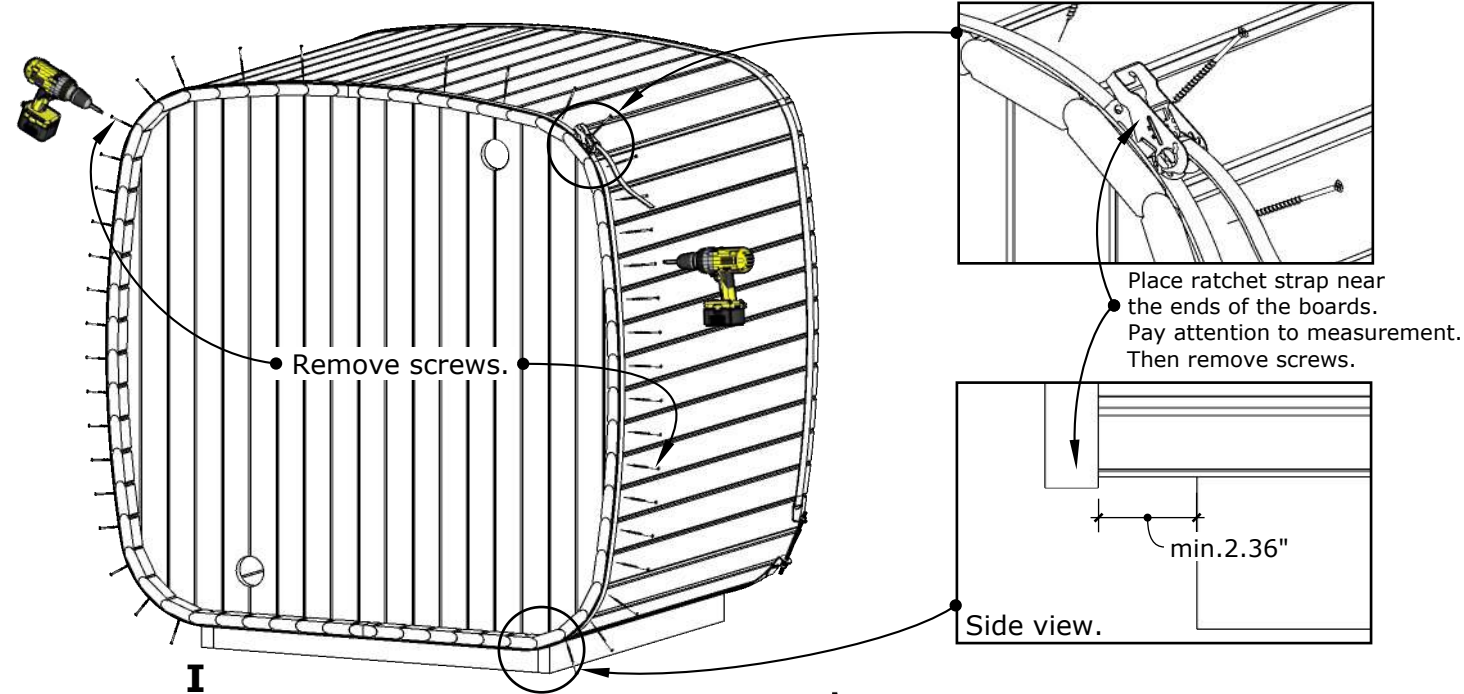


CL4G Outdoor Sauna 50D" x 81W" x 83H"

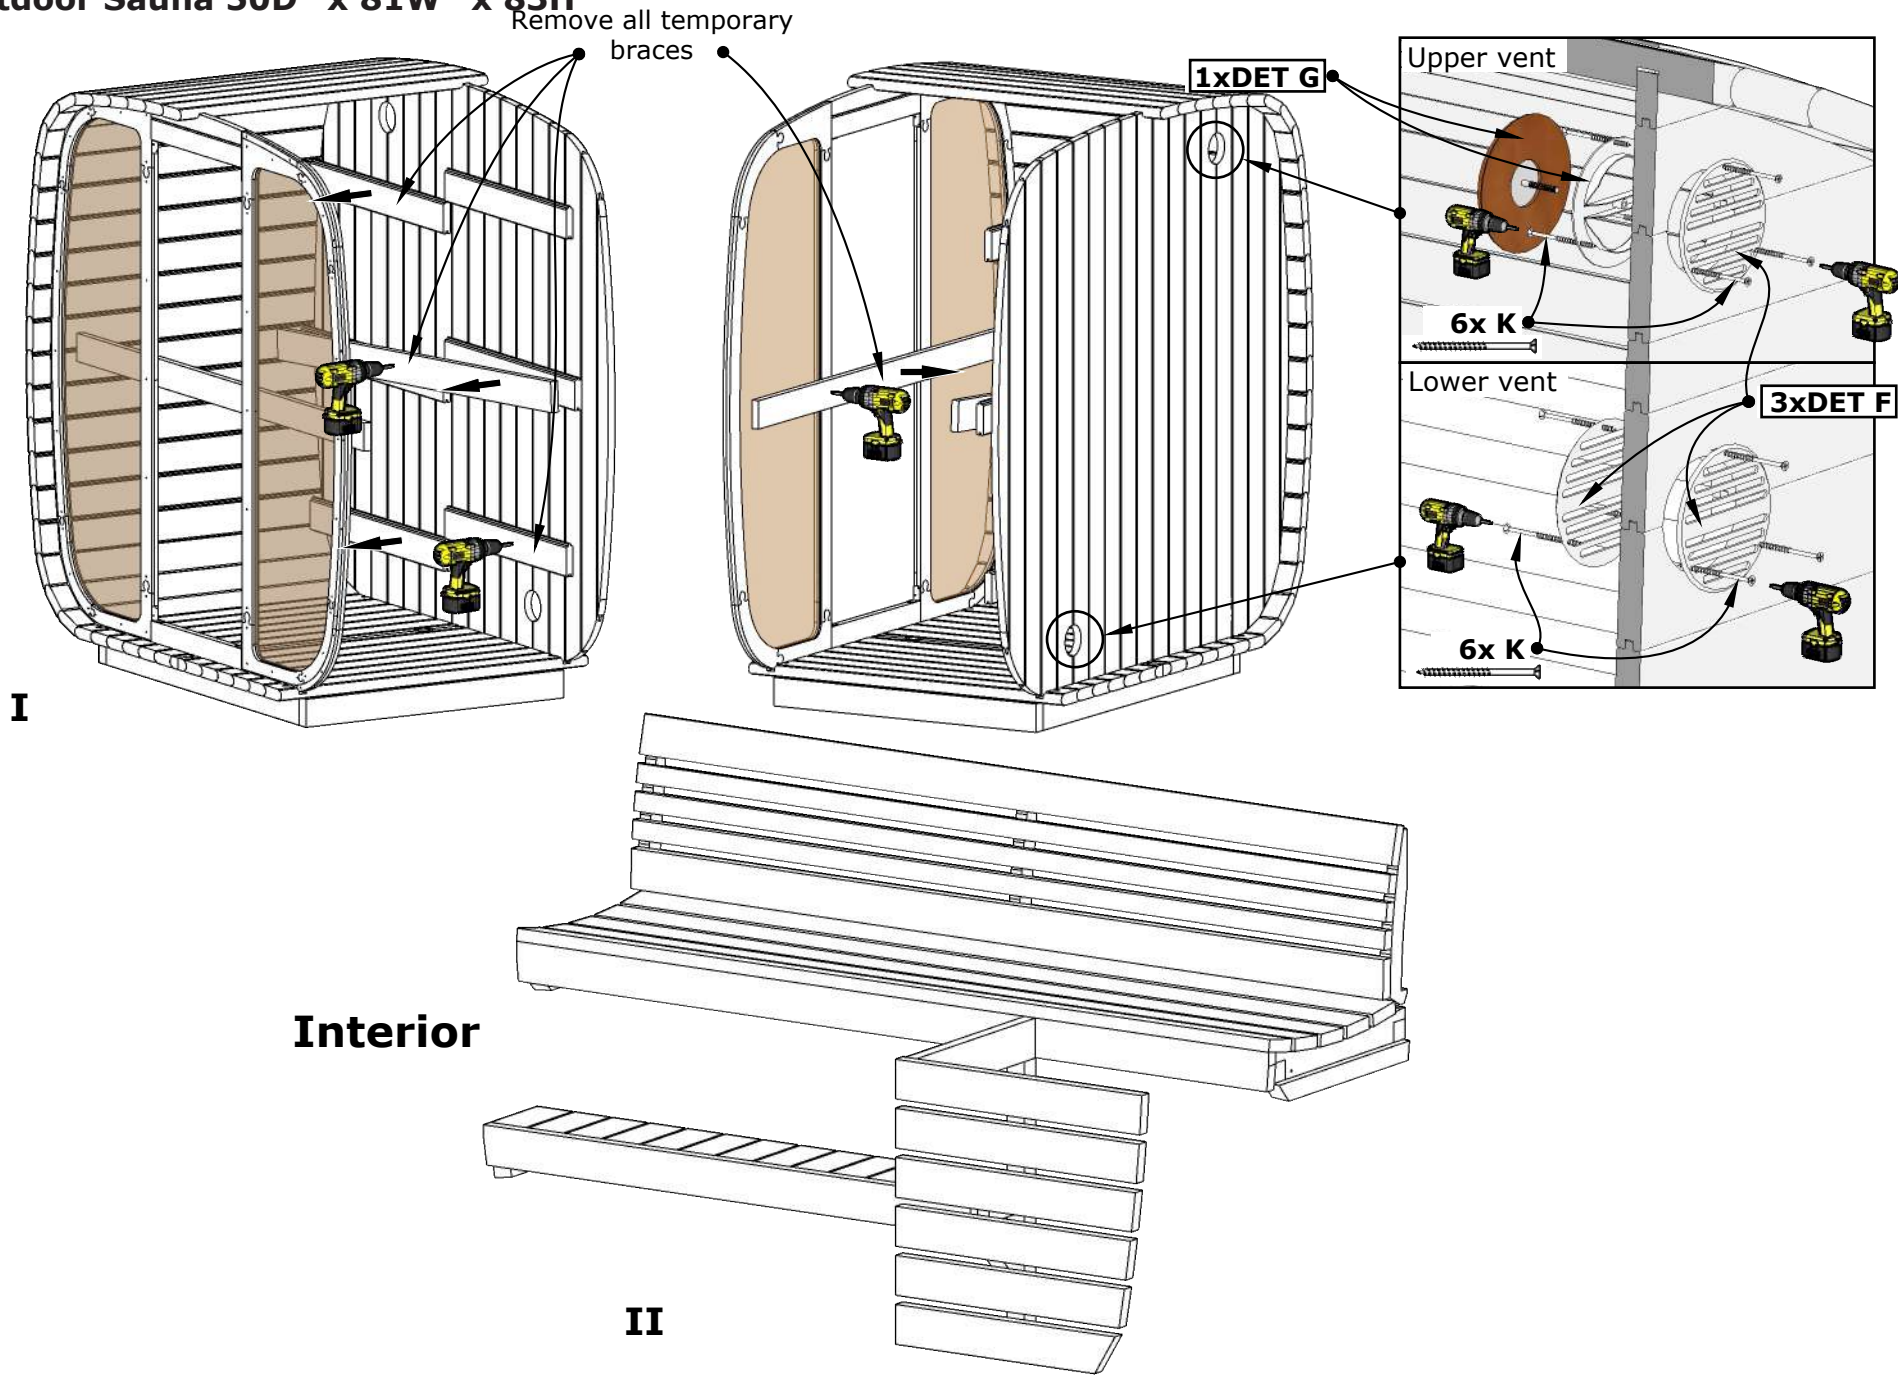


CL4G Outdoor Sauna 50D" x 81W" x 83H"


Use waterlevel for installation!

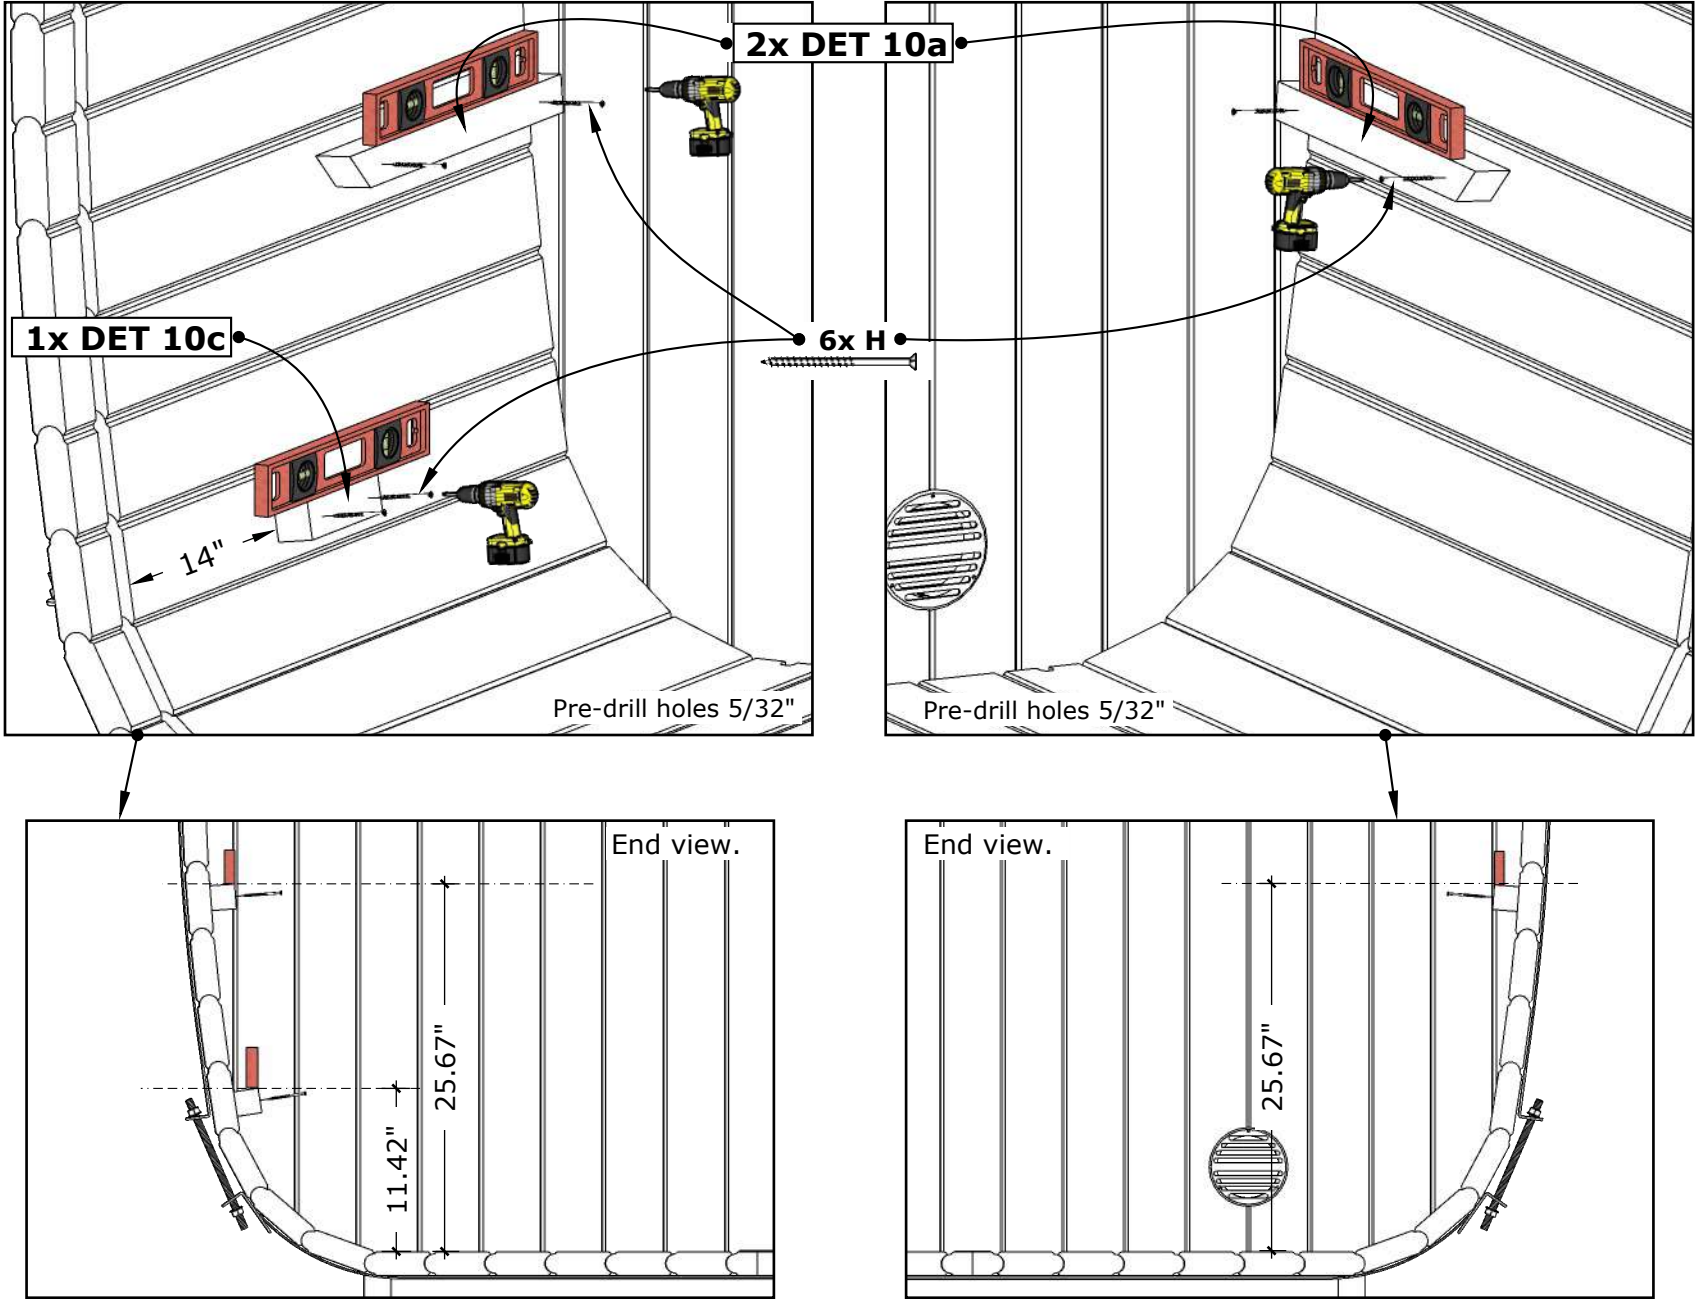

CL4G Outdoor Sauna 50D" x 81W" x 83H"

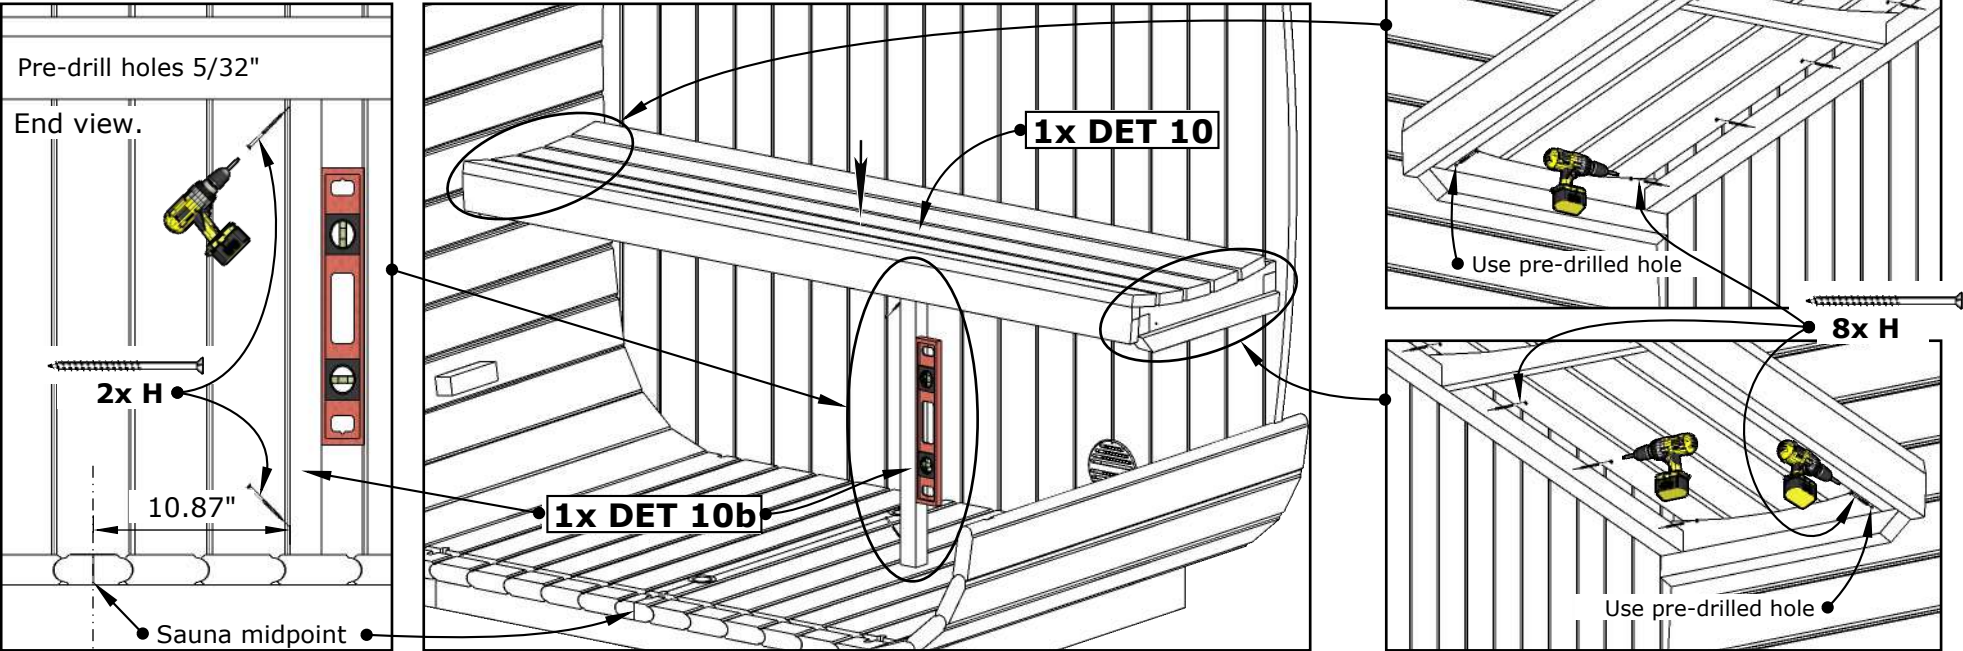

I

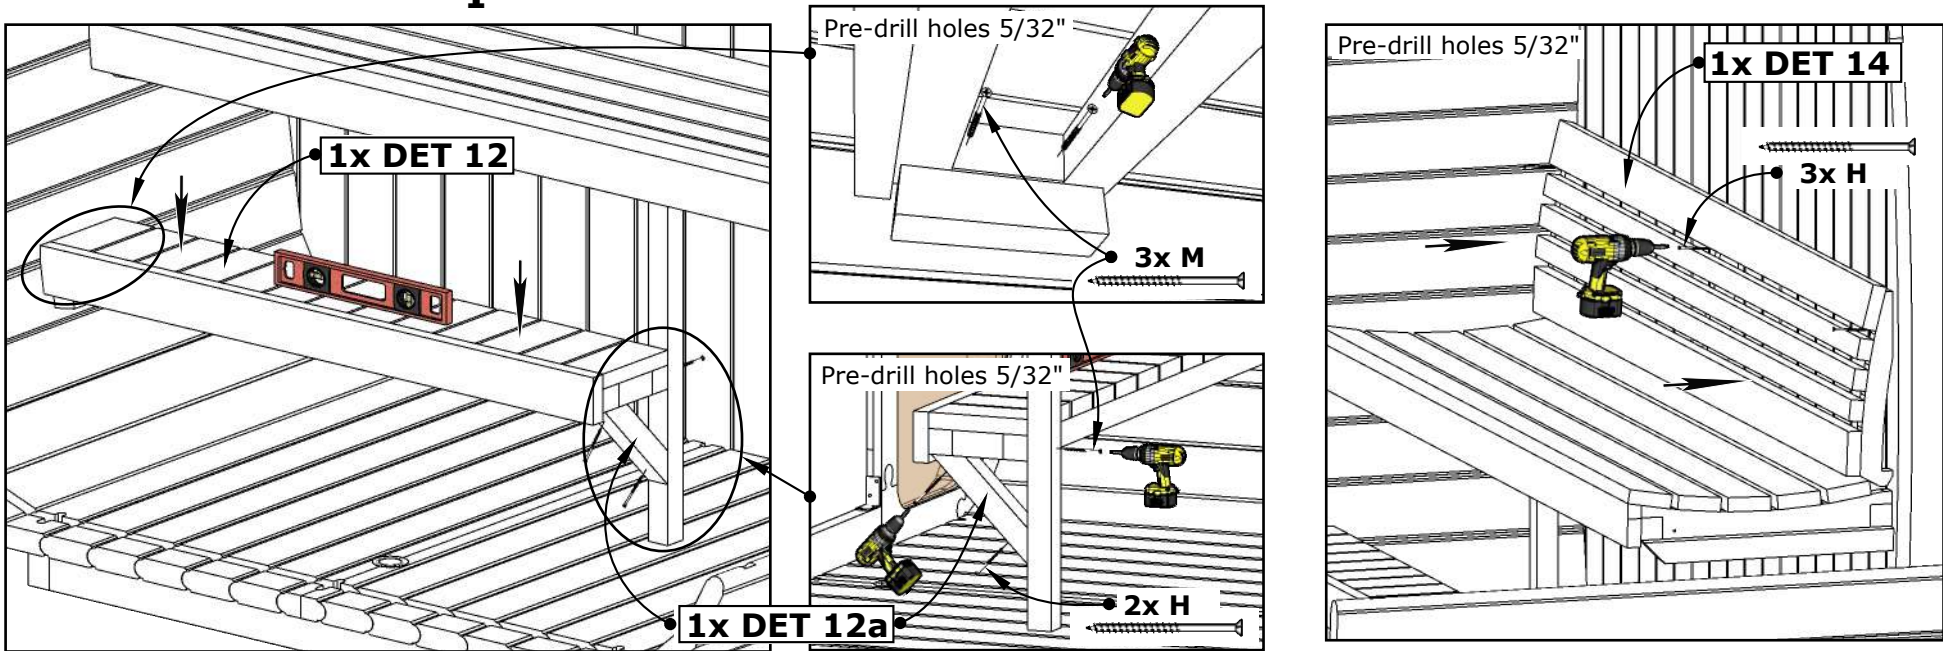

II



III

CL4G Outdoor Sauna 50D" x 81W" x 83H"




CL4G Outdoor Sauna 50D" x 81W" x 83H"

Please be careful!!! Do not hit the glass with the screw.

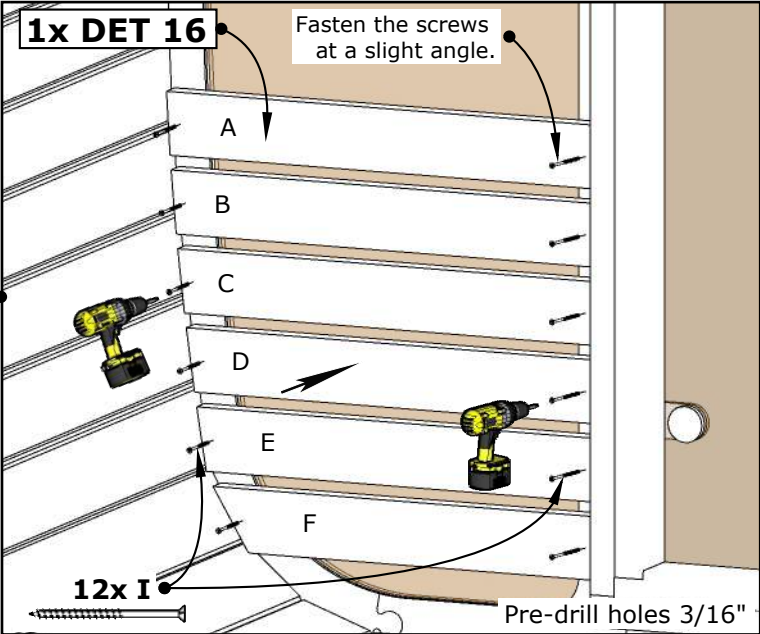
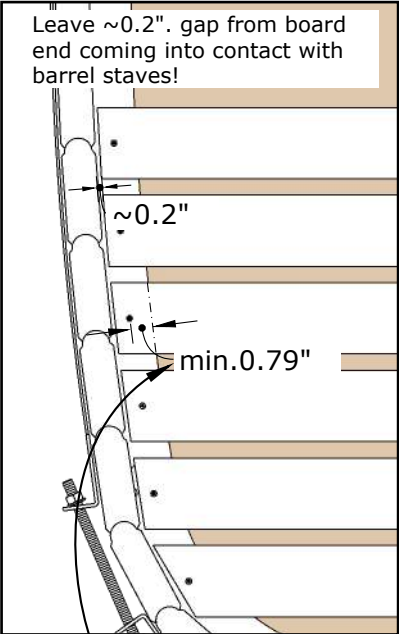


Please be careful!!! Do not hit the glass with the screw.


I

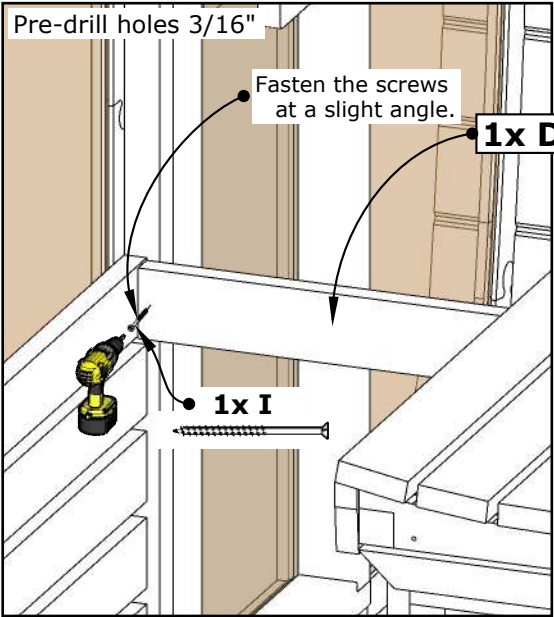

II

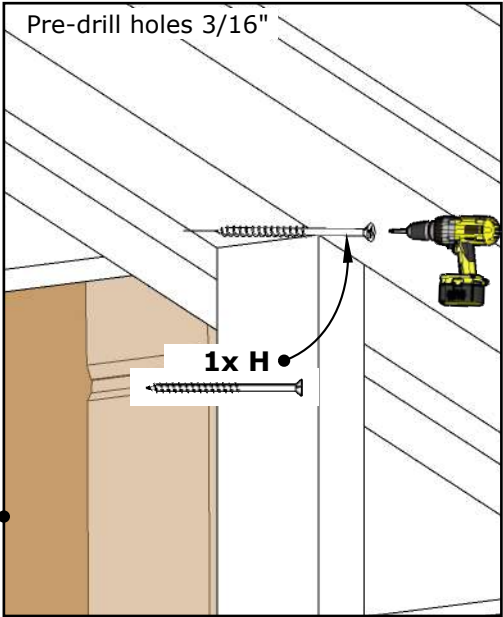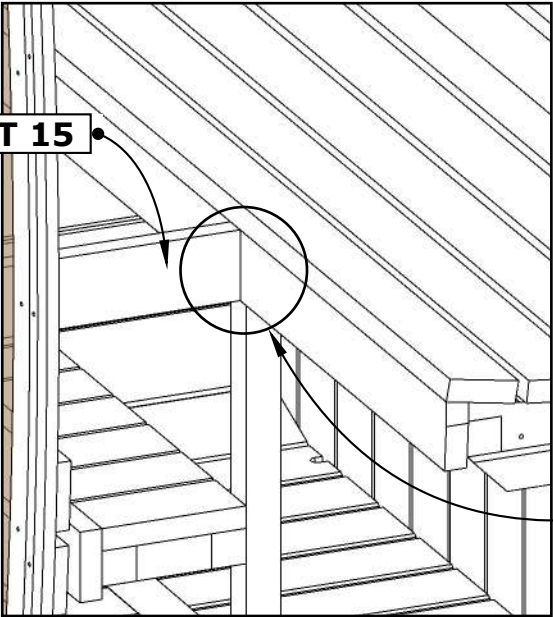



CL4G Outdoor Sauna 50D" x 81W" x 83H"

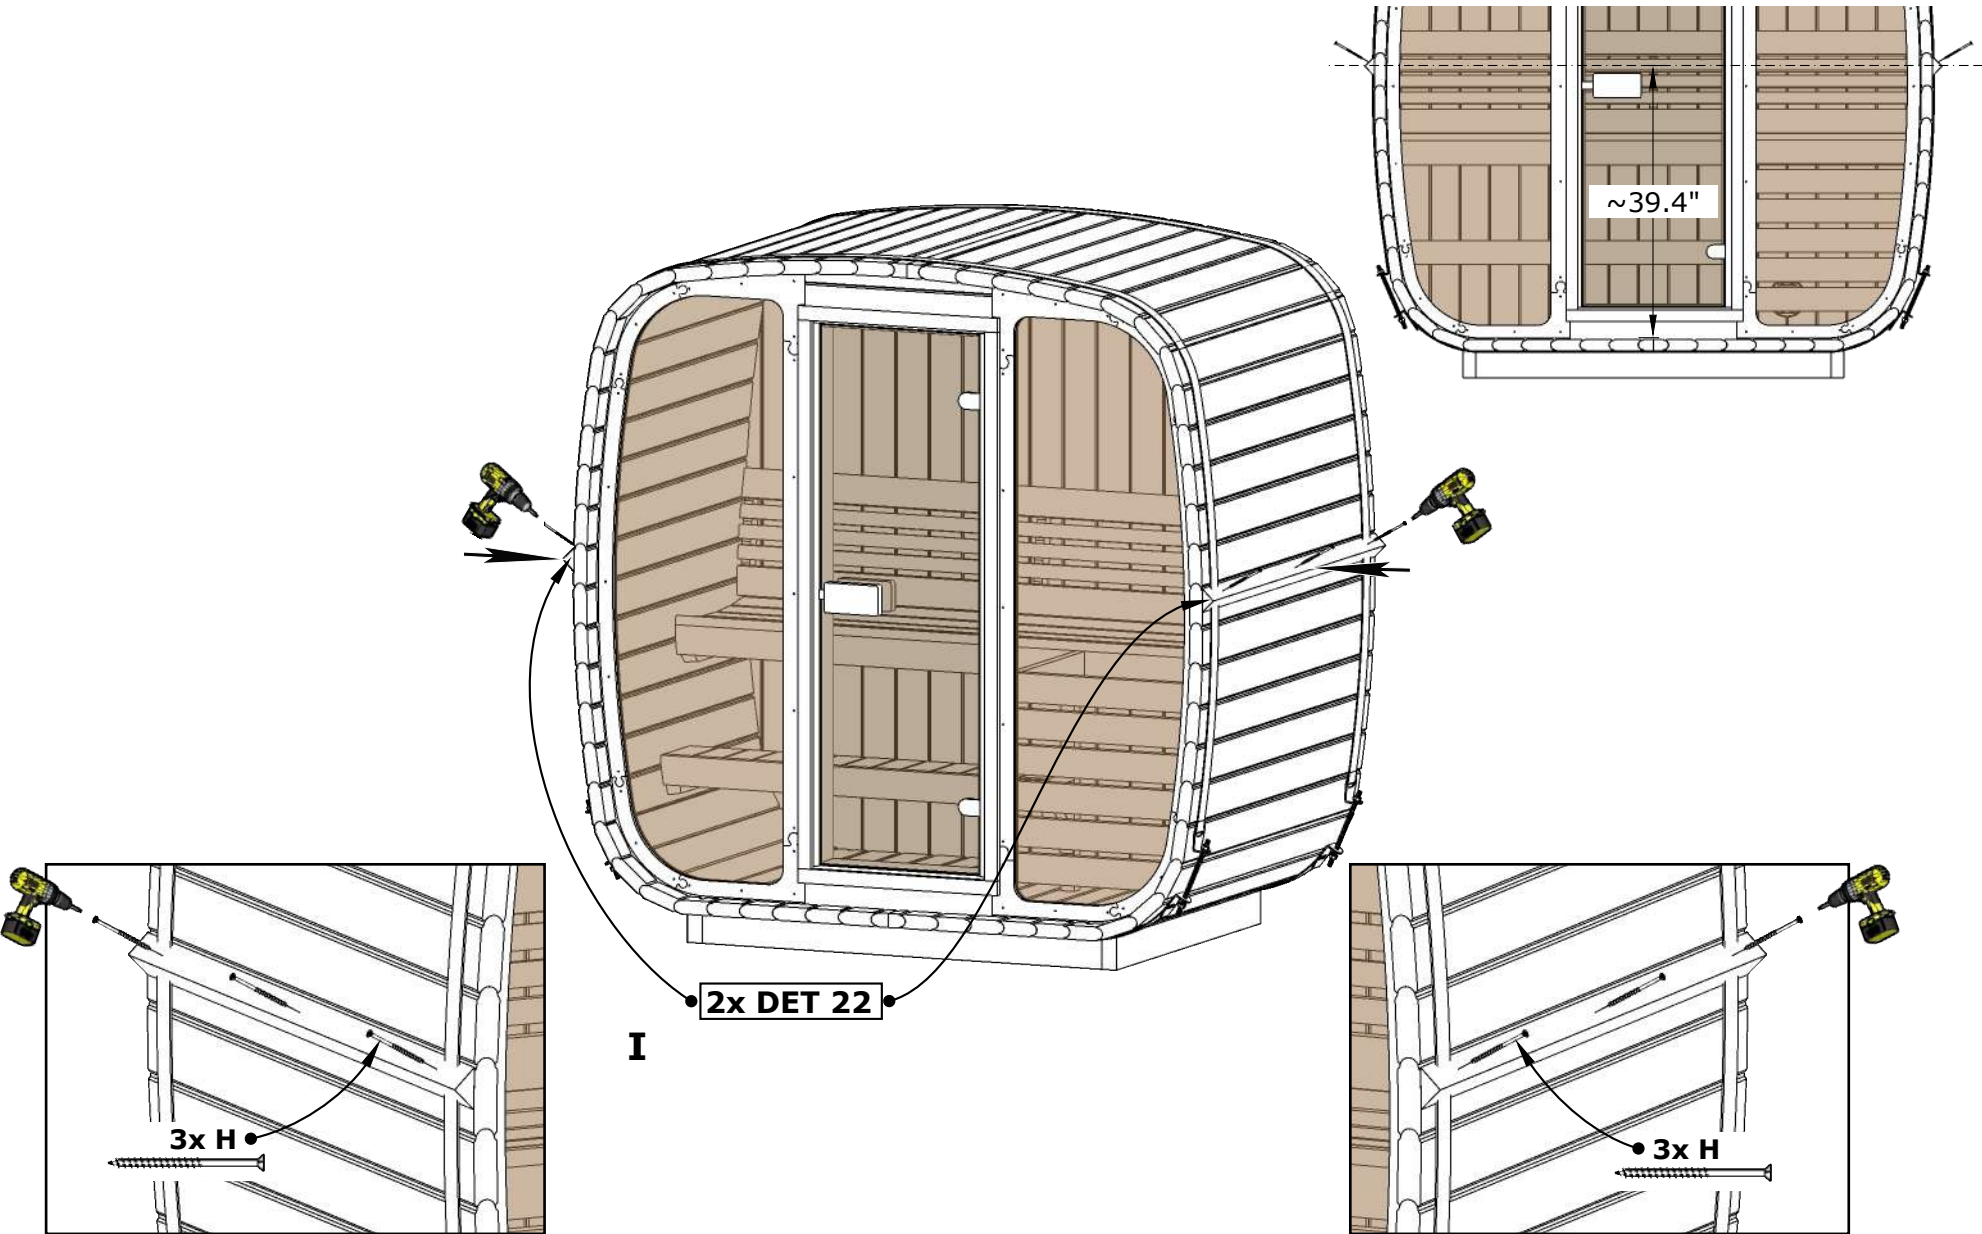

CL4G Outdoor Sauna 50D" x 81W" x 83H"


Underlay felt installation manual.

Attention! Refer to underlay installation manual provided in package.

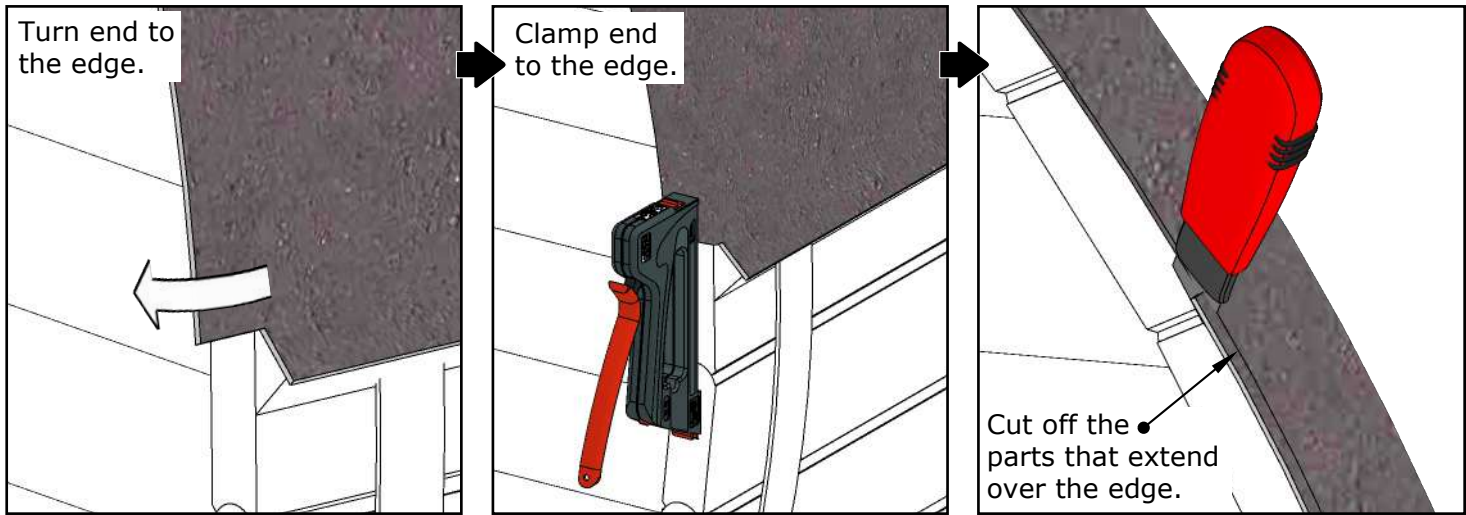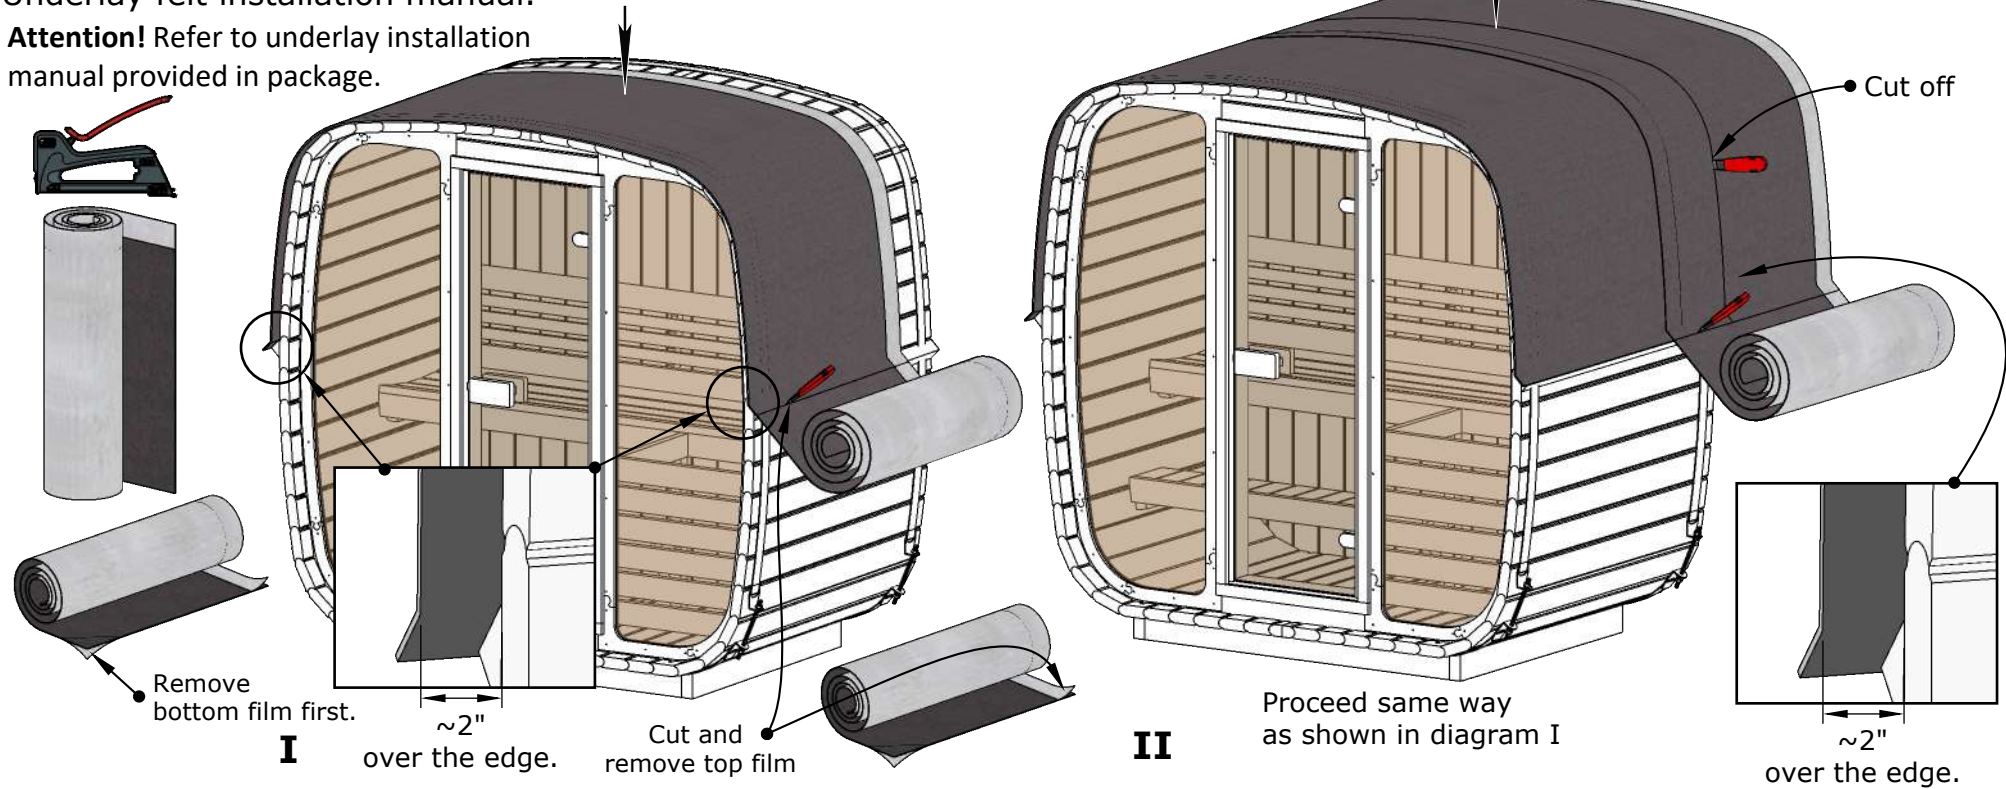


CL4G Outdoor Sauna 50D" x 81W" x 83H"


Attention! Refer to shingle installation manual provided in package.

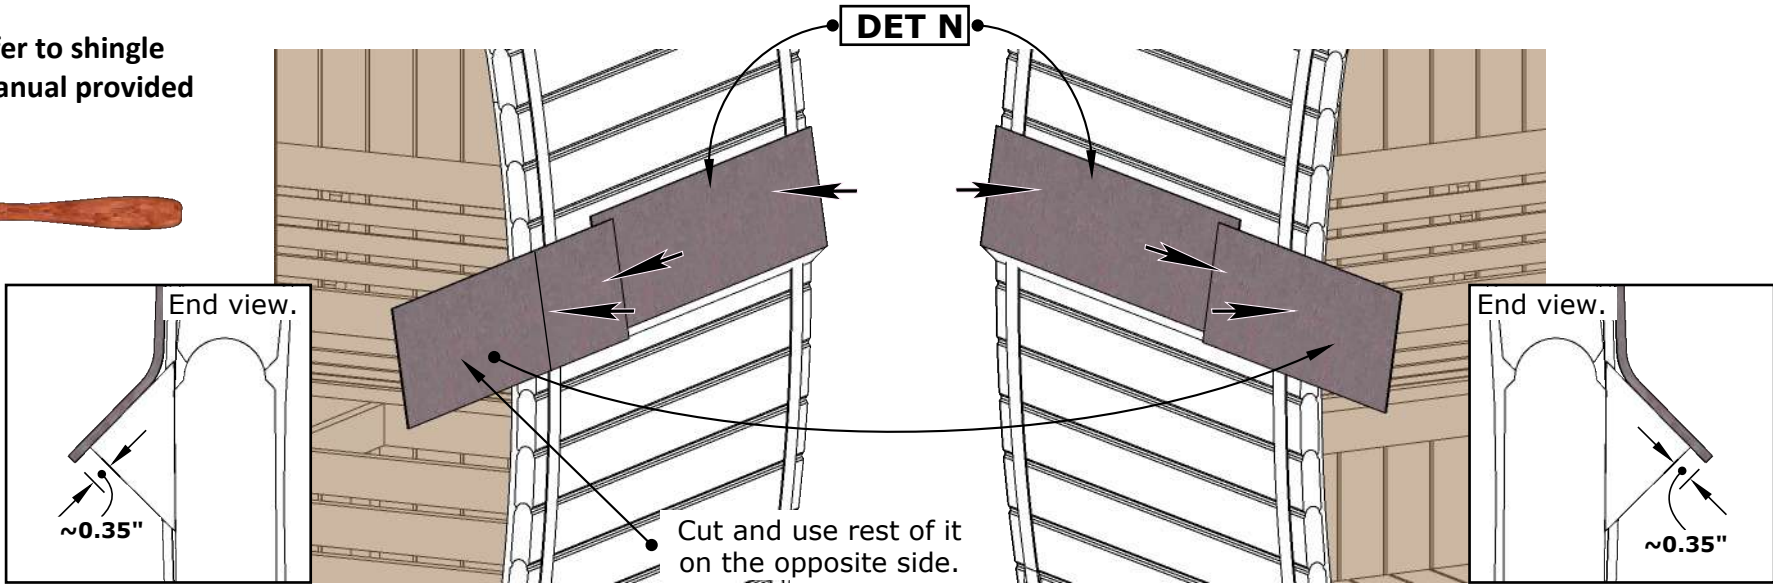

I

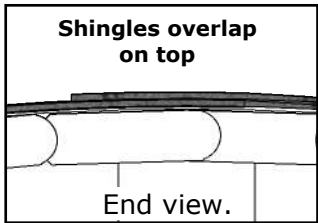


Attention! Refer to shingle installation manual provided in package.

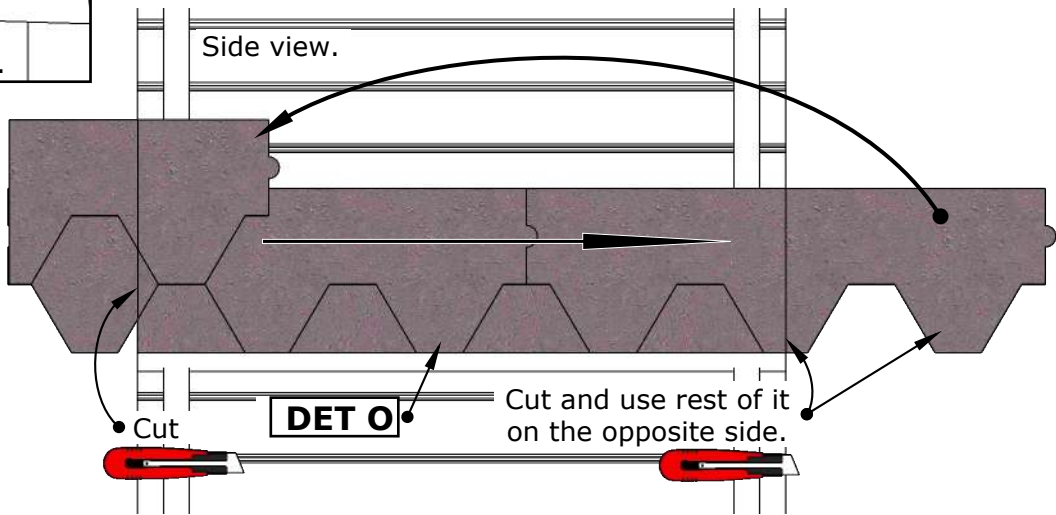

II

Attention! Refer to shingle installation manual provided in package.

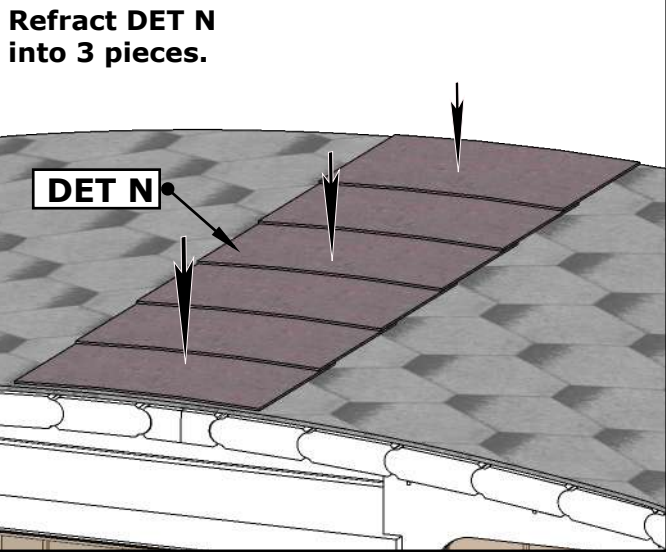

III

CL4G Outdoor Sauna 50D" x 81W" x 83H"

