


Ergo-Series E7G Barrel Sauna



Note: Please read manual before construction

Front & Back Walls

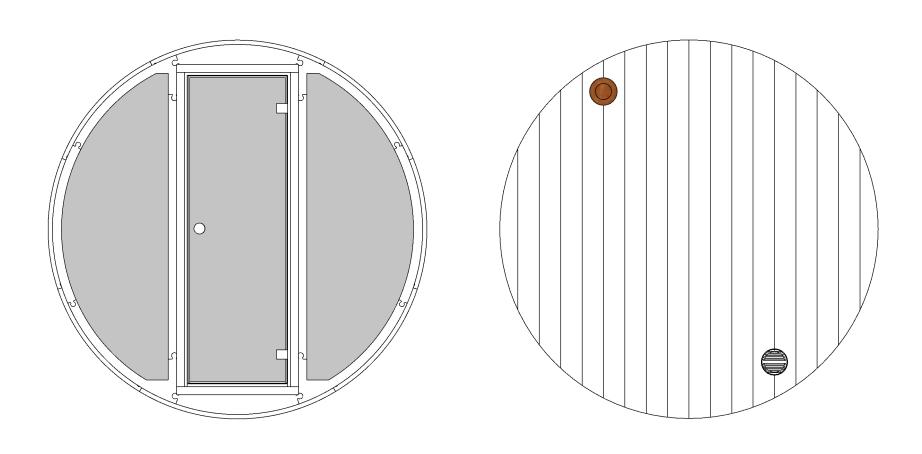

E7G Barrel Sauna 71D" x 81H" **Details list.** 6c 4 6d 4 6a **९** 6b • 63" + 87 16" + 733 16" (x2) (x1) (x1) (x2) (x2)(x1) (x1) (x2) (x1)10a 15a (x2) 258/22 x 38/32 x 21/8 L=~256" **₽ B** .5d (x2)x2 drain set (x2)(x2) (x2)(x2) (x2) • B1 (x1) (x38/50/62) 20d 20b (x5/7/8)(x2)(x2)(x2) Bit PH2

(x2)

~2lbs. (x15) (x90) (x45) (x150) (x50)

(x16)

(x1)

(x3)


20c €

(x2)


20a 🖢


(x2)

Tools needed

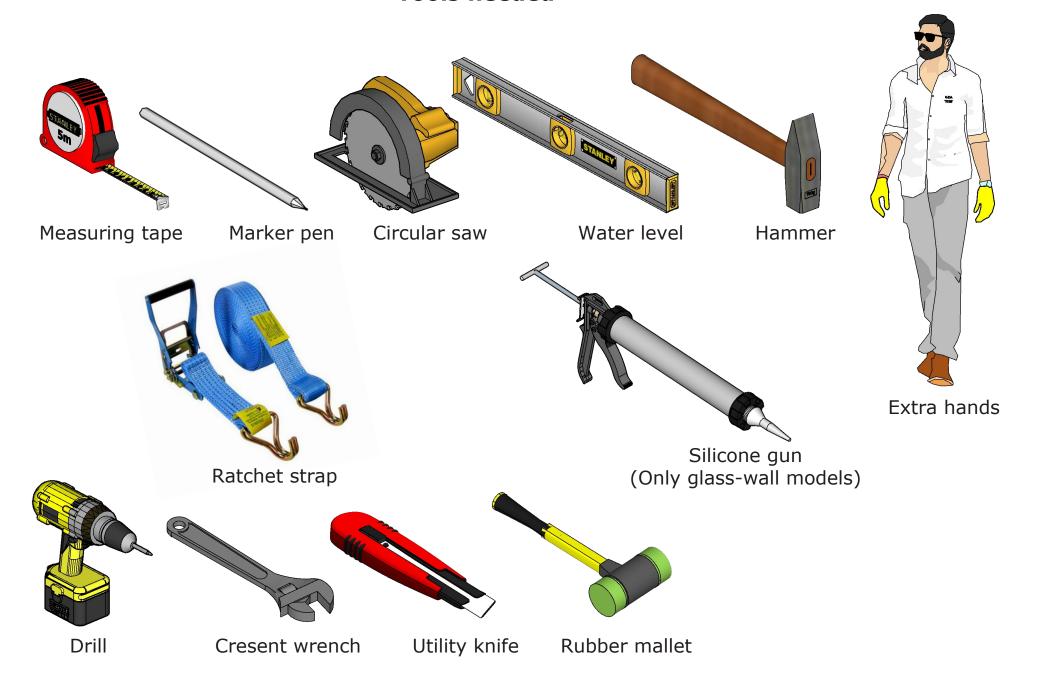


Front glass wall installation

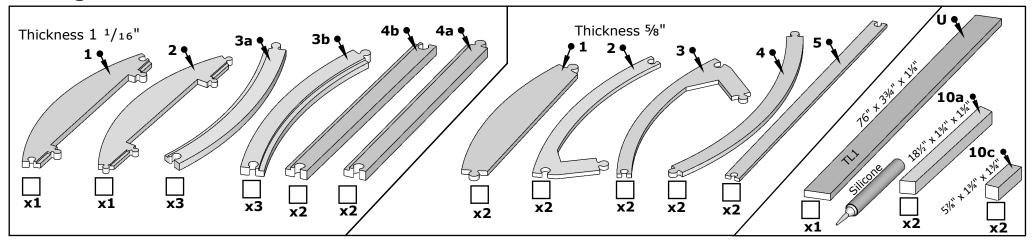


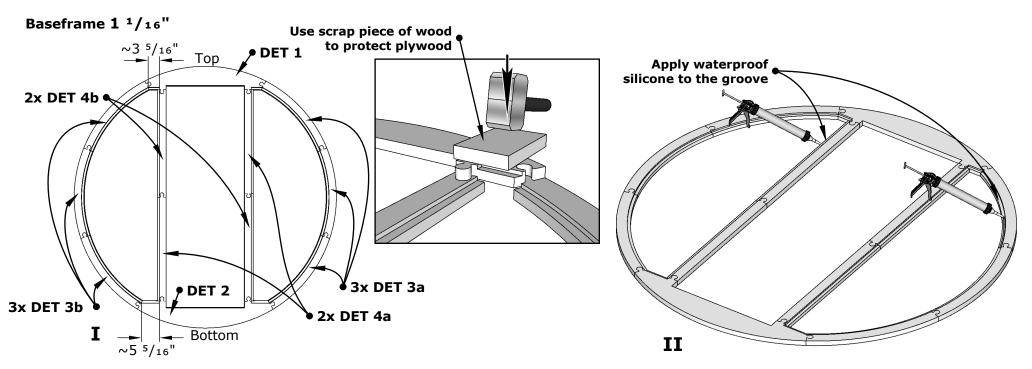


Front glass wall installation

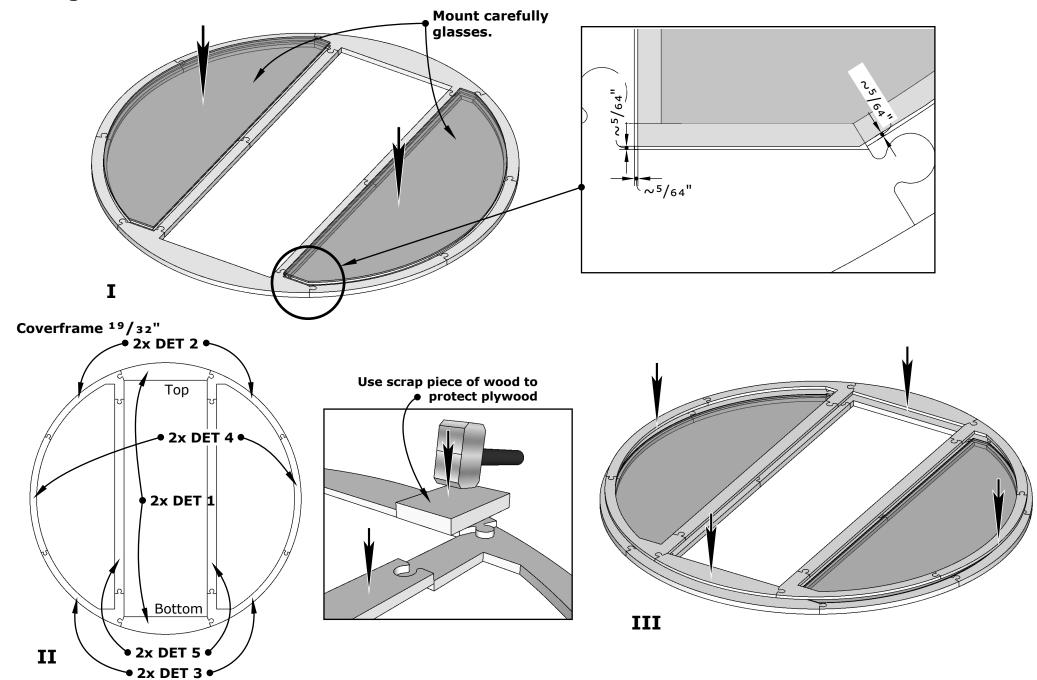



Front glass wall installation

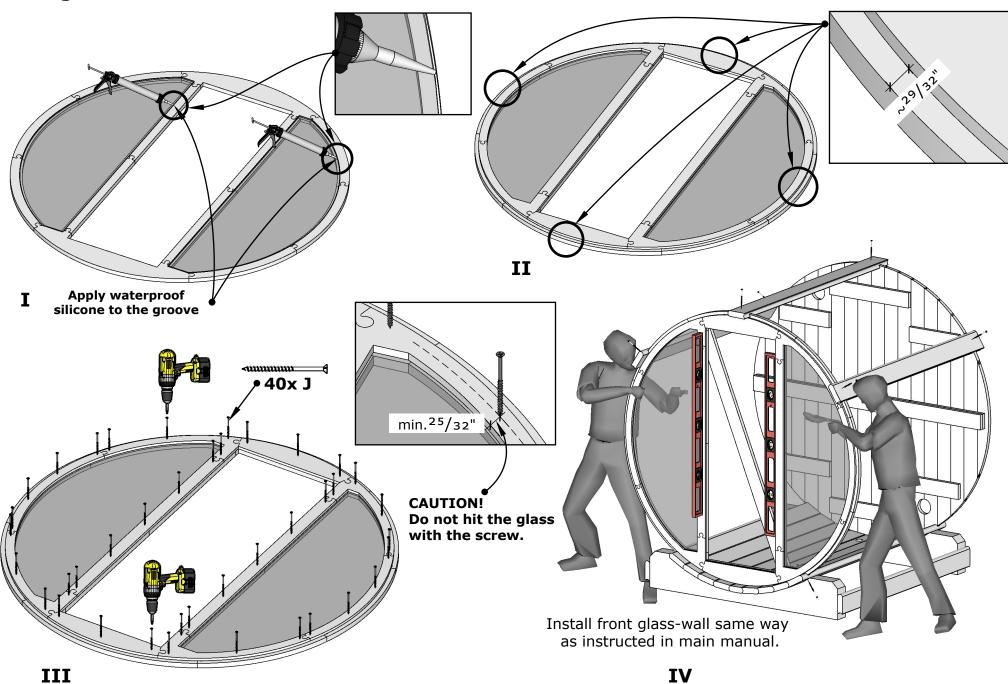


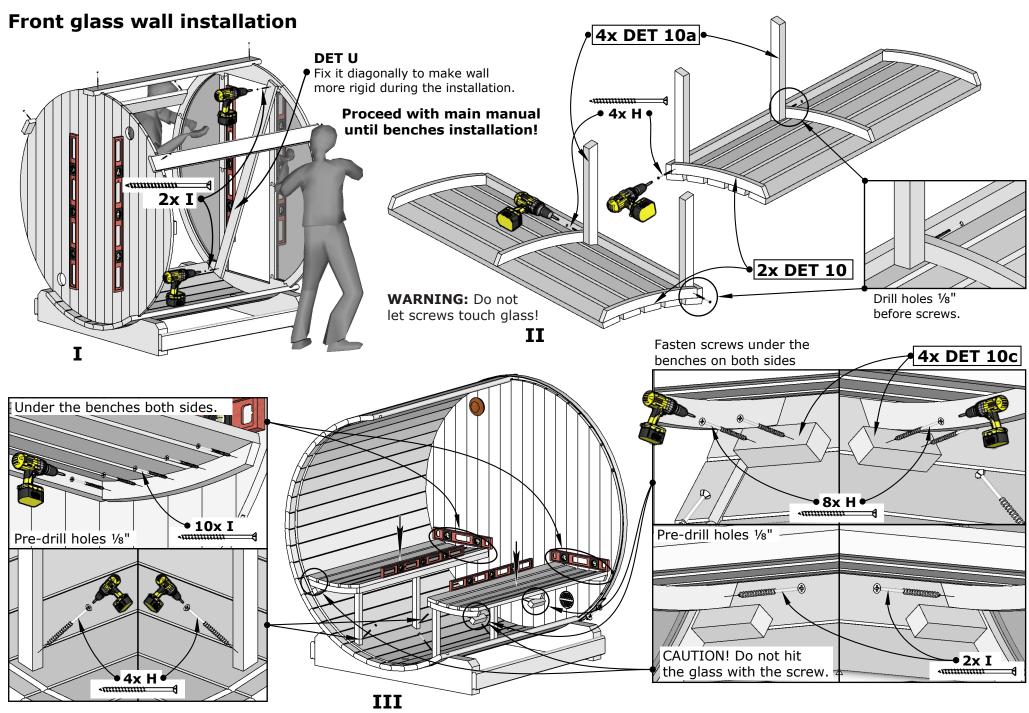



Wooden back wall assembly

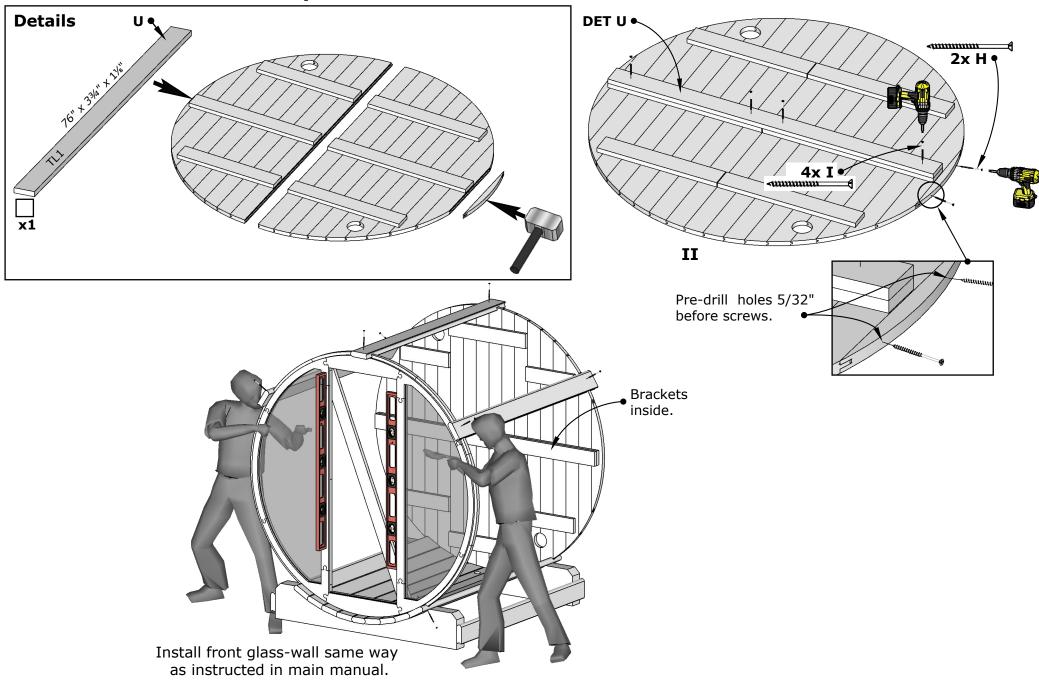


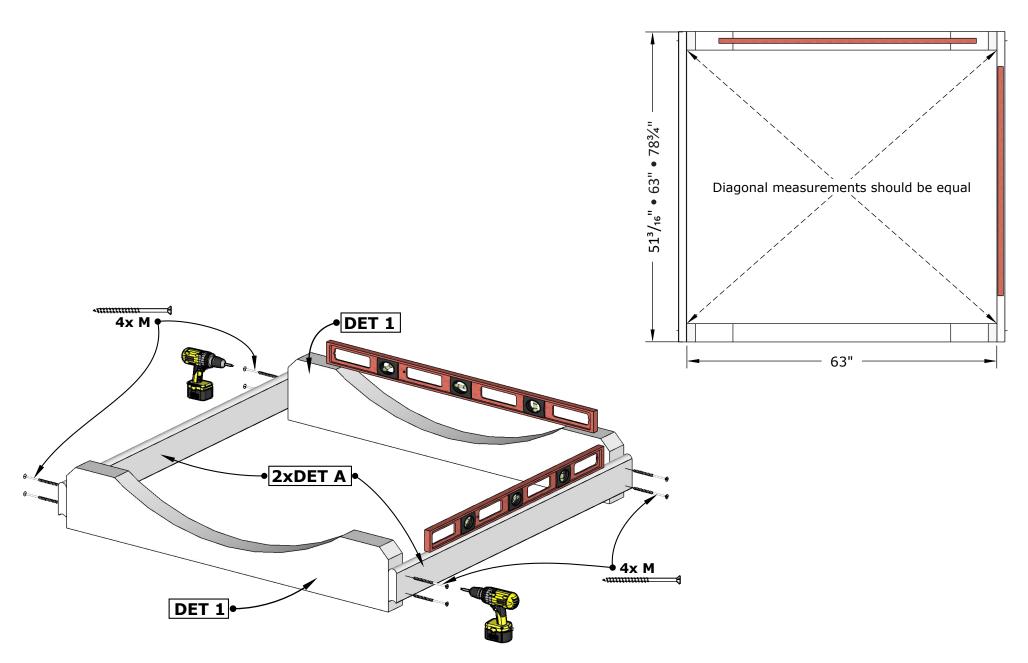


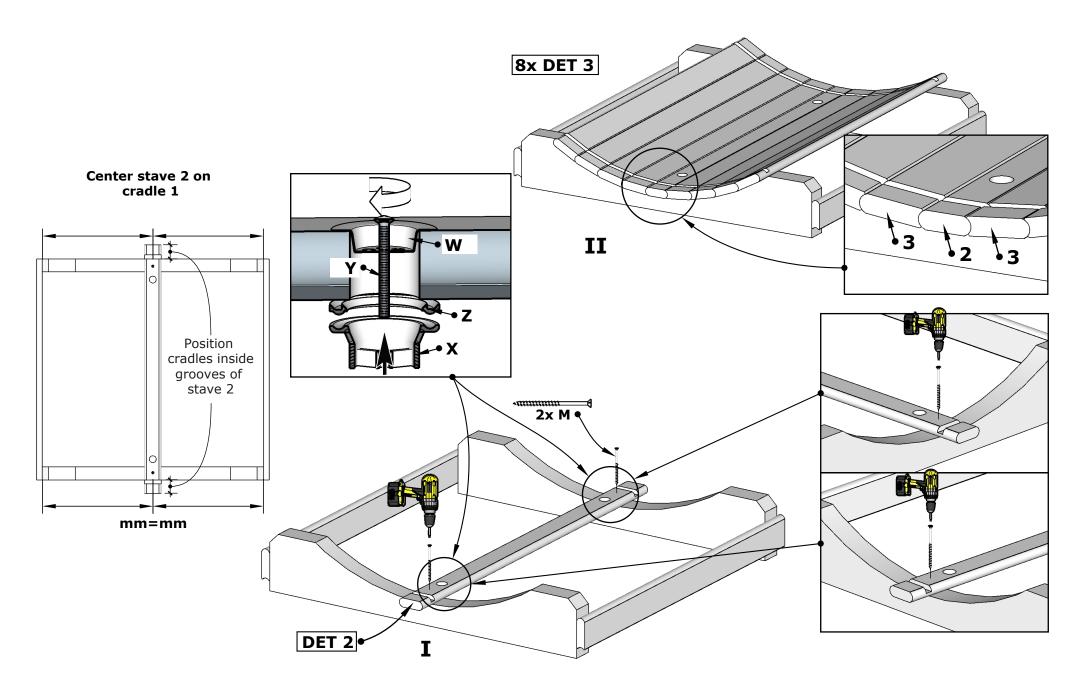

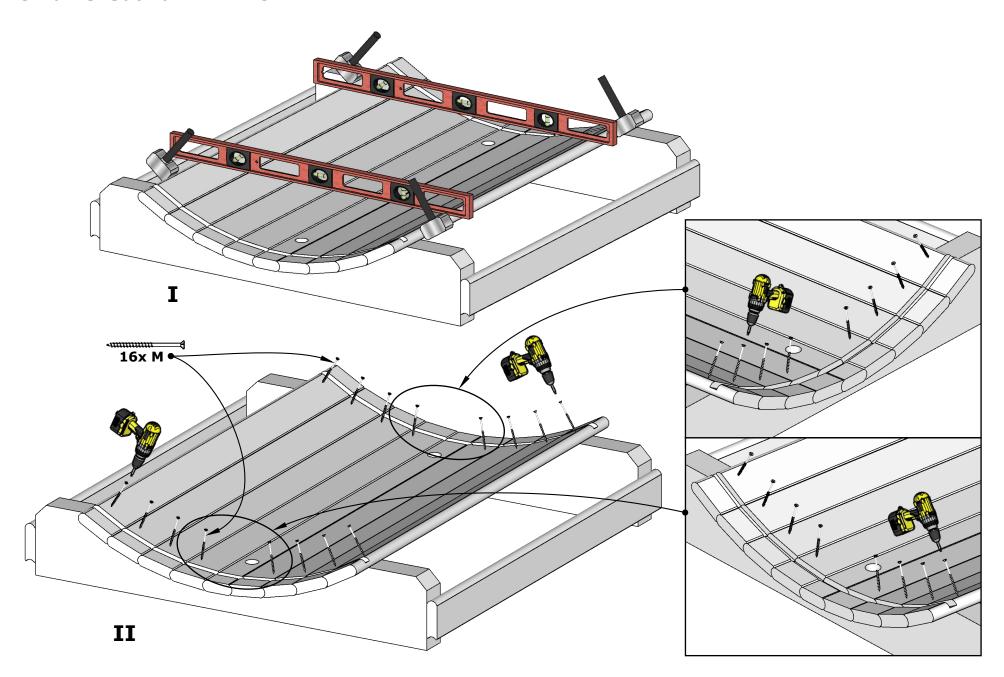

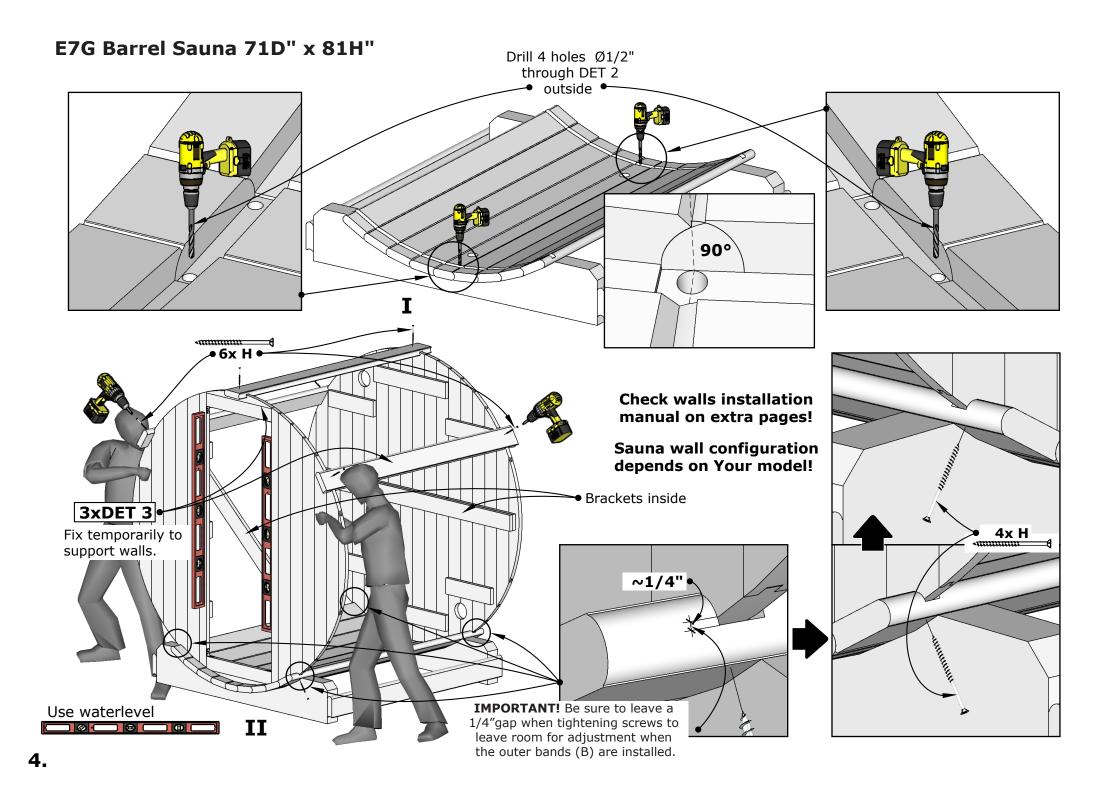


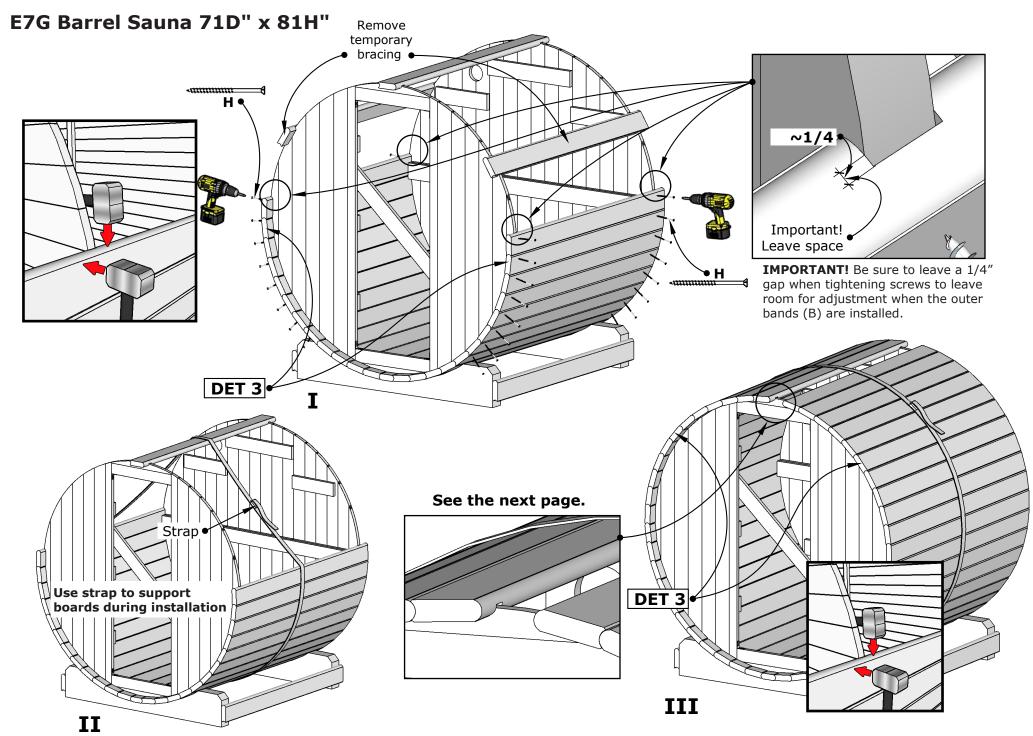


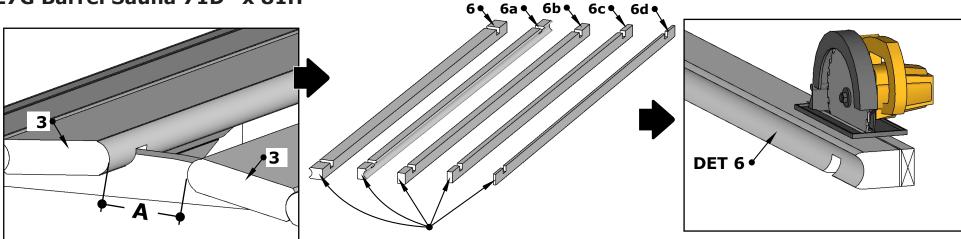


Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately 1/4" wider than the gap.


If needed, trim the flat edge of the board to create the desired width.

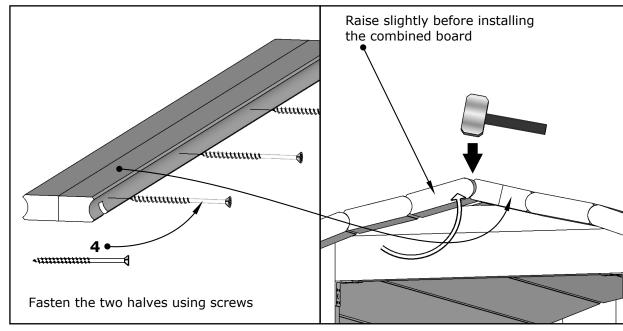


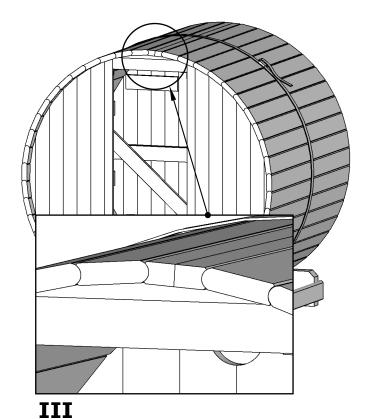



Ι

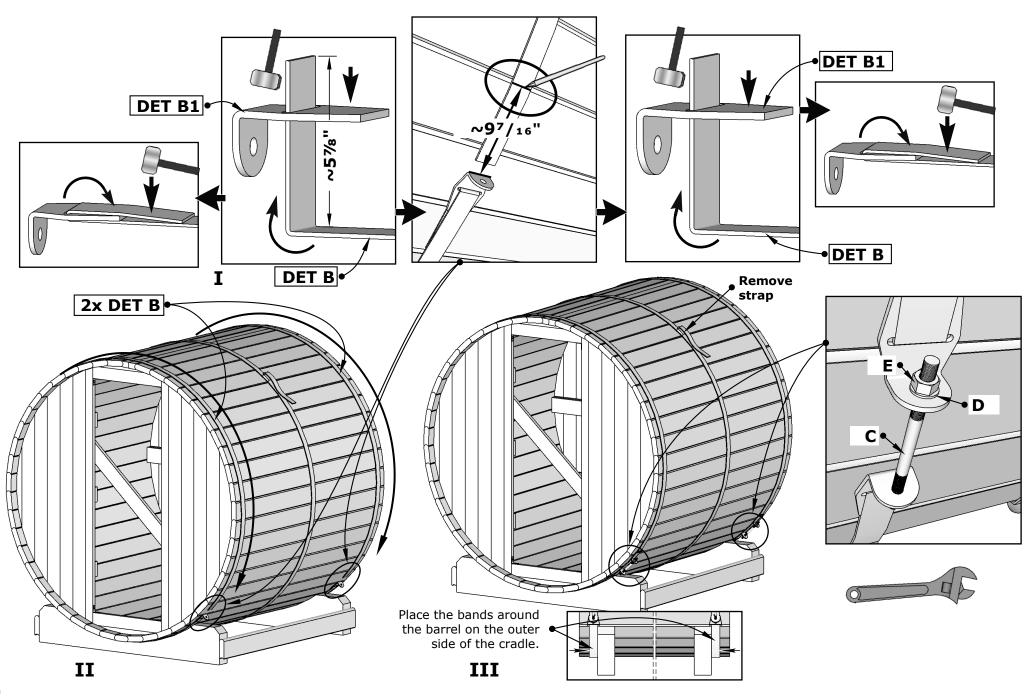

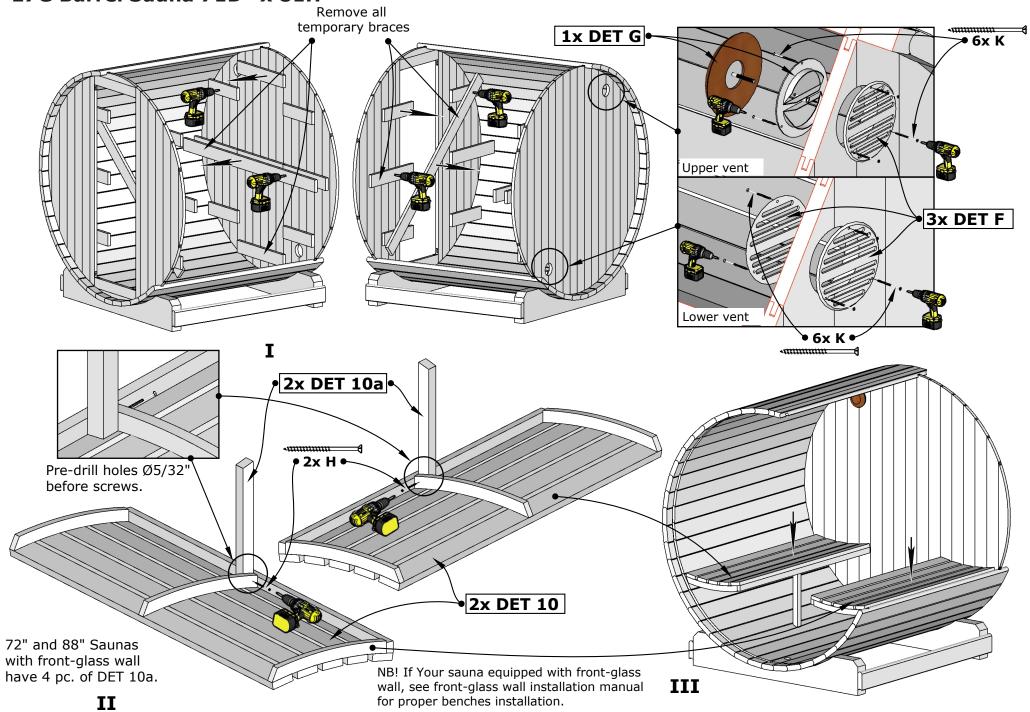

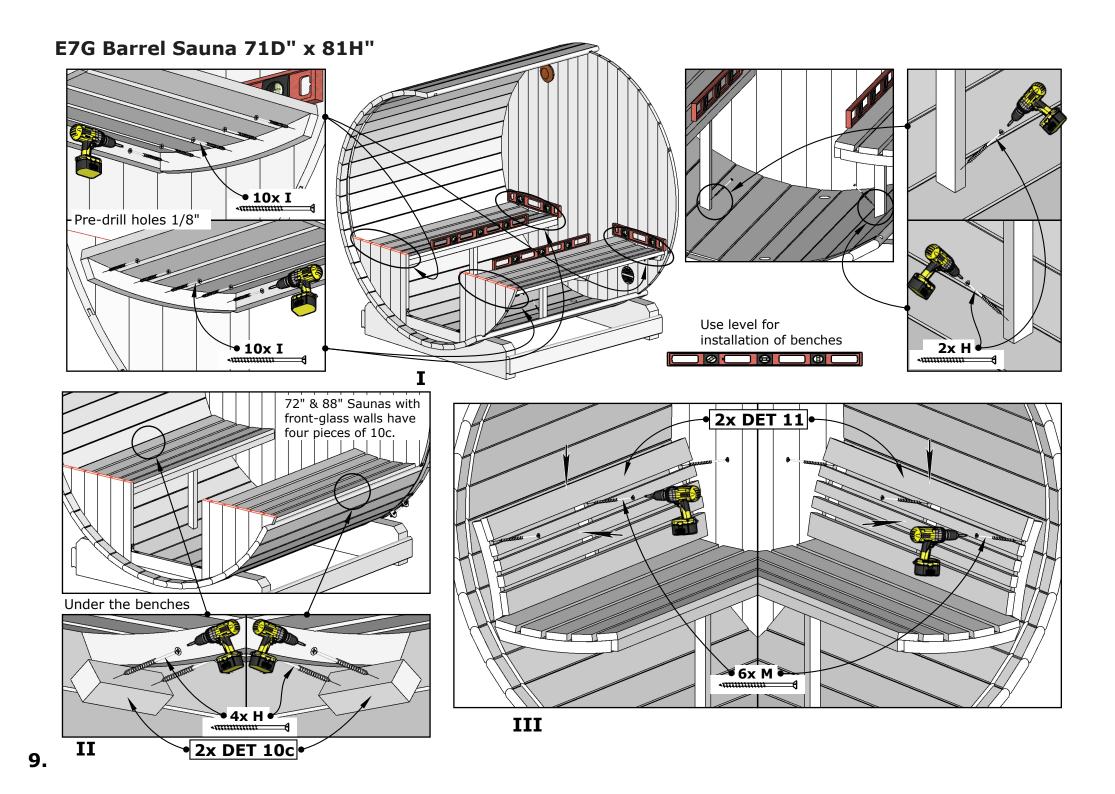

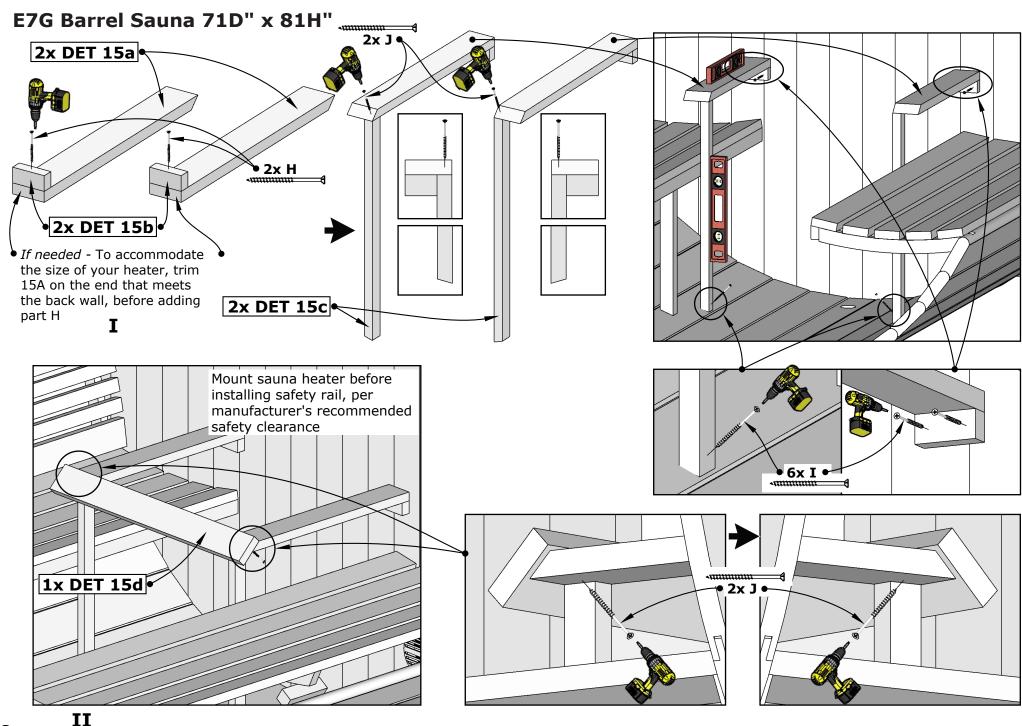

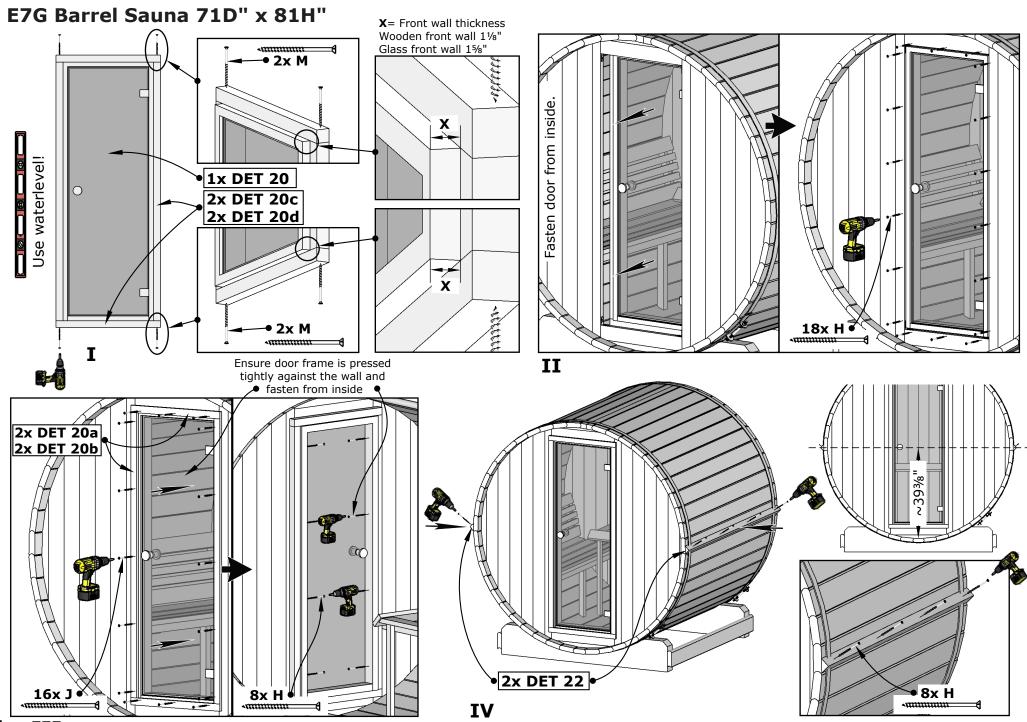

11. III

