






Ergo-Series EE6G Barrel Sauna
Full Glass Front 63D" x 90H"

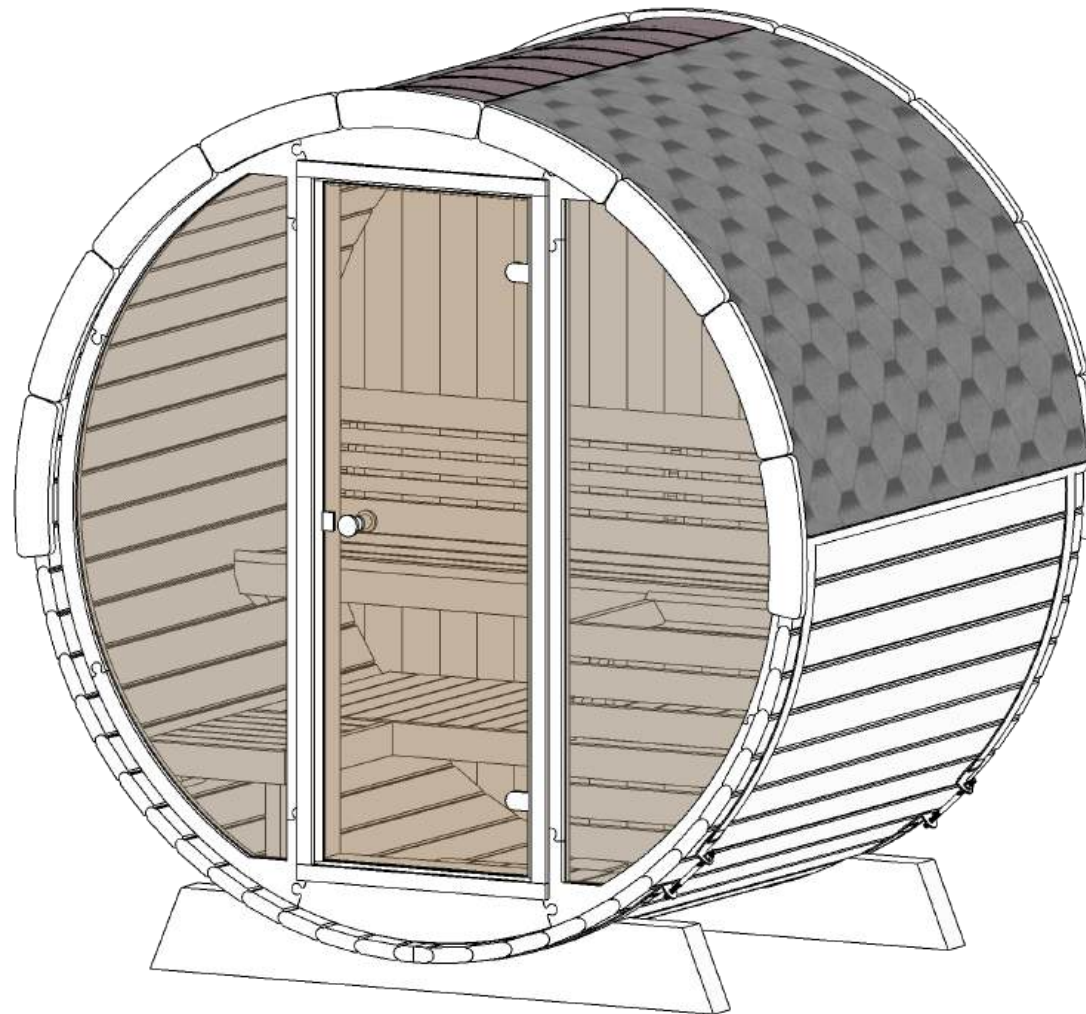

Note: Please read manual before construction


Rev: 1.0_9/2023

Front & Back Walls

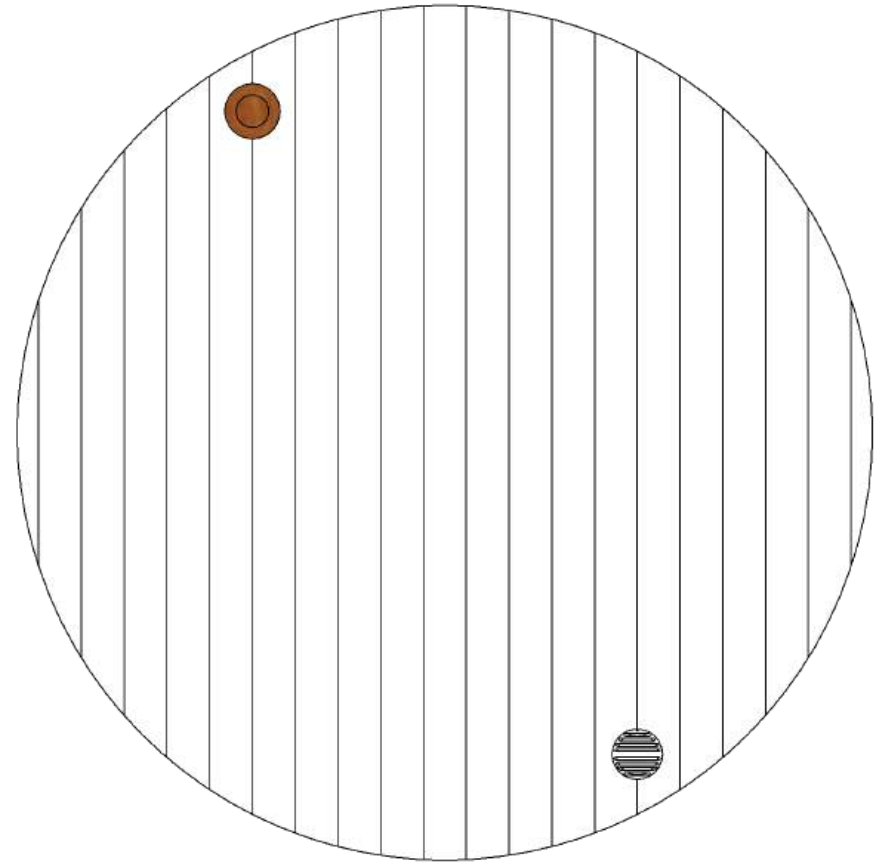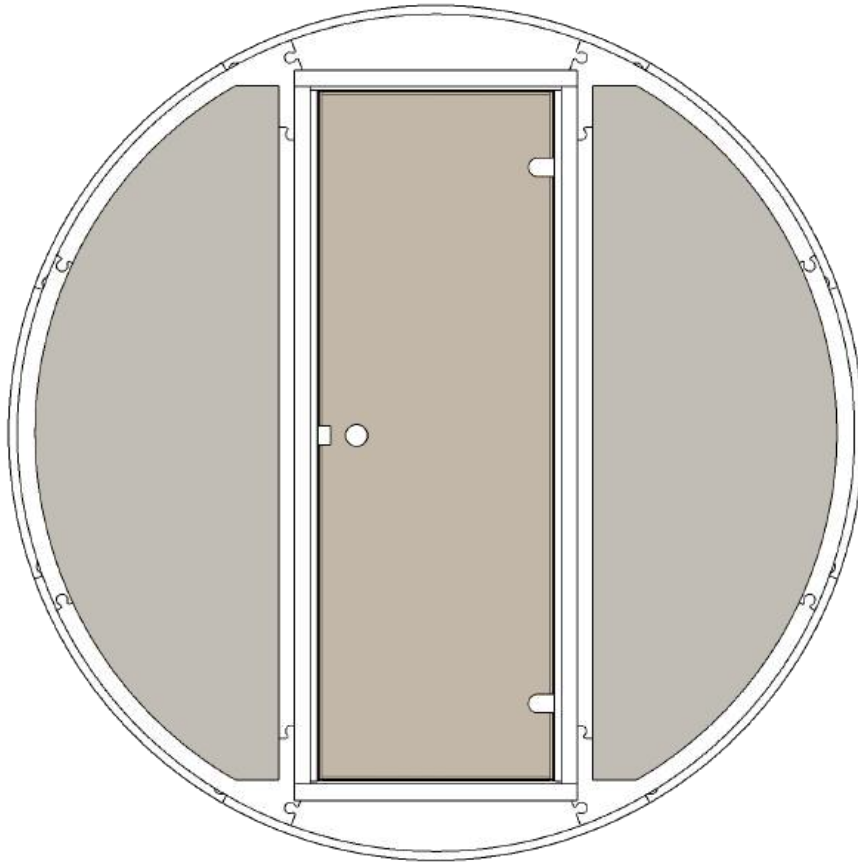


EE6G Barrel Sauna 63D" x 90H"

Details list 1.

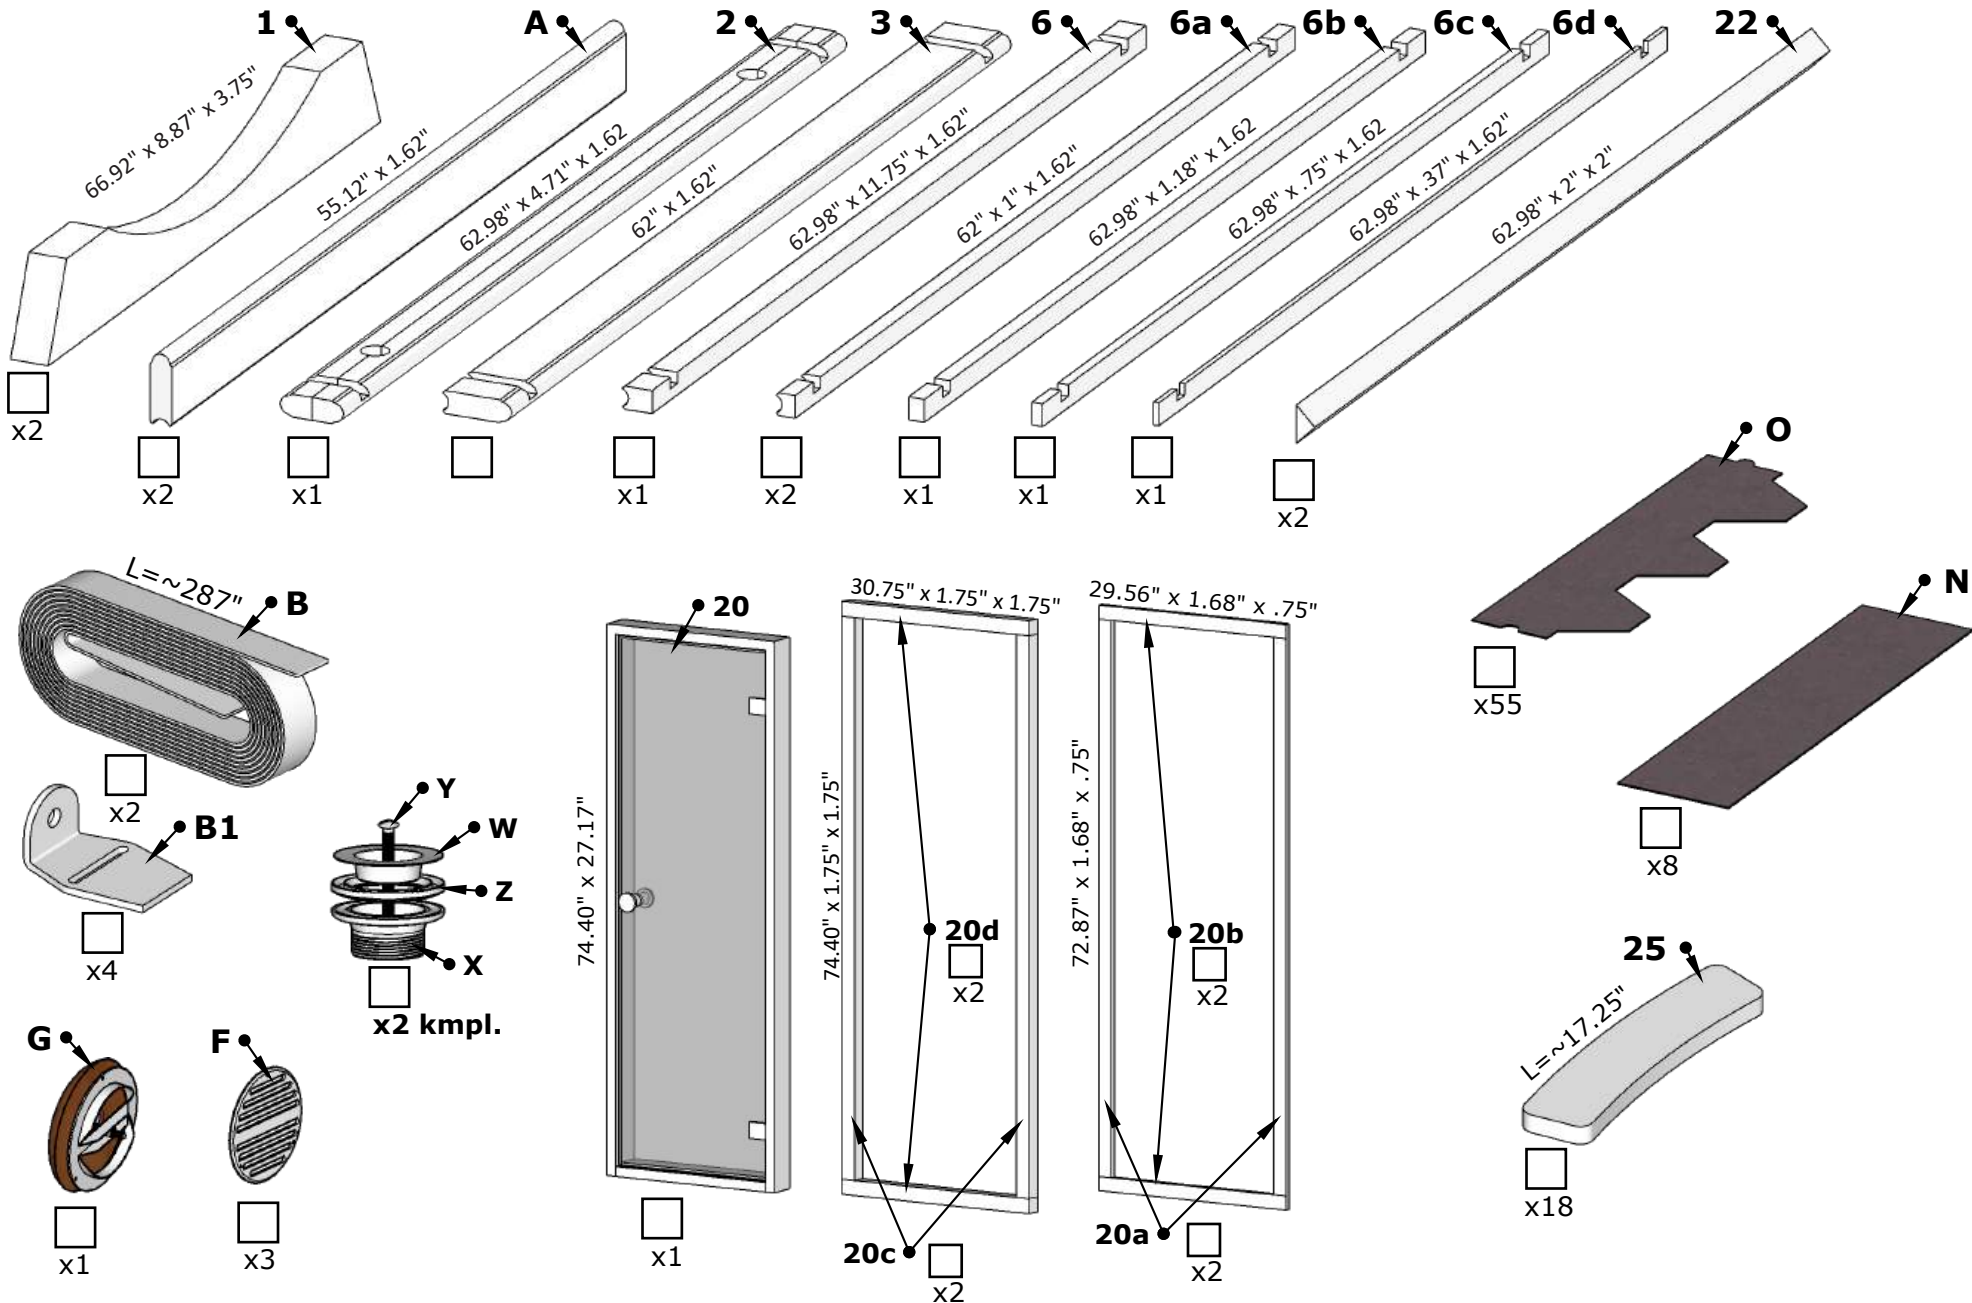

EE6G Barrel Sauna 63D" x 90H"


Details list 2.

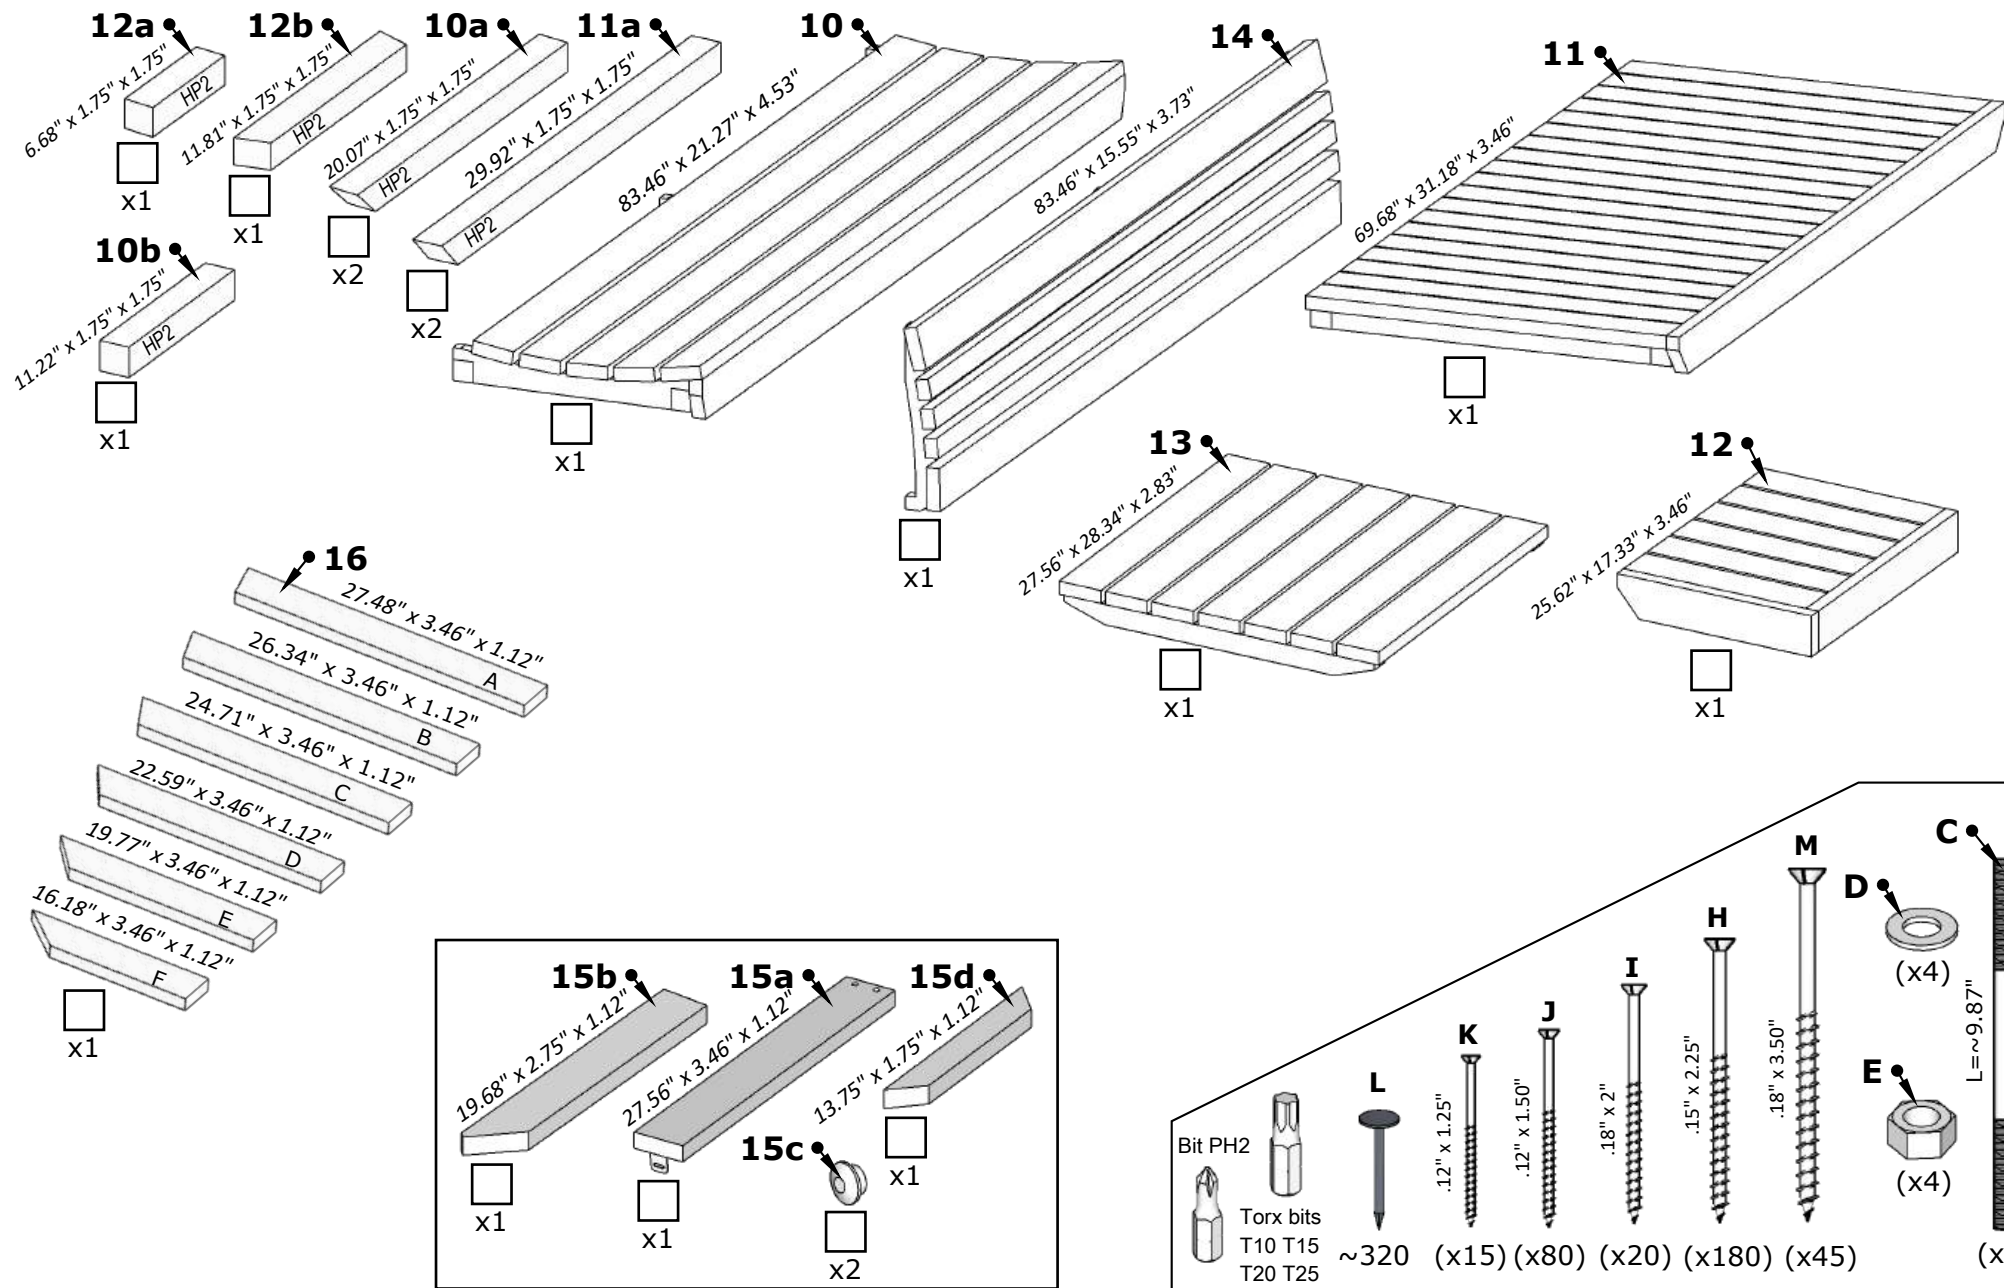


Tools needed




Measuring tape

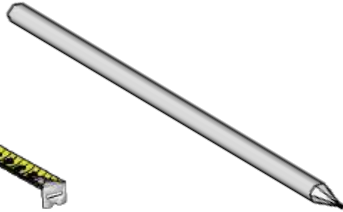


Marker pen

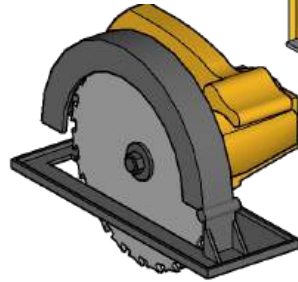

Circular saw

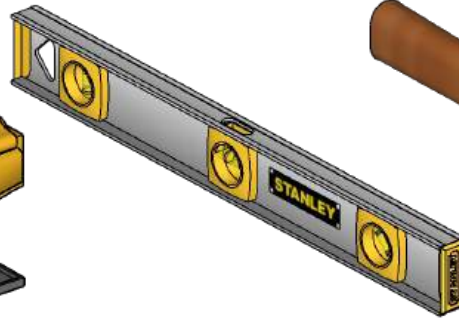

Water level

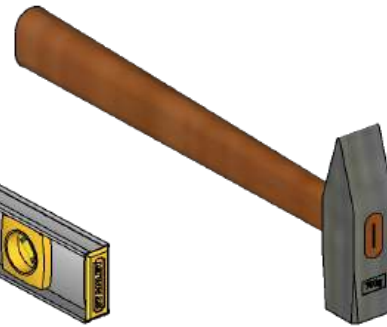

Hammer




Extra hands




Ratchet strap



Silicone gun
(Only glass-wall models)

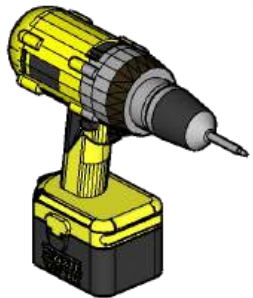


Drill

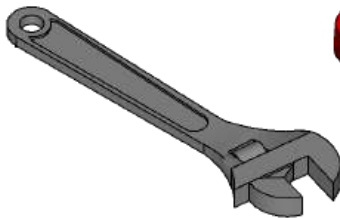

Crescent wrench




Utility knife

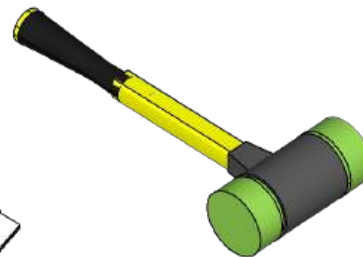


Rubber mallet


Front glass wall installation

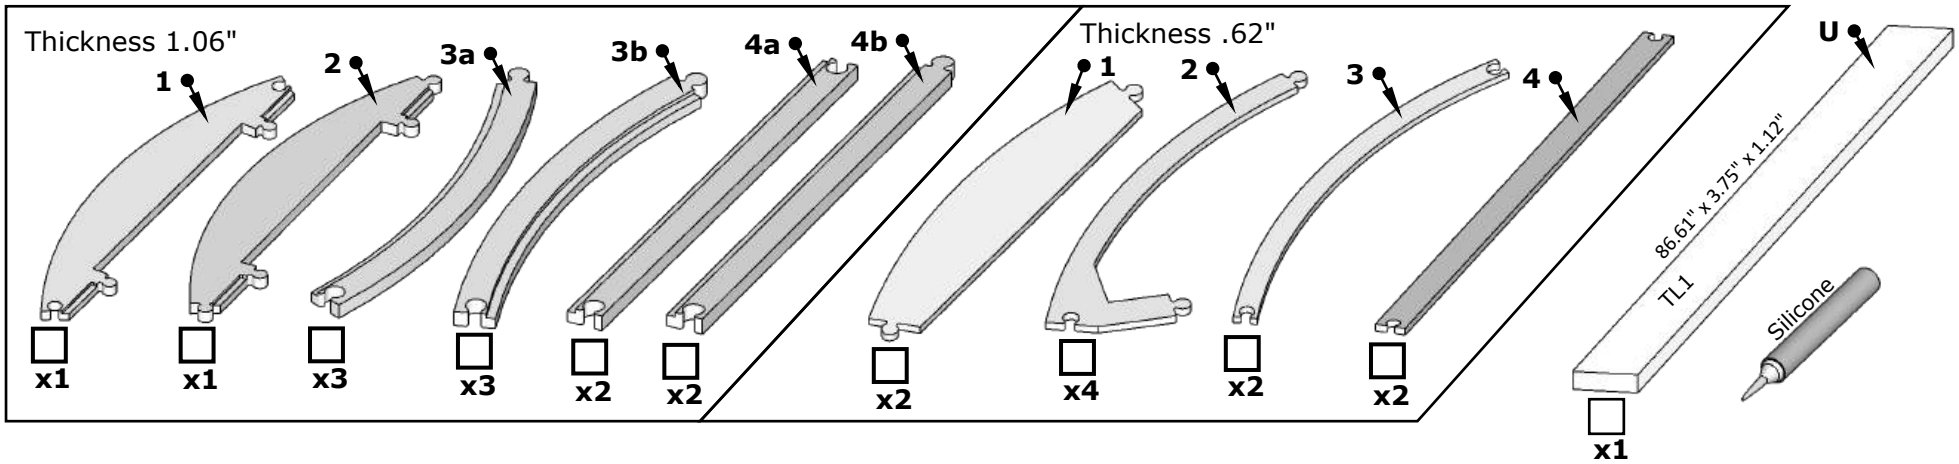


Baseframe 1.06"

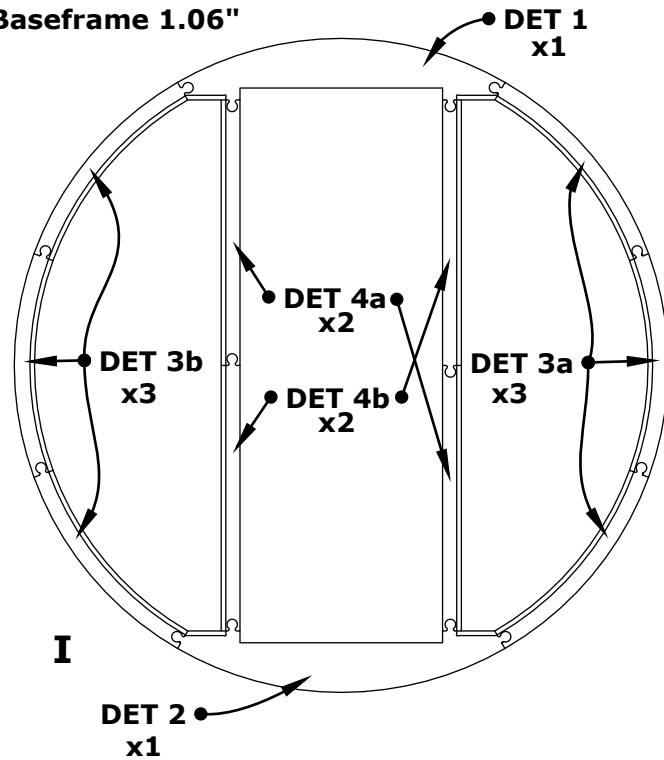



Use piece of wood to protect plywood

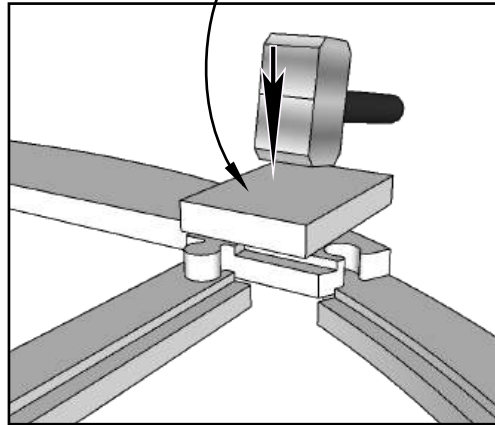



Apply waterproof silicone to the groove

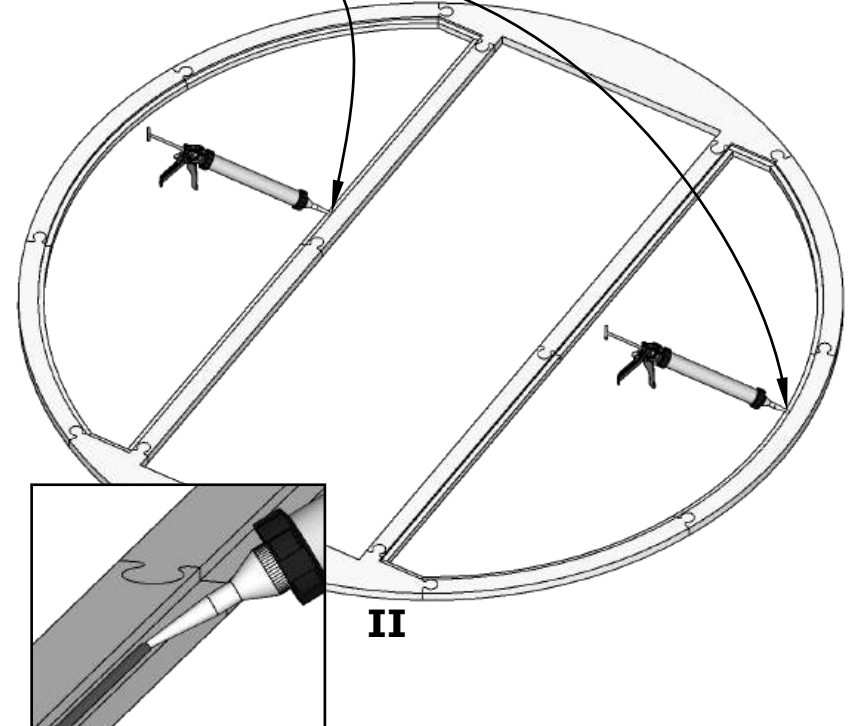


Front glass wall installation

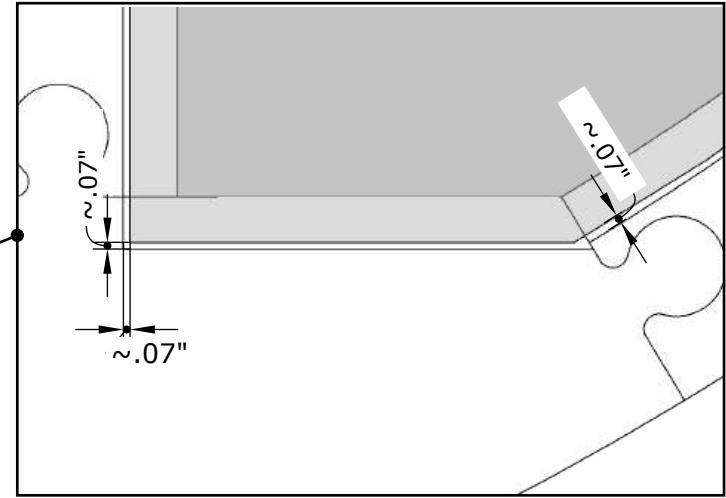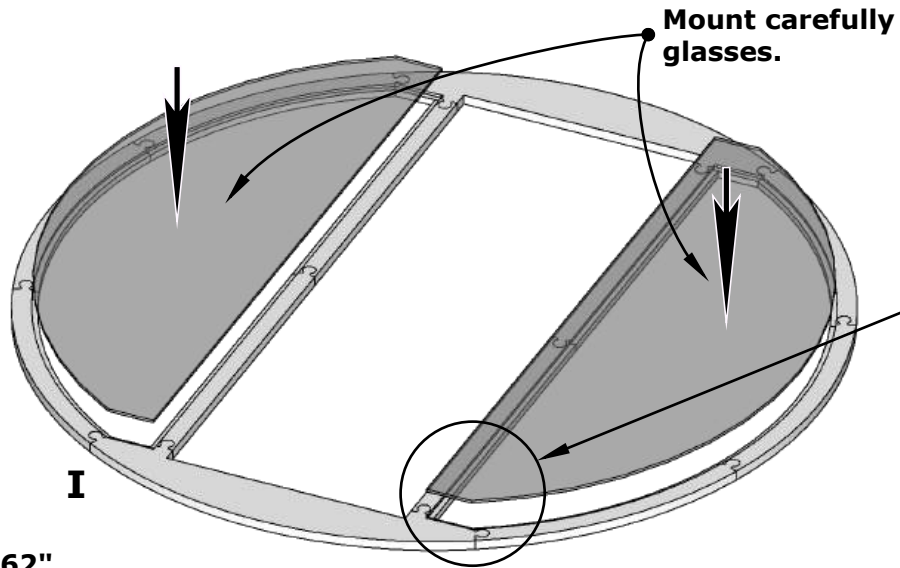

Coverframe .62"

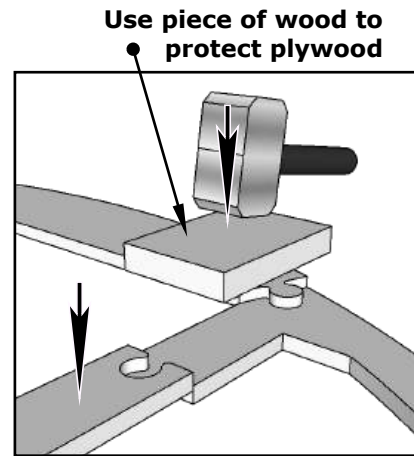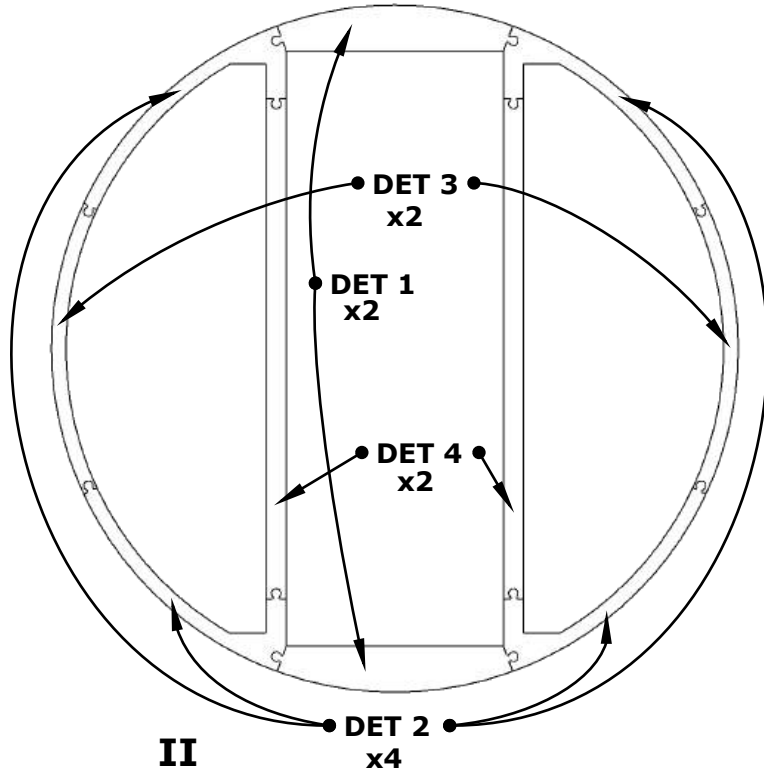


Apply waterproof silicone

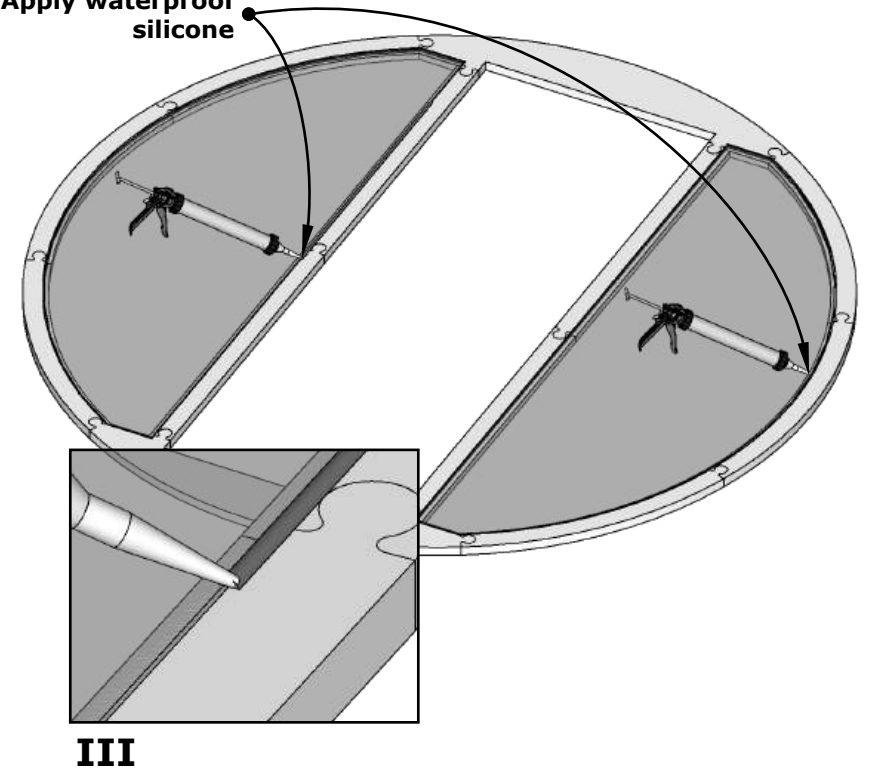


Front glass wall installation

3

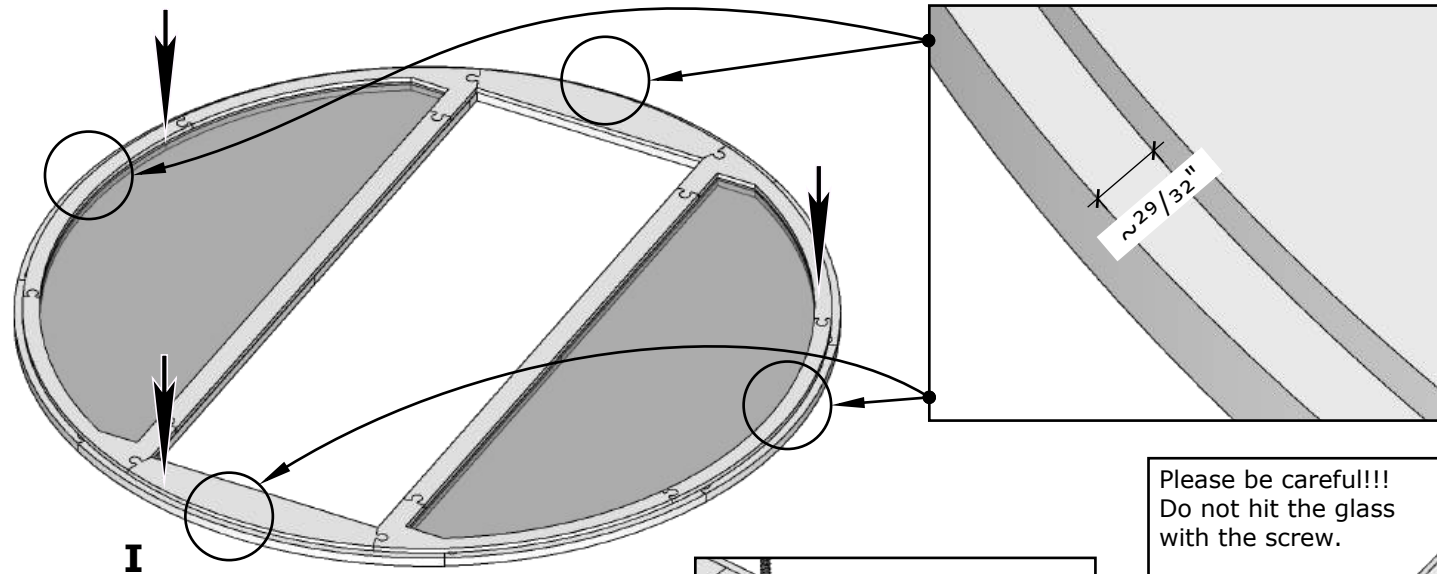


DET U

- Fix it diagonally to make wall more rigid during the installation.

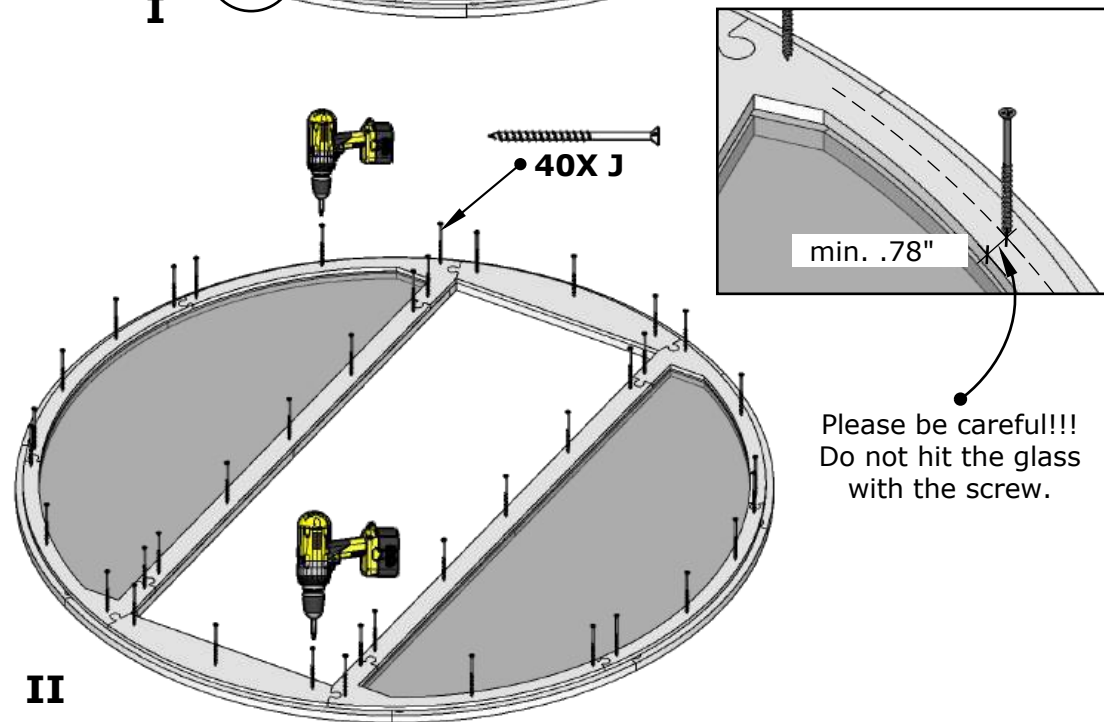




Please be careful!!!
Do not hit the glass
with the screw.


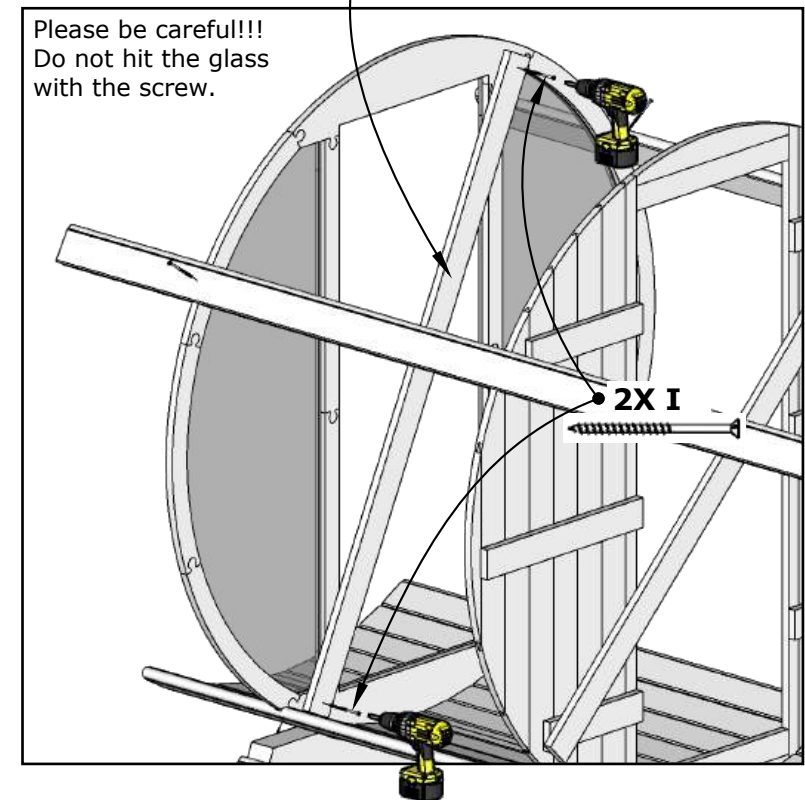



Please be careful!!!
Do not hit the glass
with the screw.


Wooden back wall assembly

Details

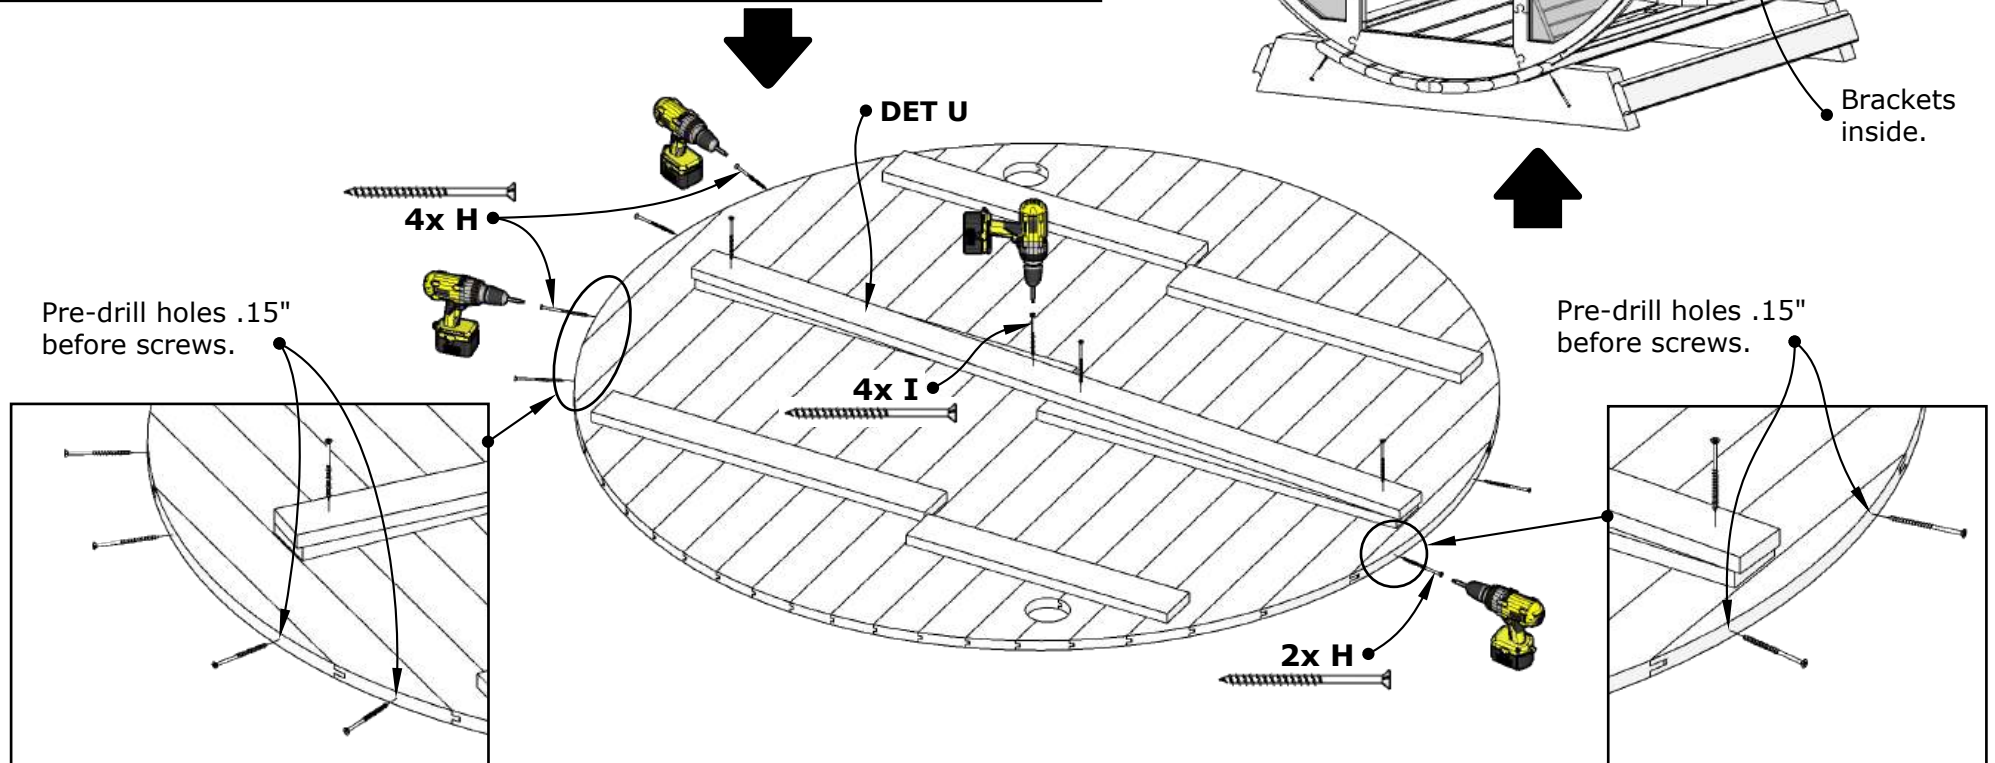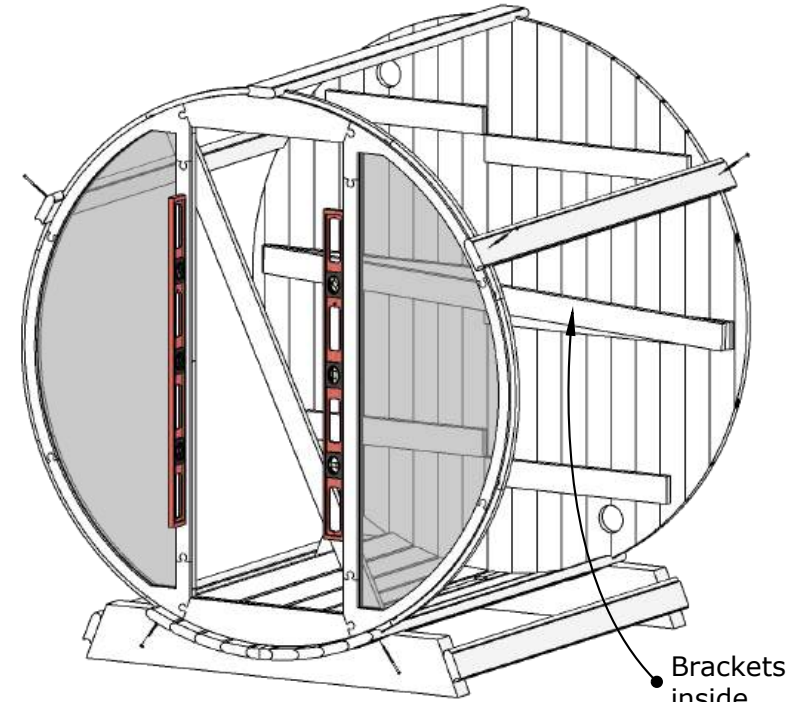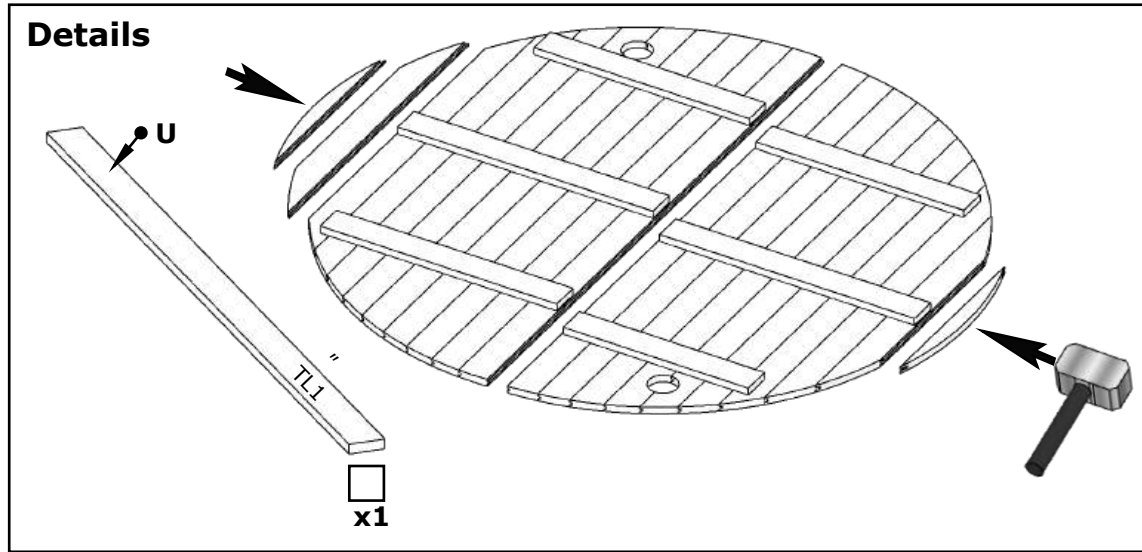


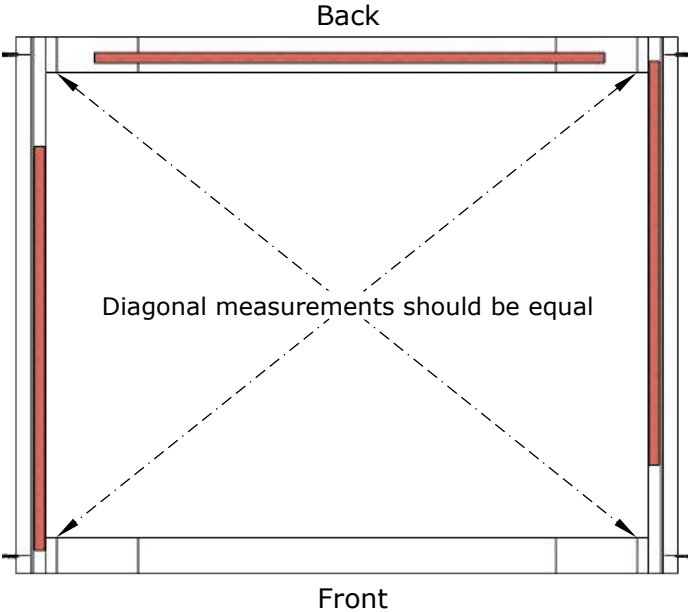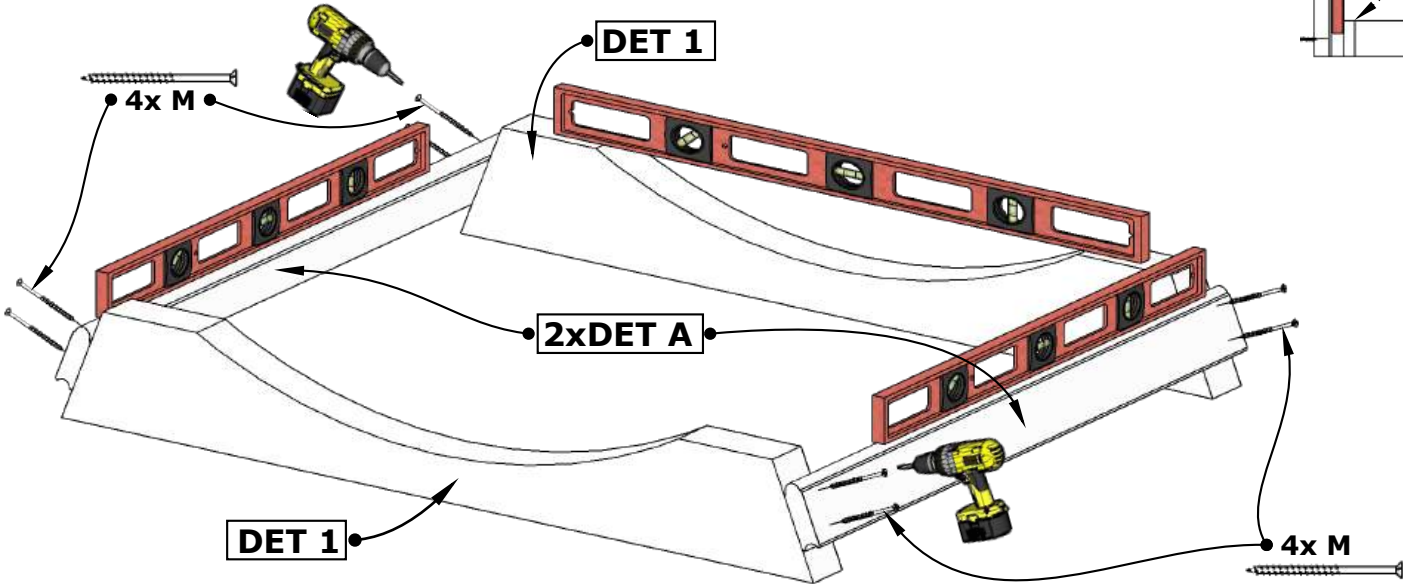

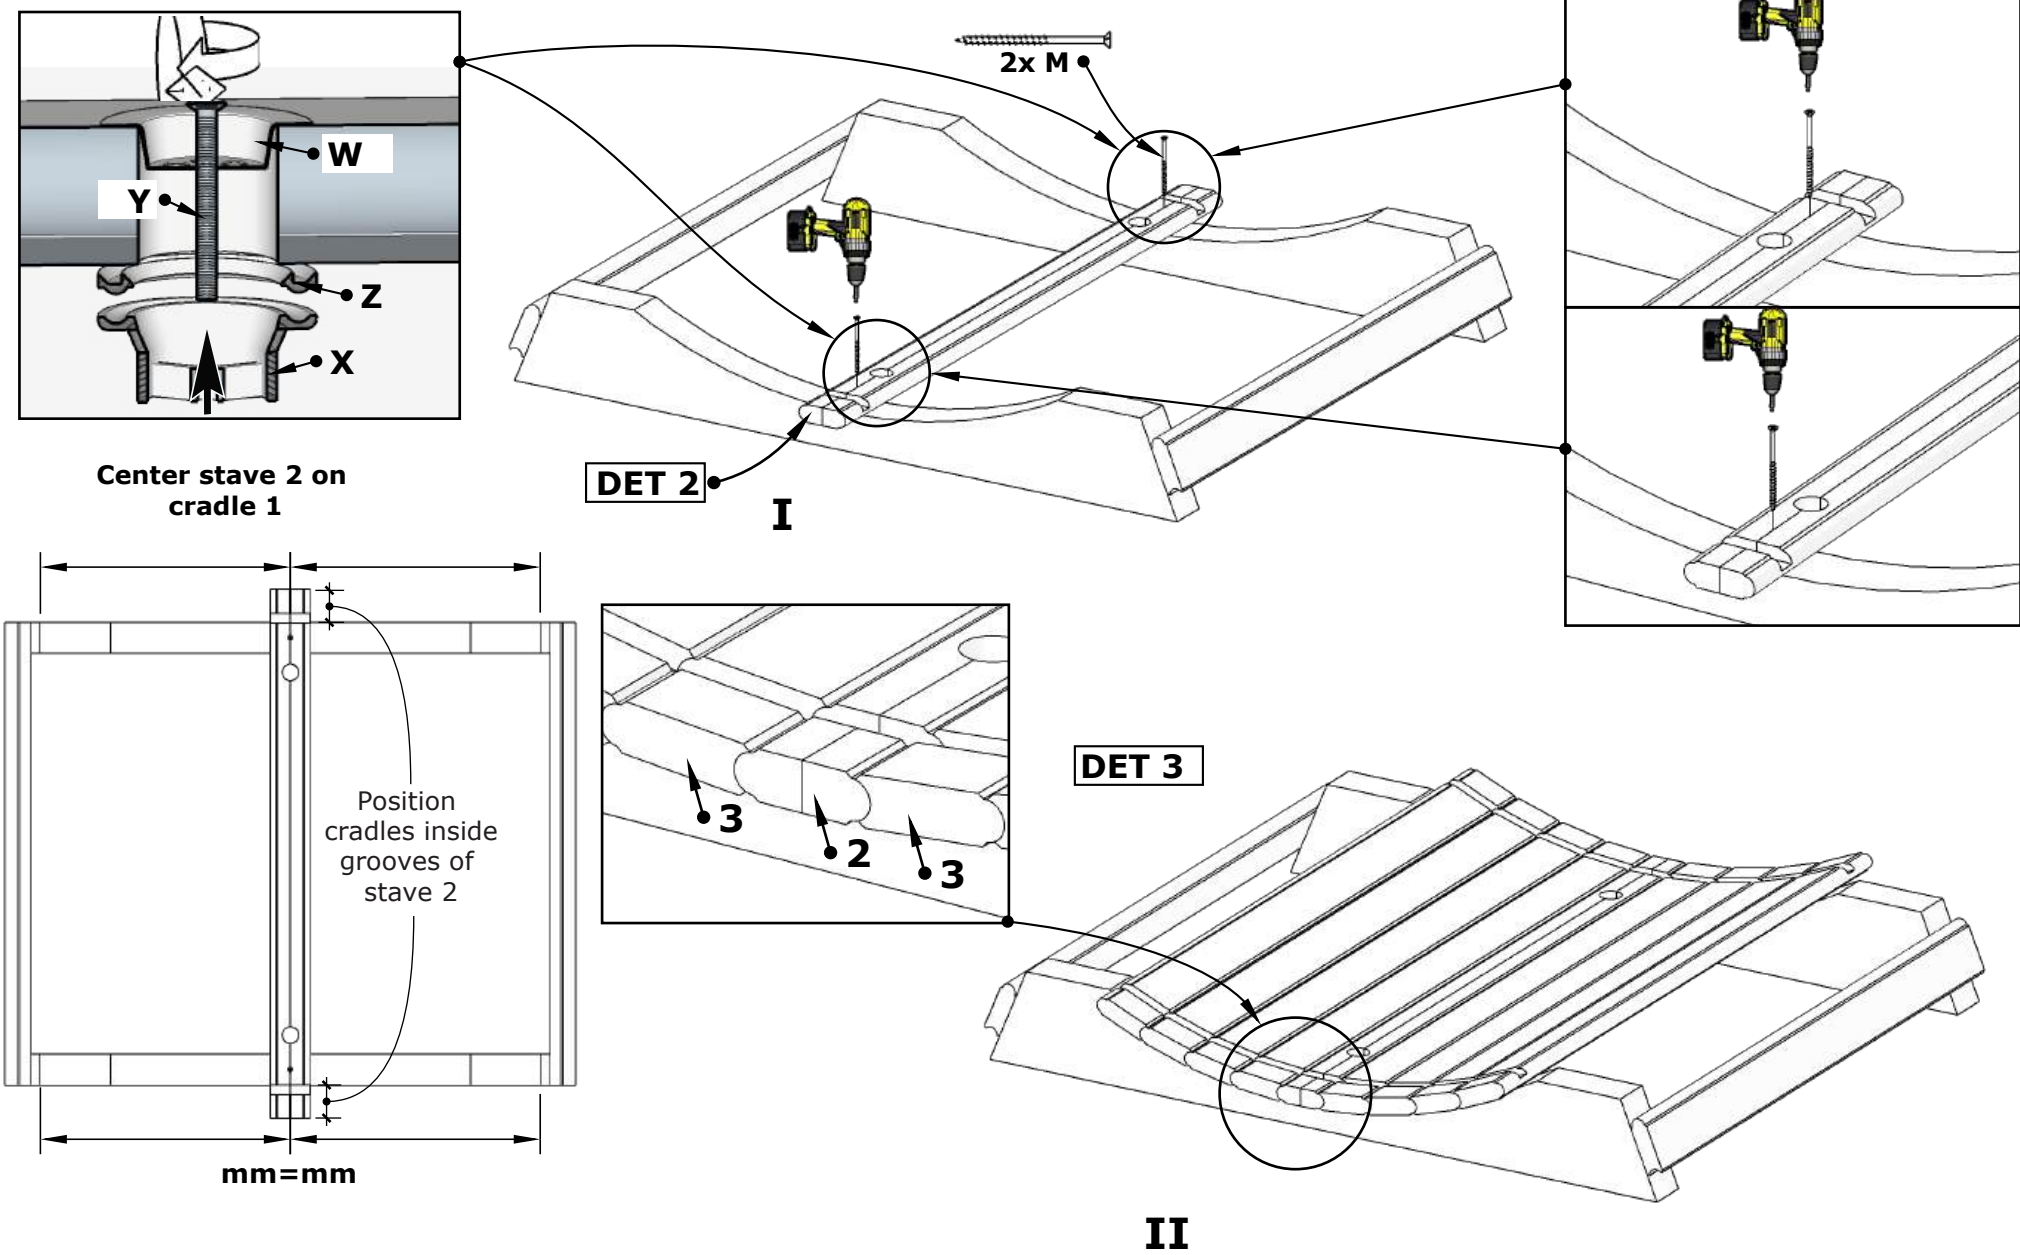


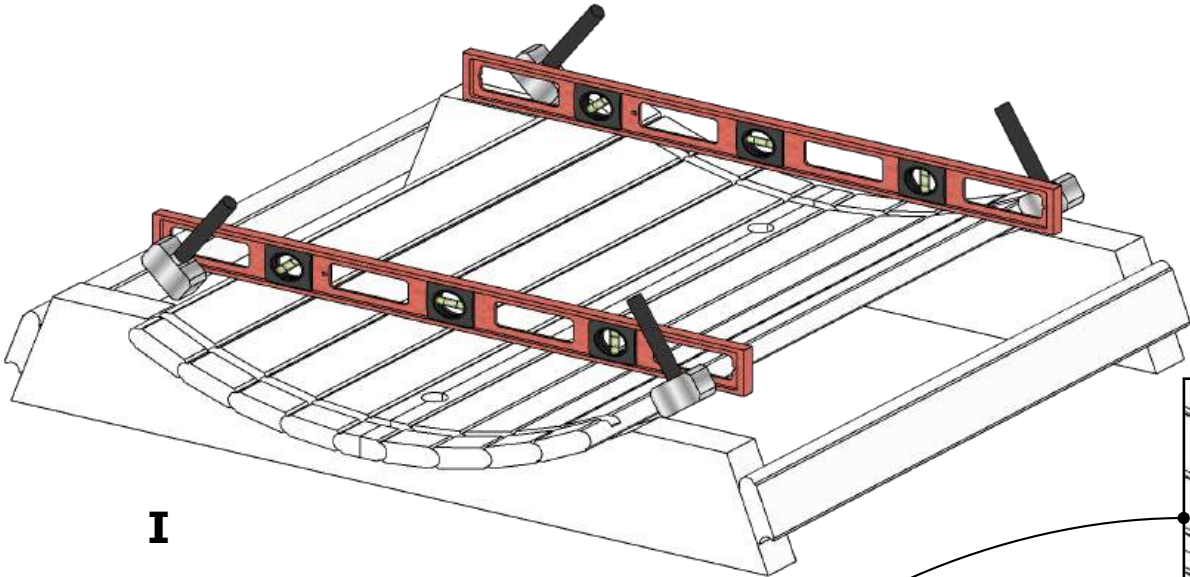

I

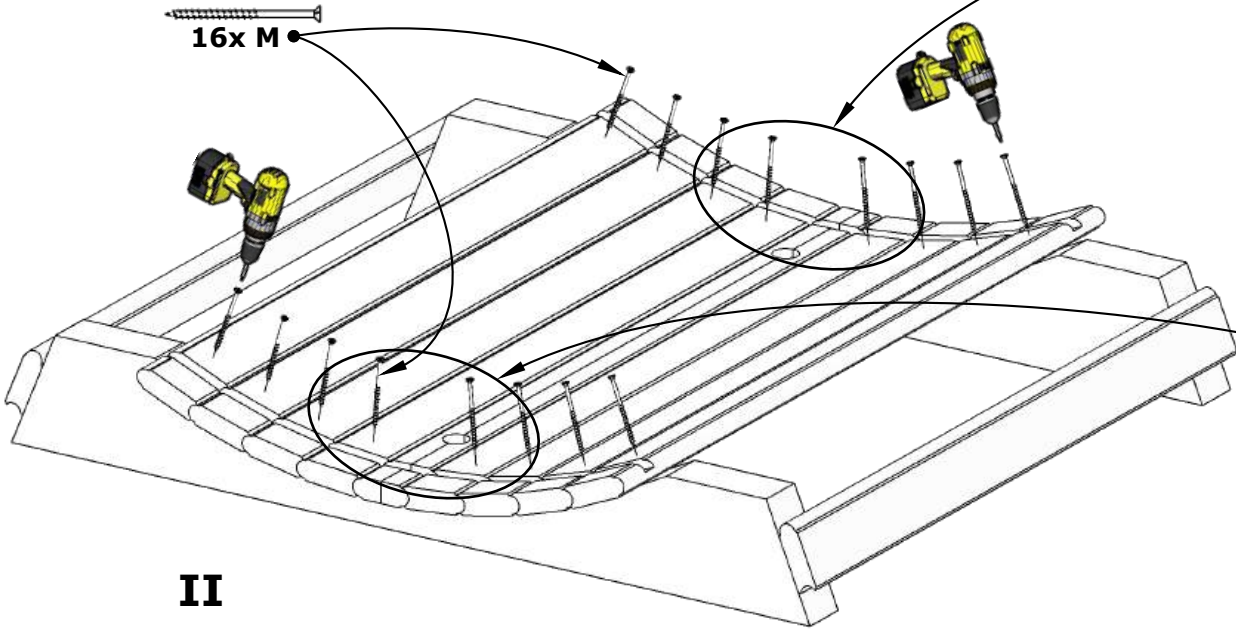


II

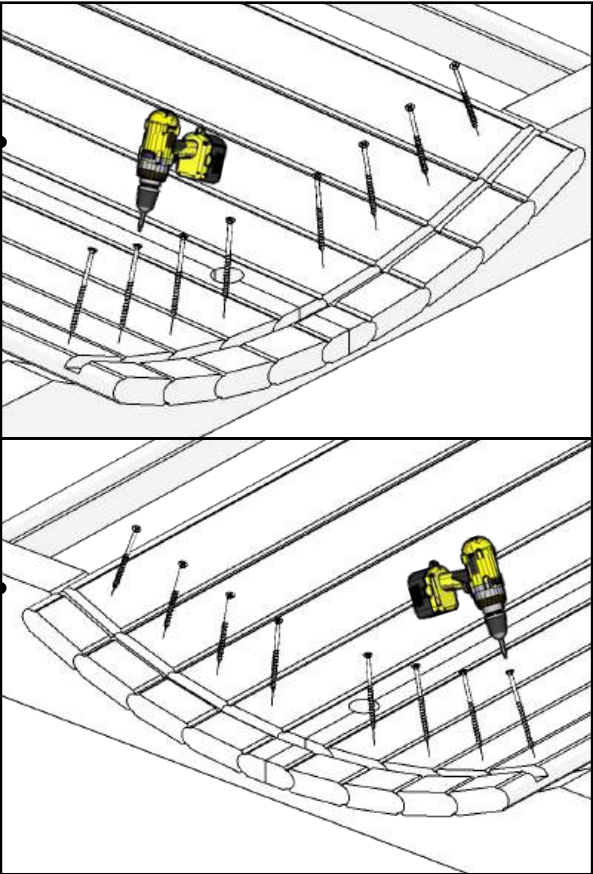


EE6G Barrel Sauna 63D" x 90H"

Drill 4 holes .50"
through DET 2
outside

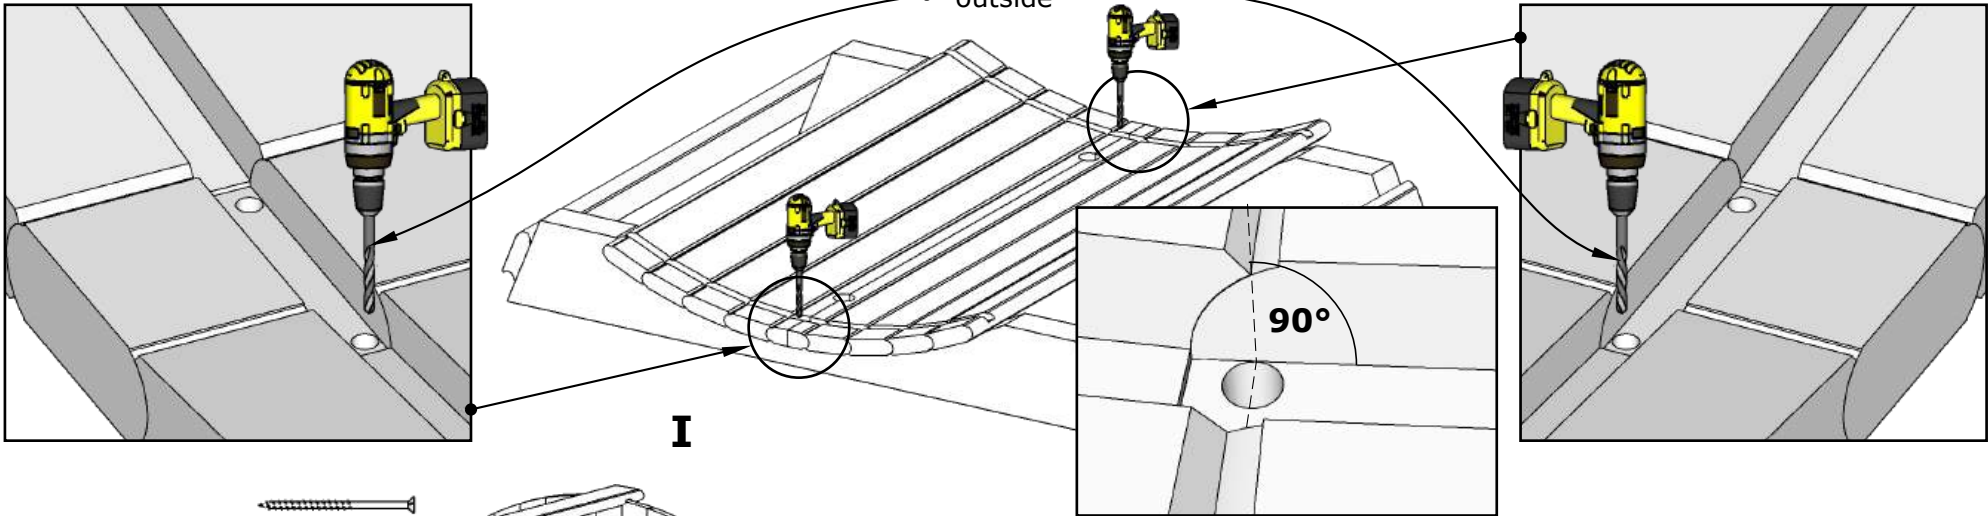

I

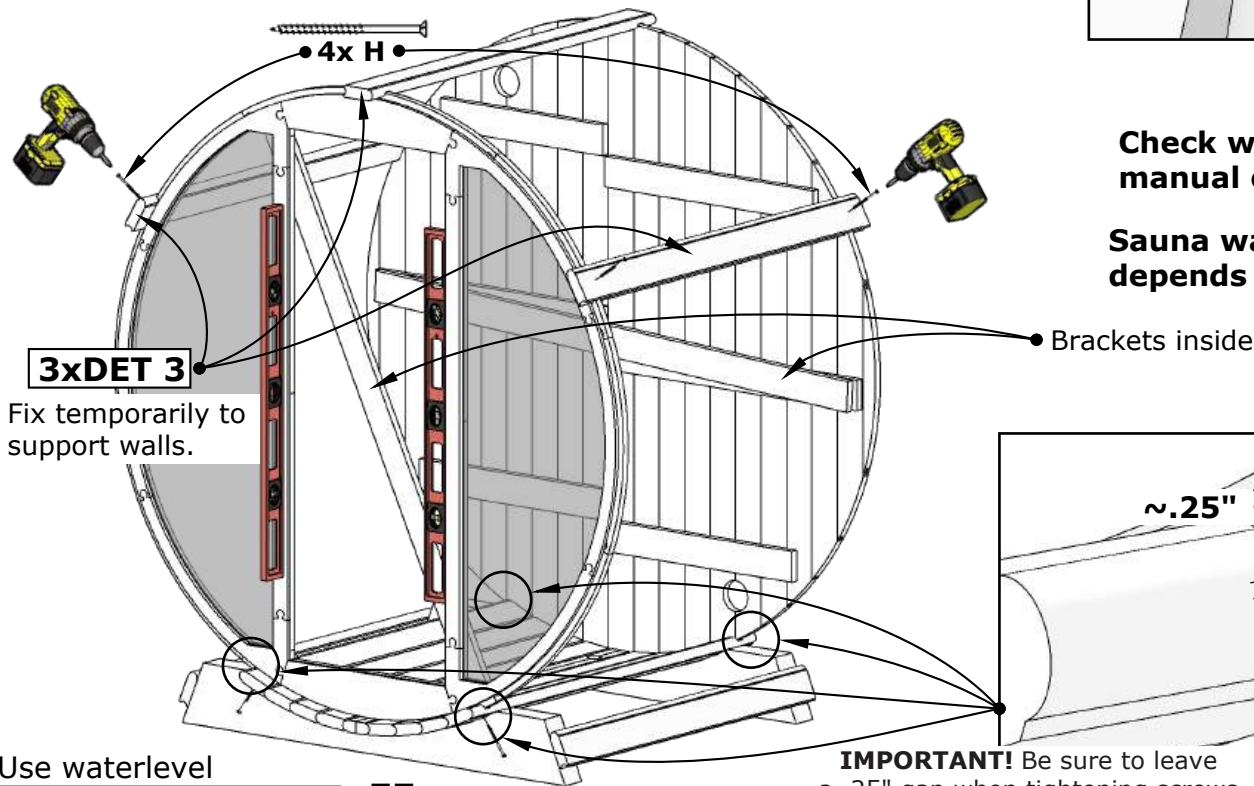

3xDET 3
Fix temporarily to support walls.

Use waterlevel



II


Check walls installation
manual on extra pages!

Sauna wall configuration
depends on Your model!

Brackets inside



IMPORTANT! Be sure to leave
a .25" gap when tightening screws
to leave room for adjustment
when the outer bands (B) are
installed.

~.25"


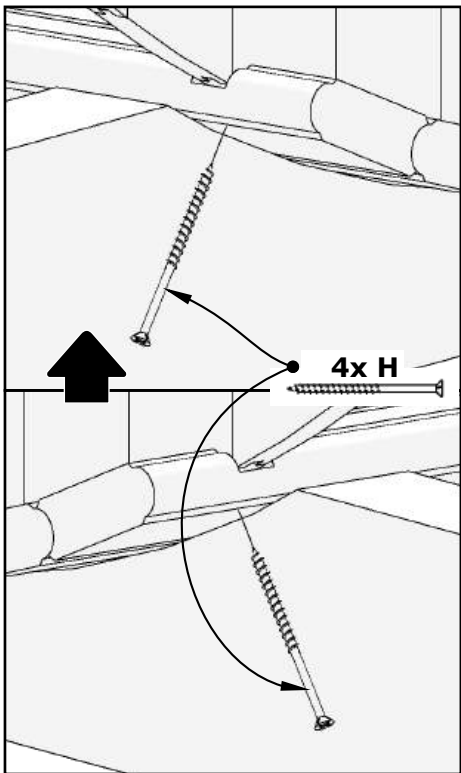



4x H

EE6G Barrel Sauna 63D" x 90H"

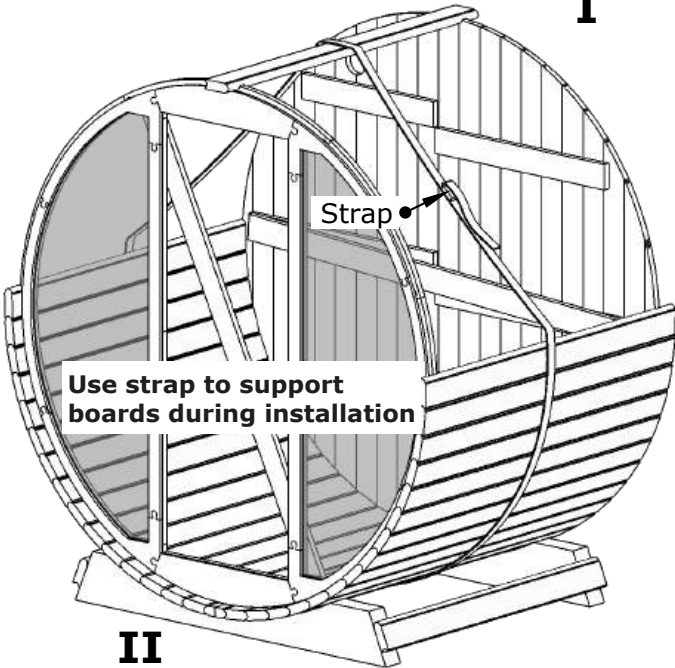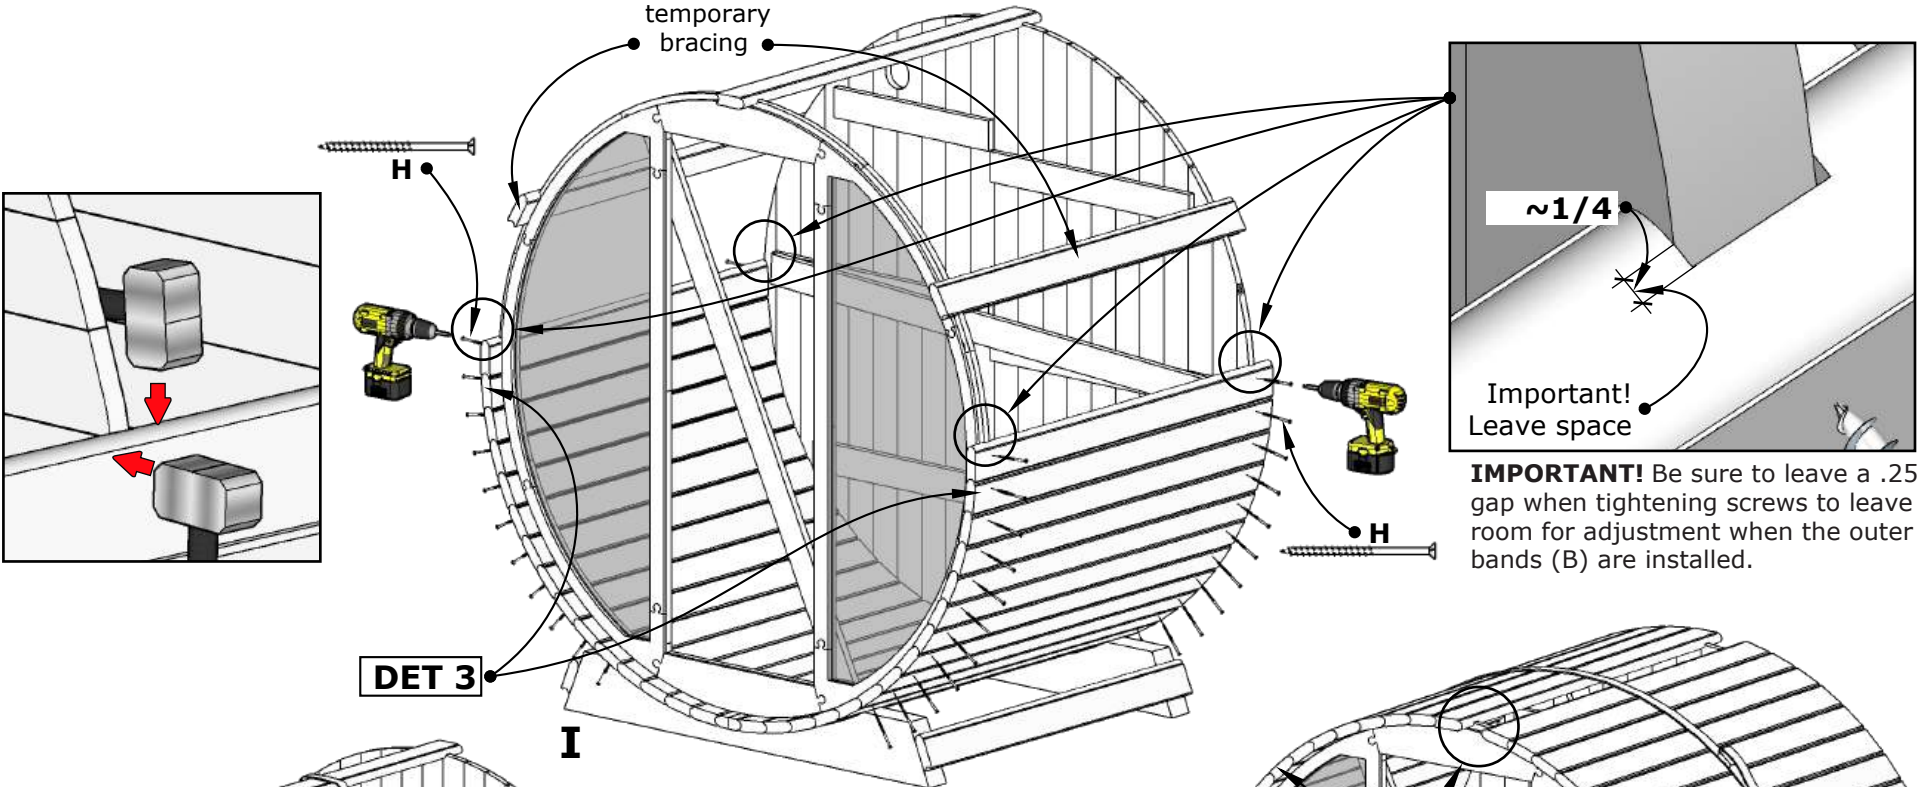


See the next page.

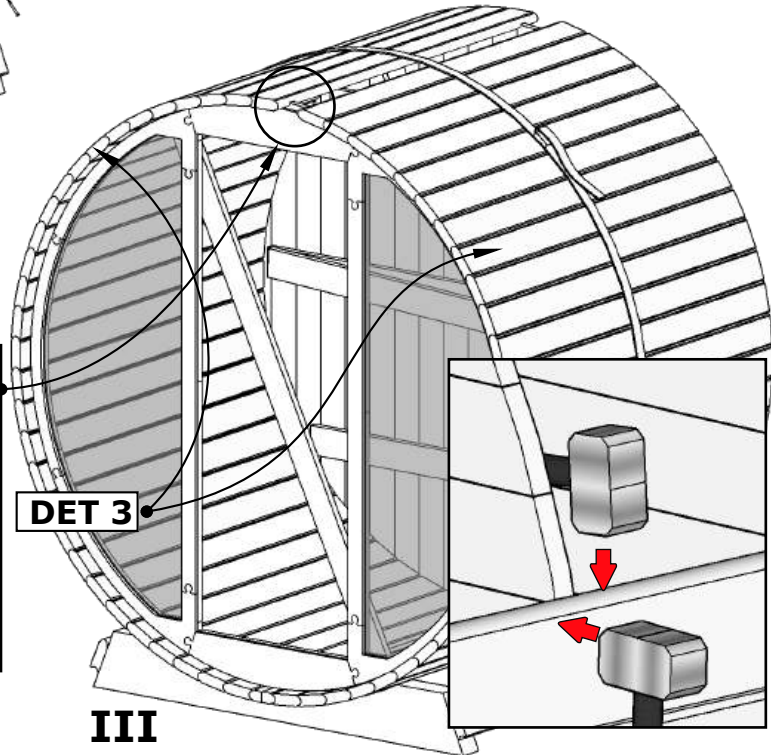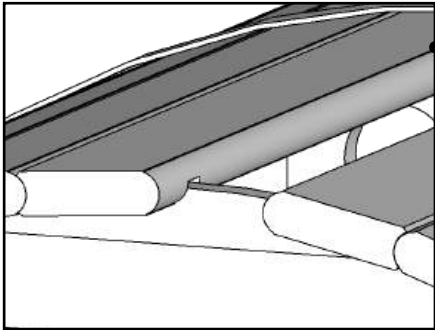


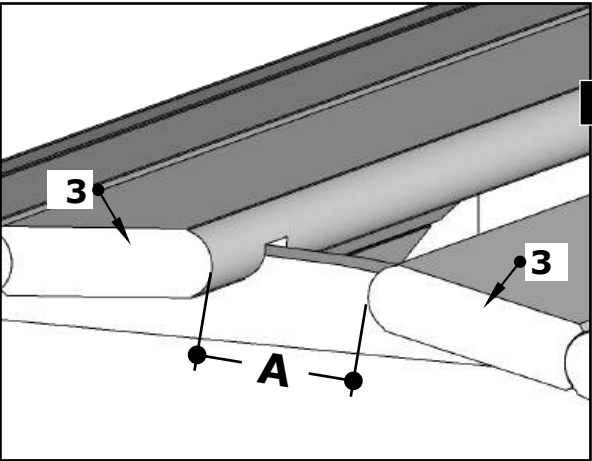


I

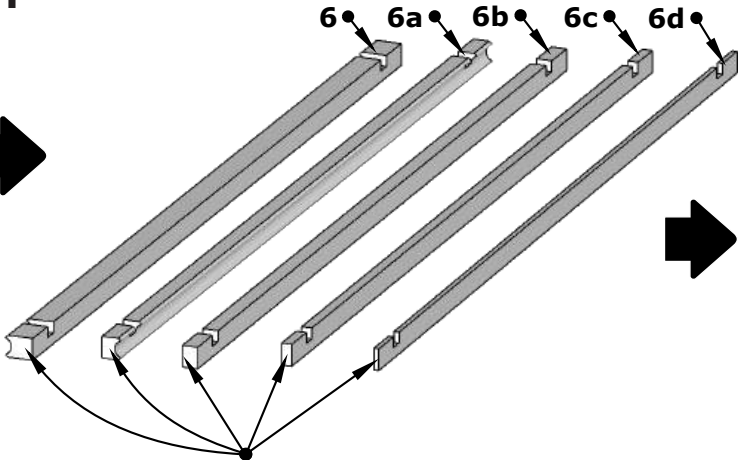


Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately .25" wider than the gap.

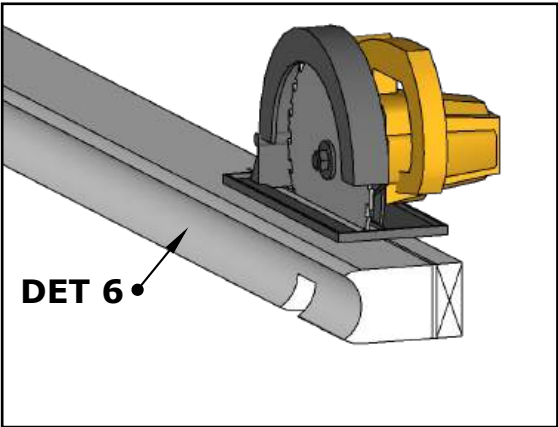


If needed, trim the flat edge of the board to create the desired width.

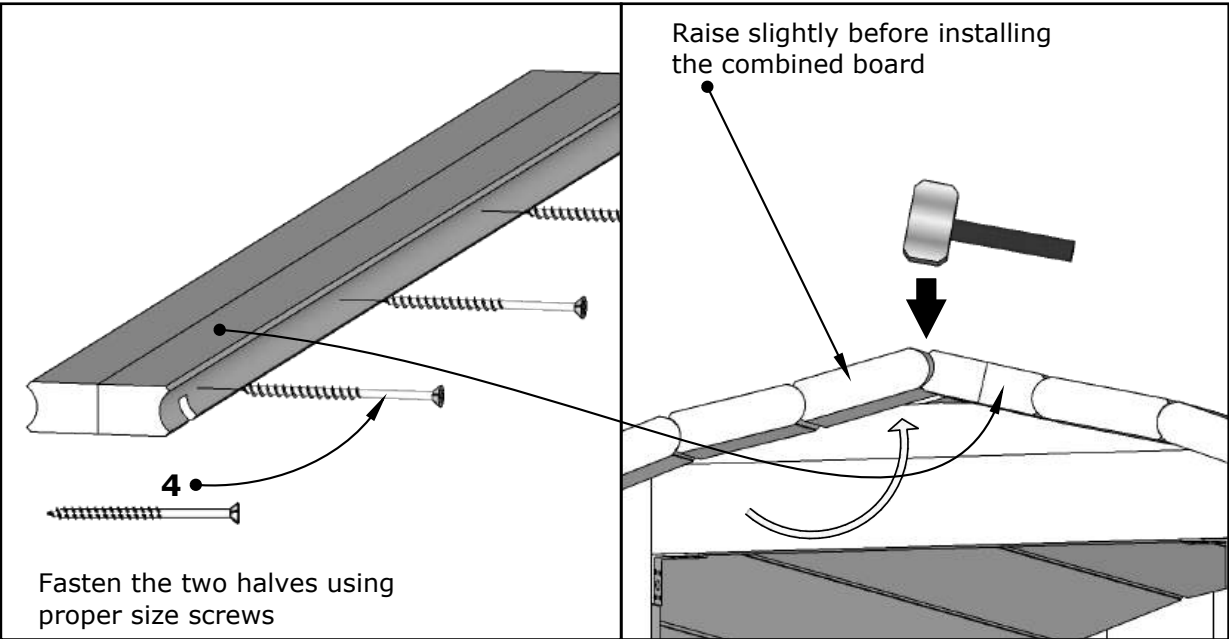




II






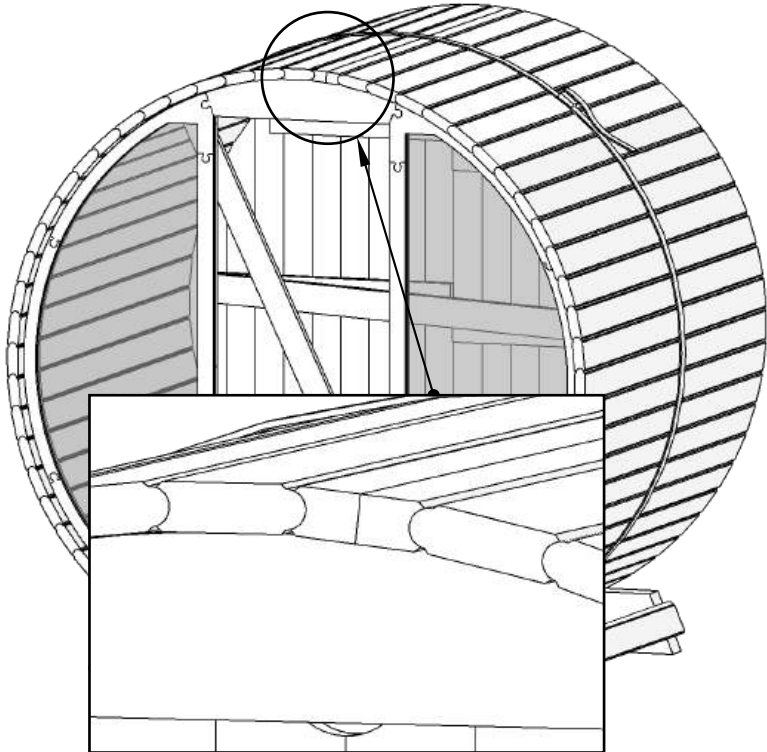



III

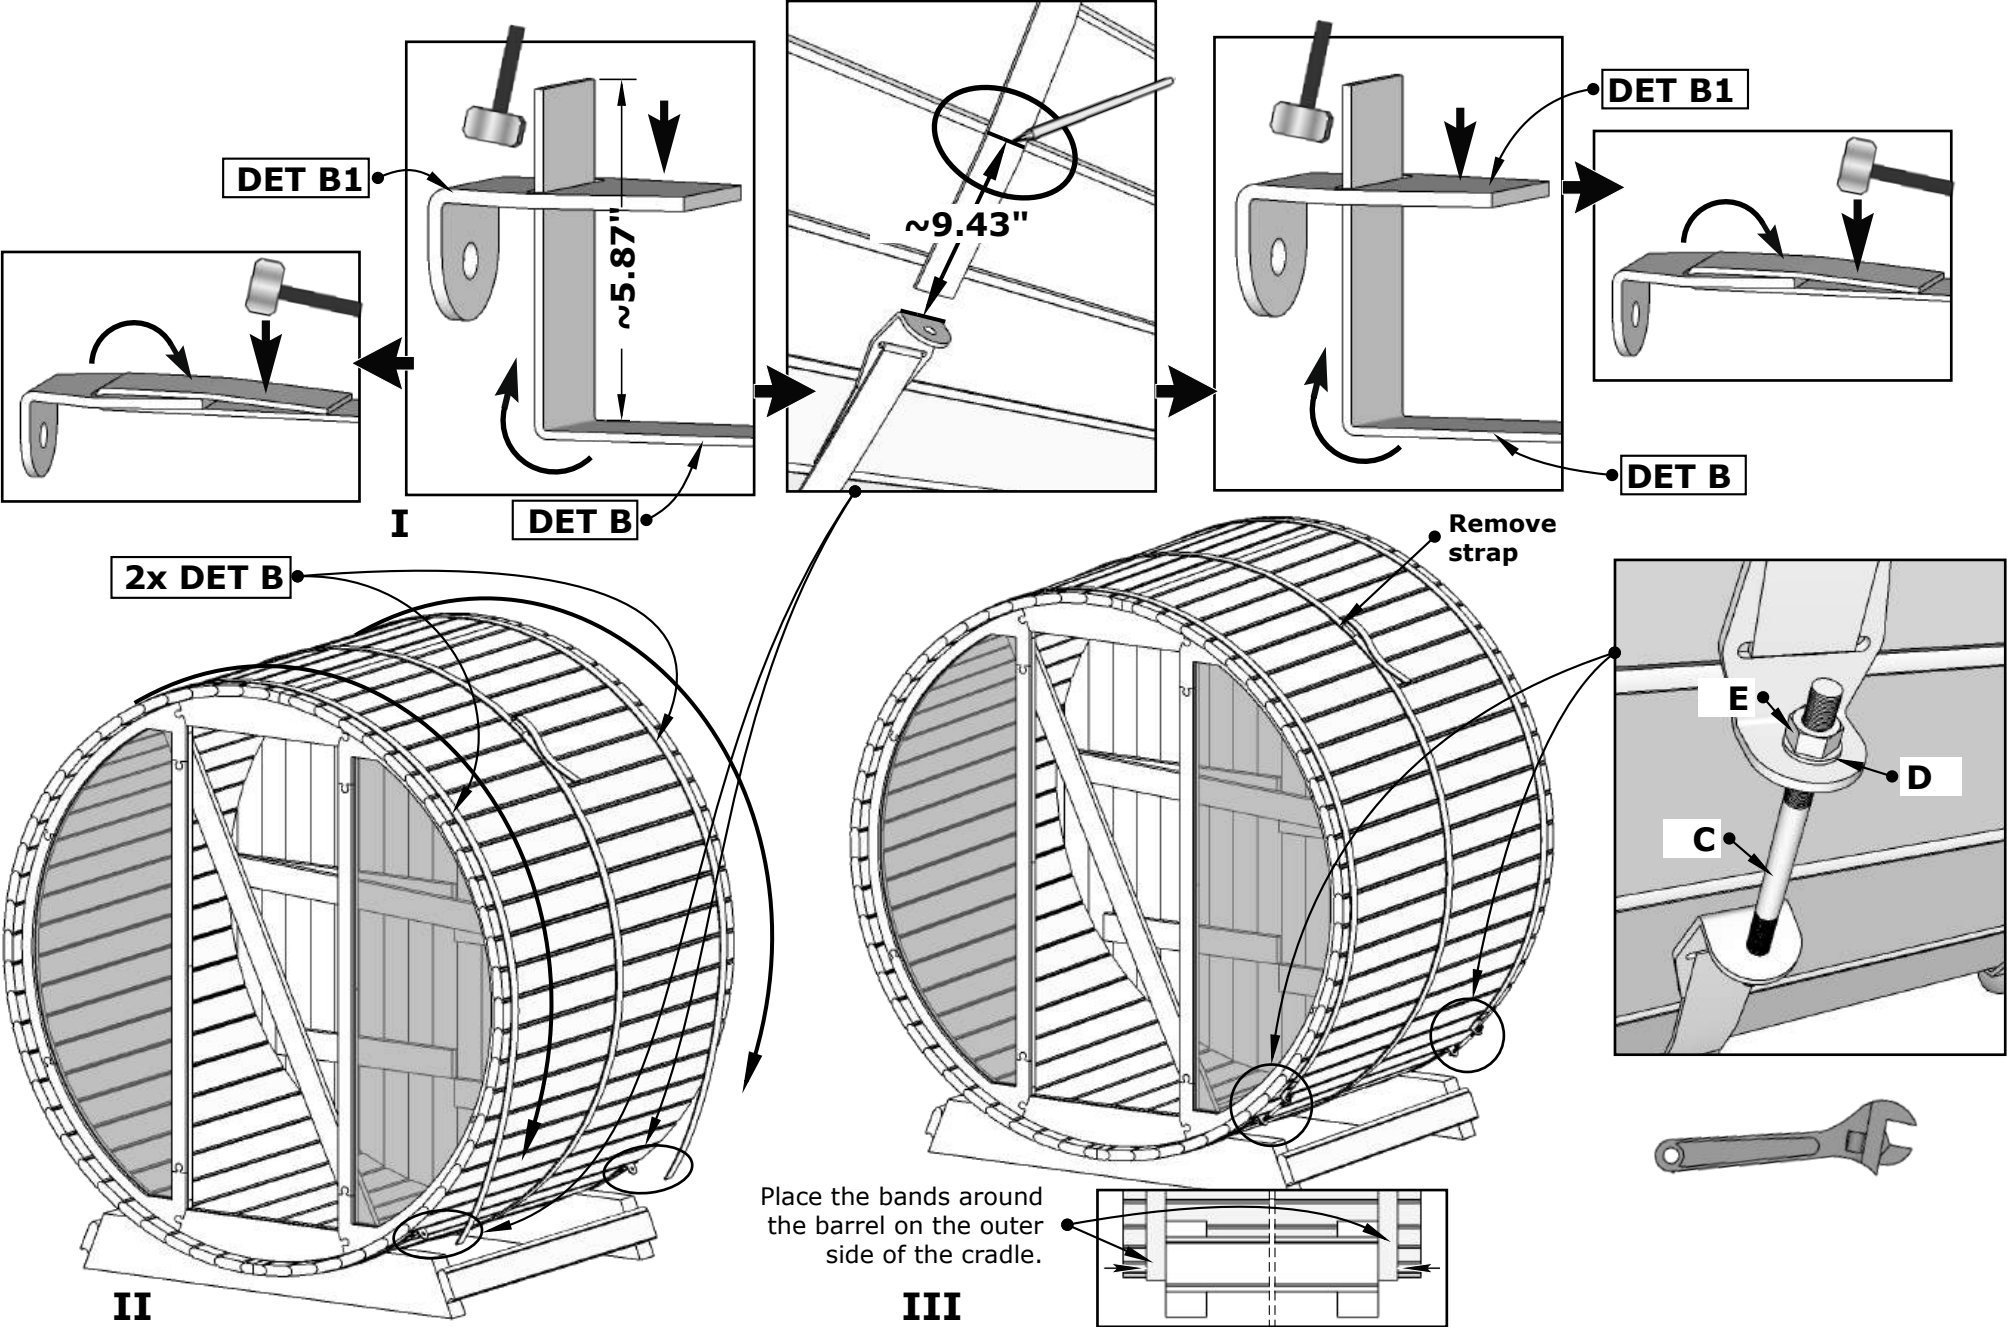

EE6G Barrel Sauna 63D" x 90H"

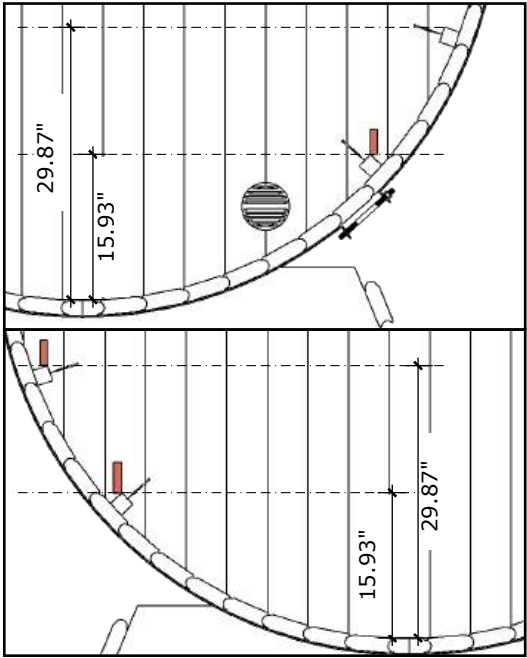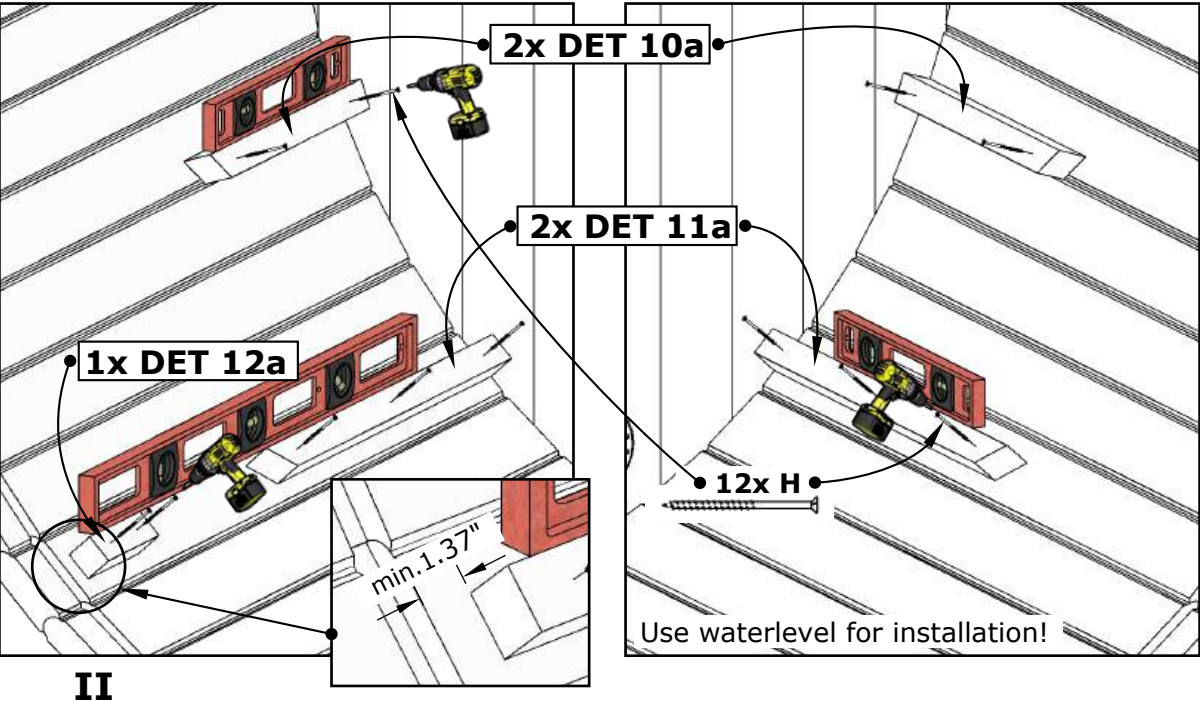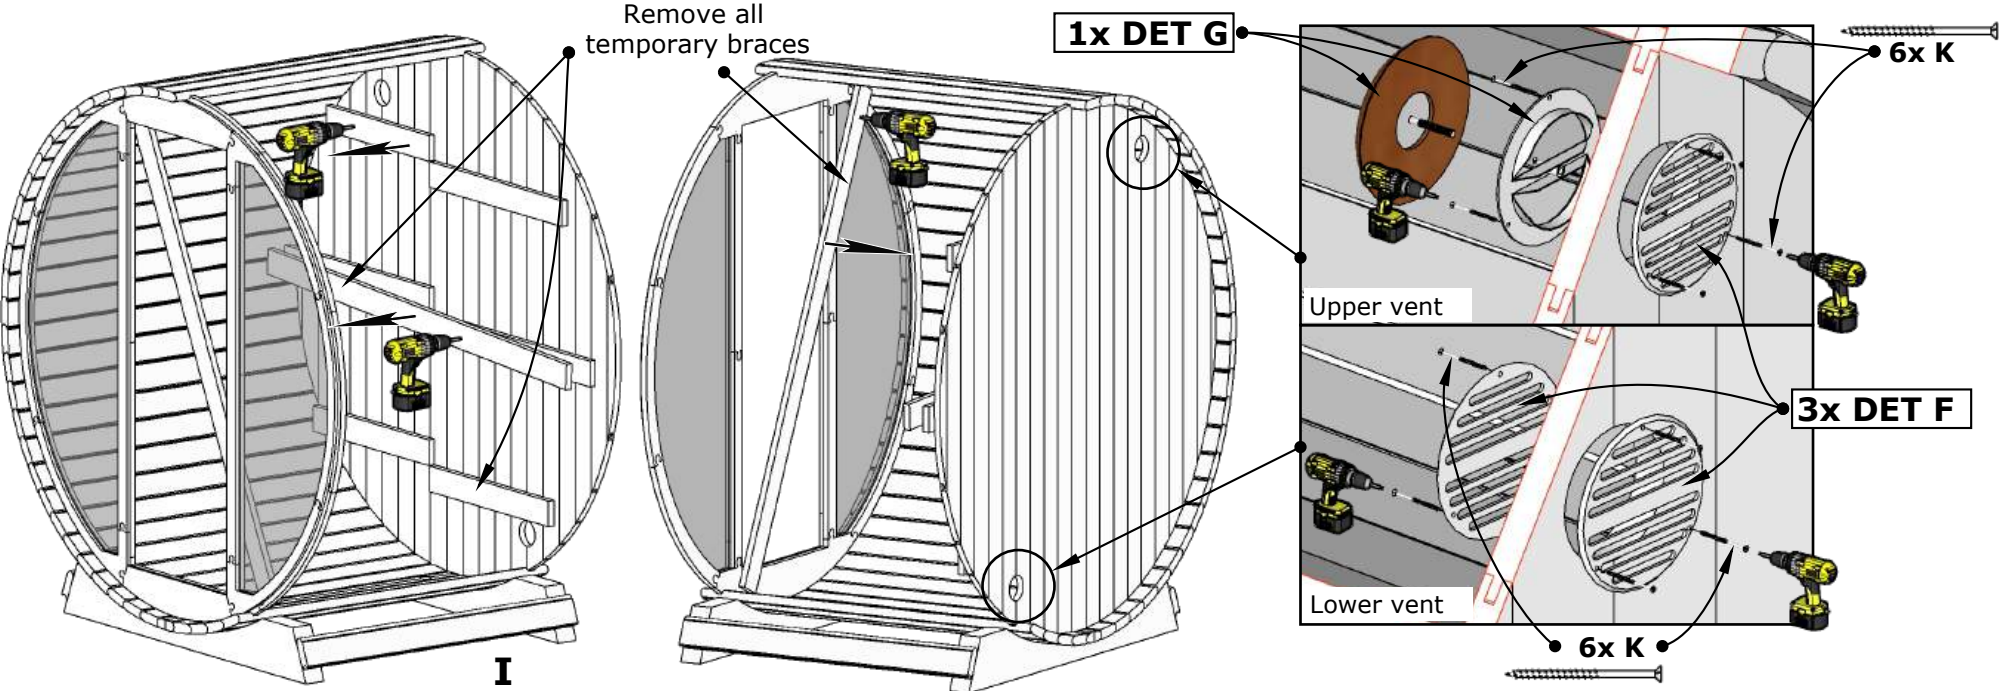


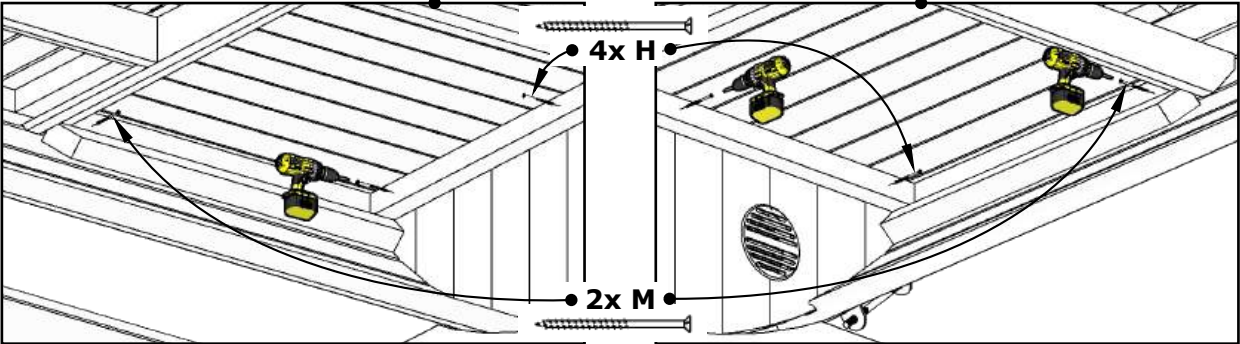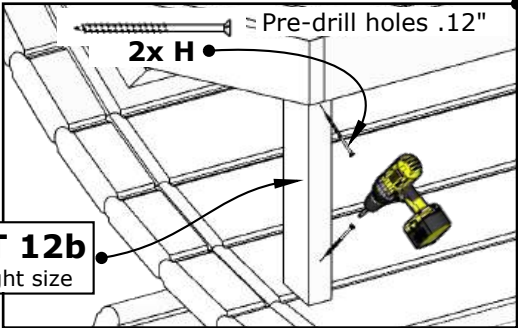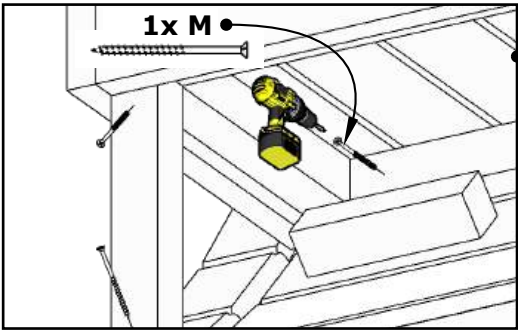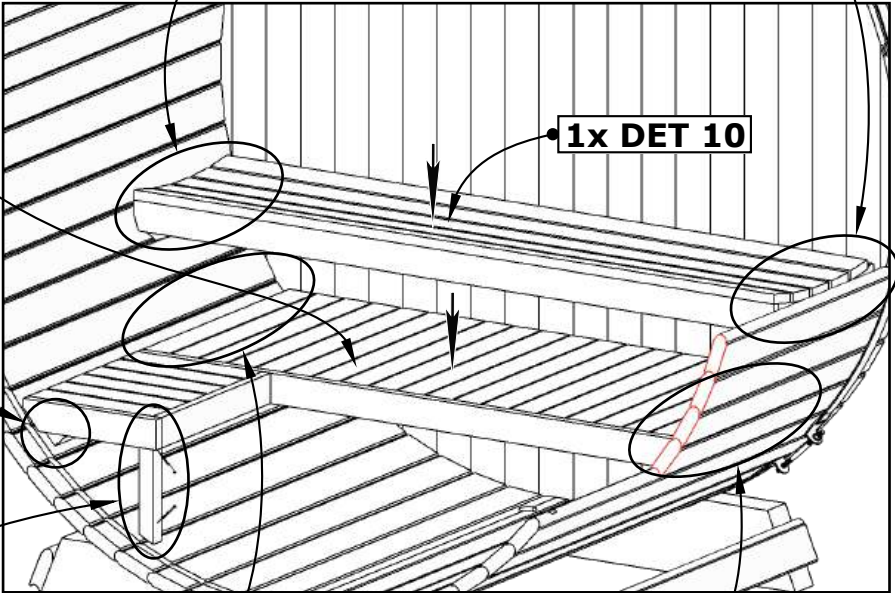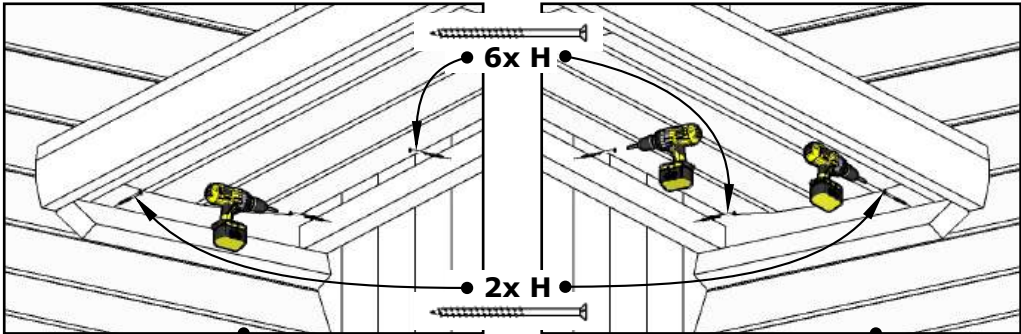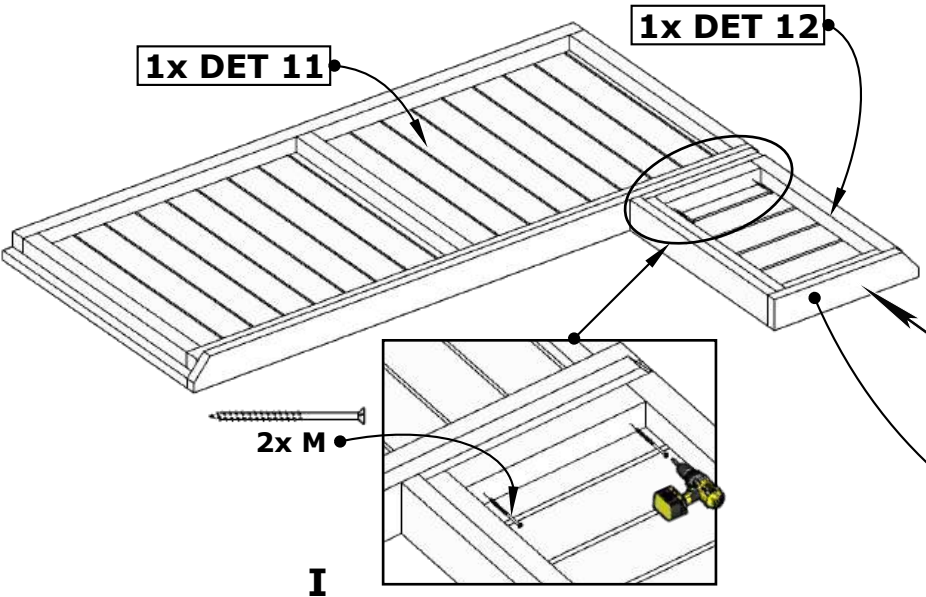

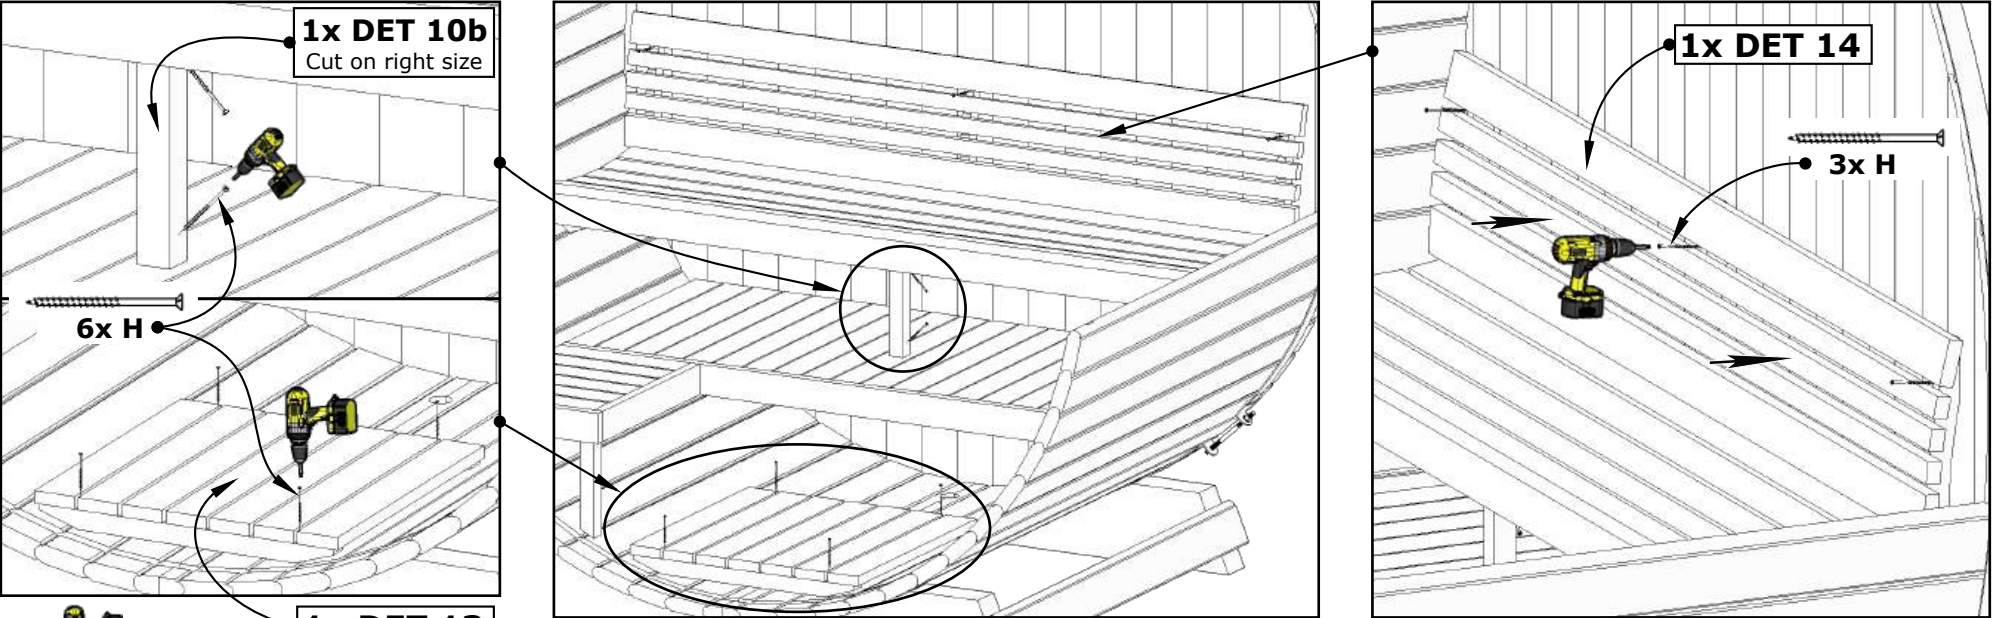


I

X= Front wall thickness
Wooden front wall 1.12"
Glass front wall 1.62"

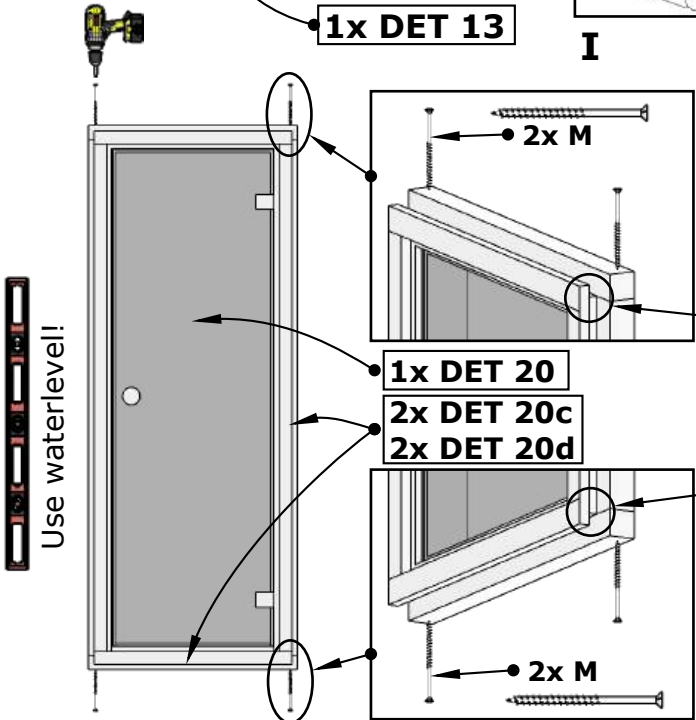

II








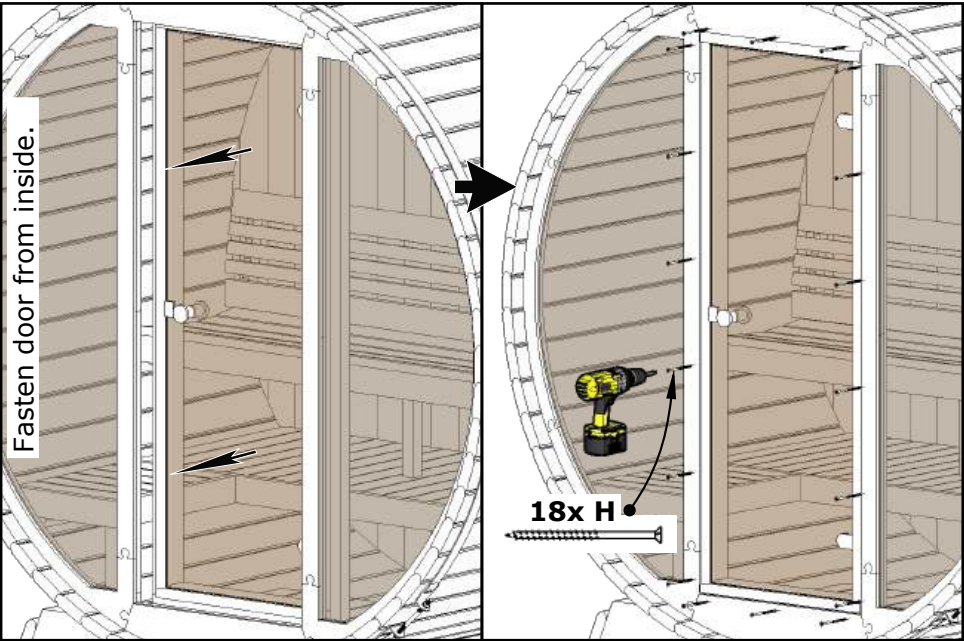


EE6G Barrel Sauna 63D" x 90H"

Ensure door frame is pressed tightly against the wall and fasten from inside

Please be careful!!! Do not hit the glass with the screw.


15

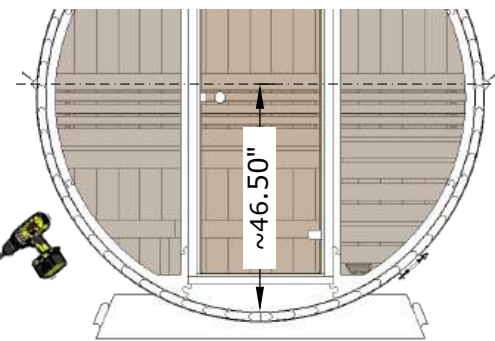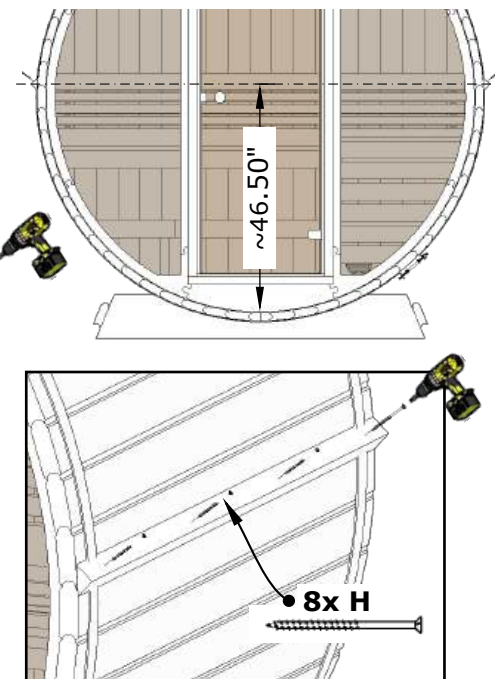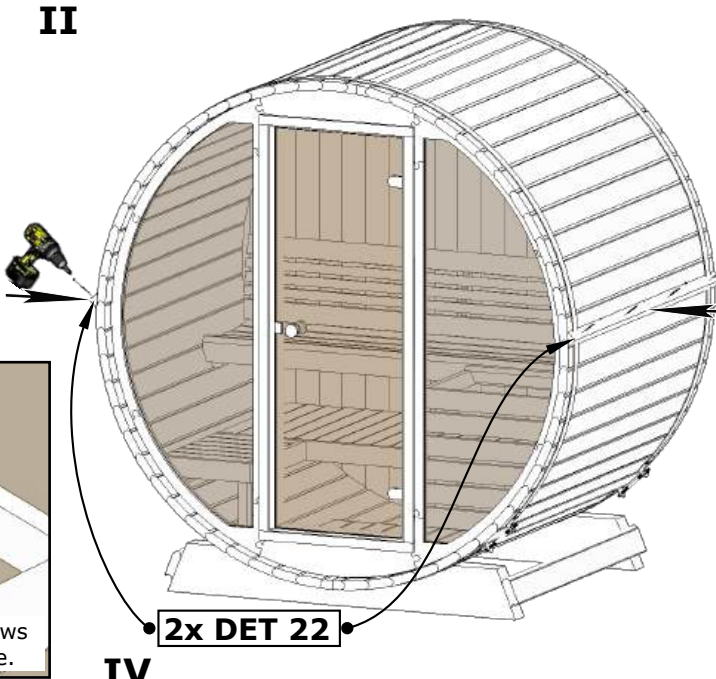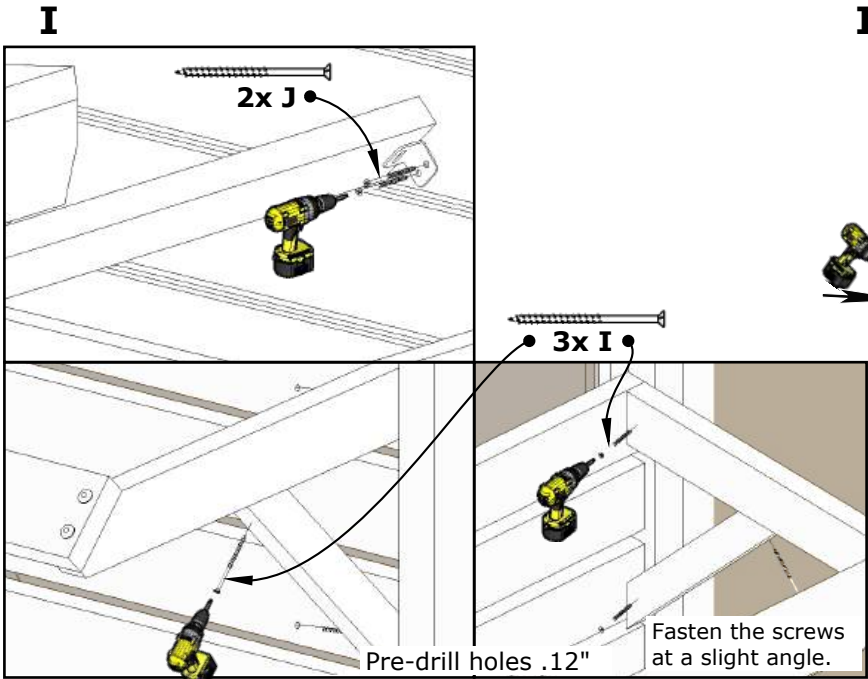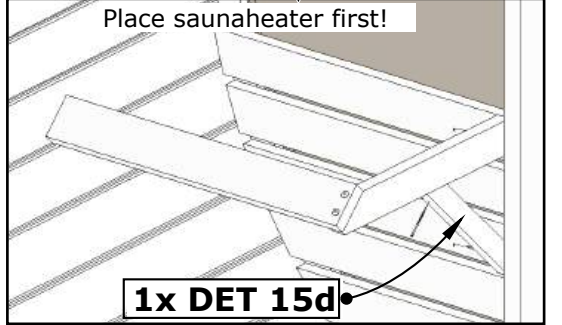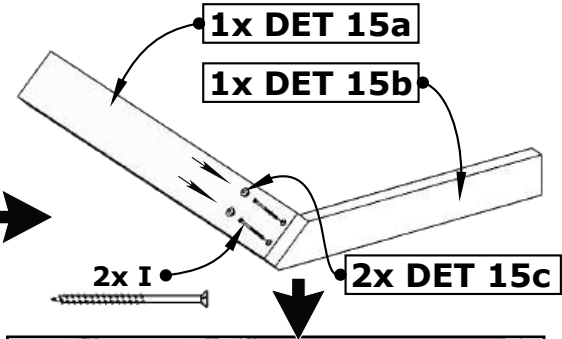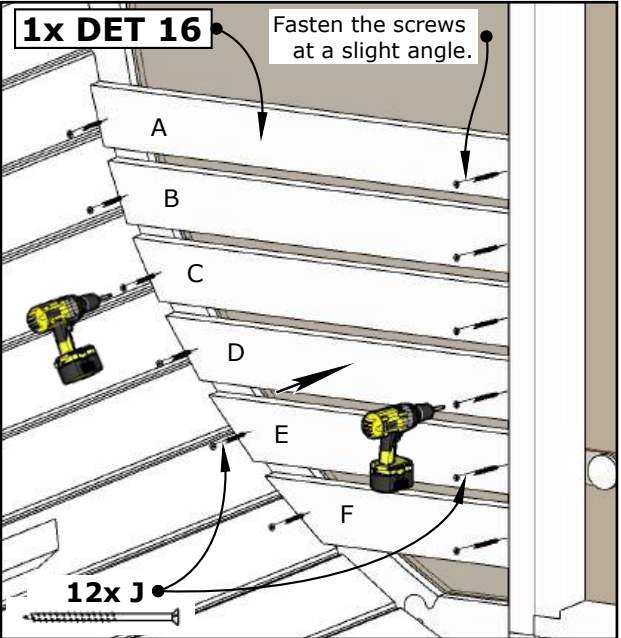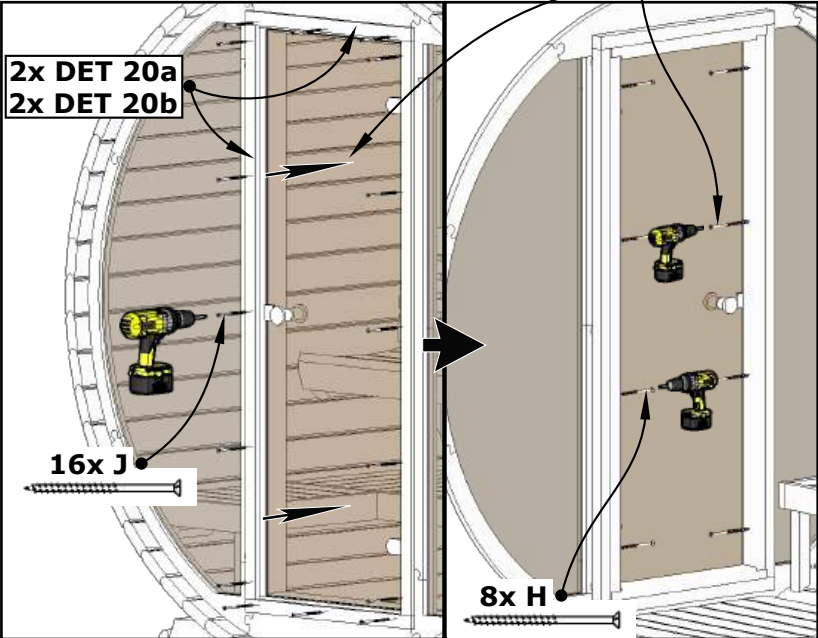



III

IV


NB! Check also shingles installation manual inside shingles package.

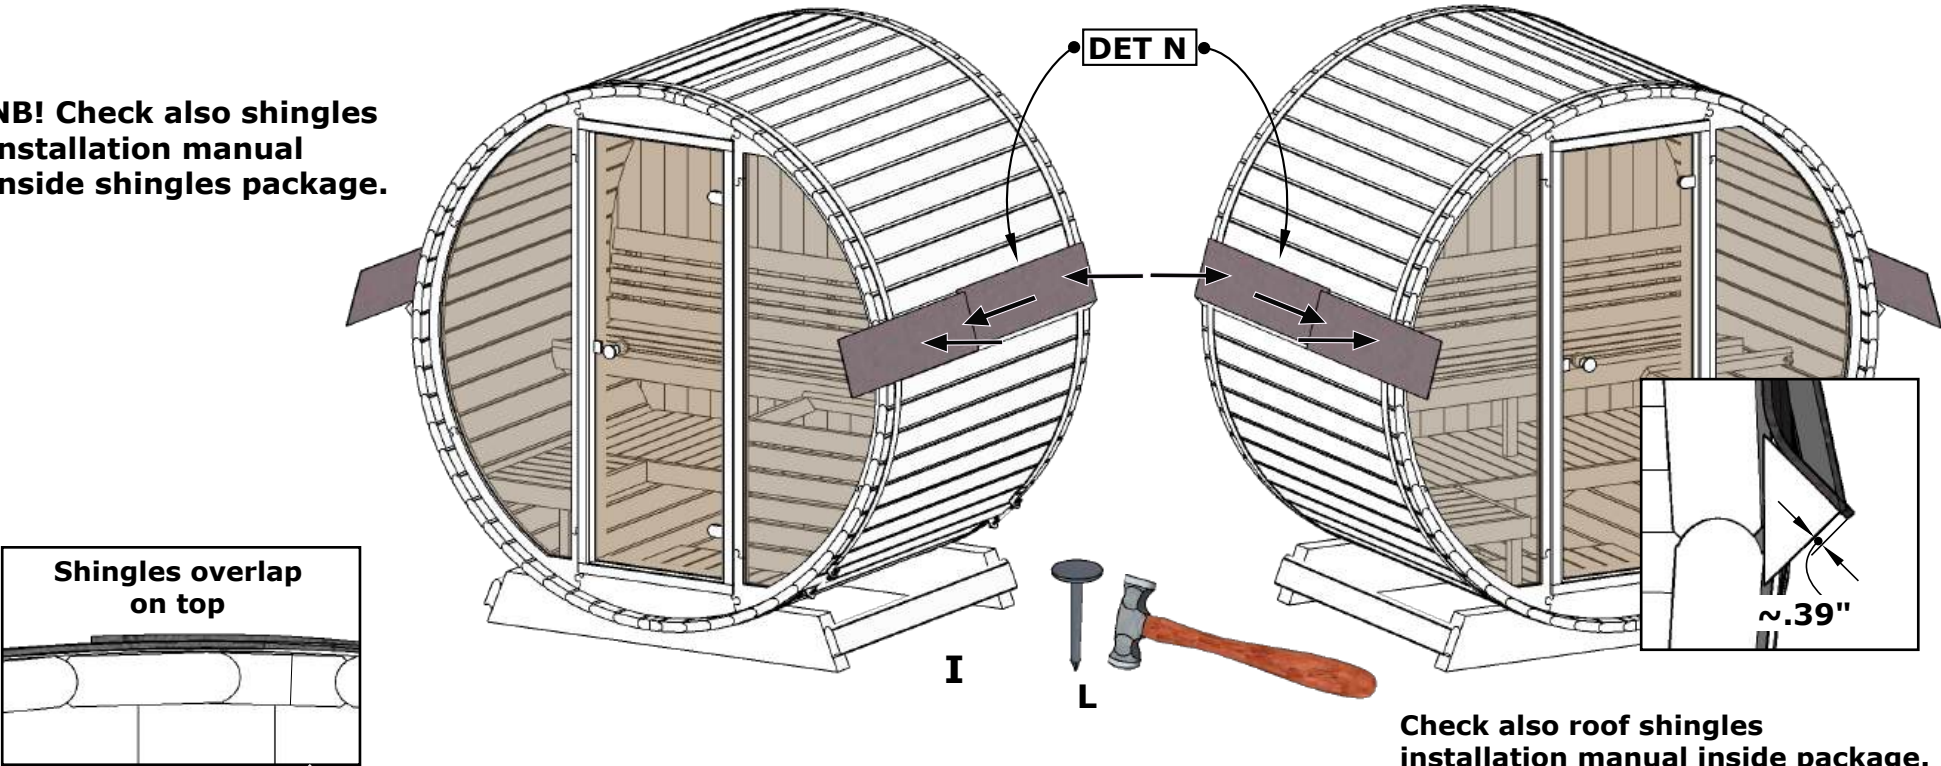

Check also roof shingles installation manual inside package.

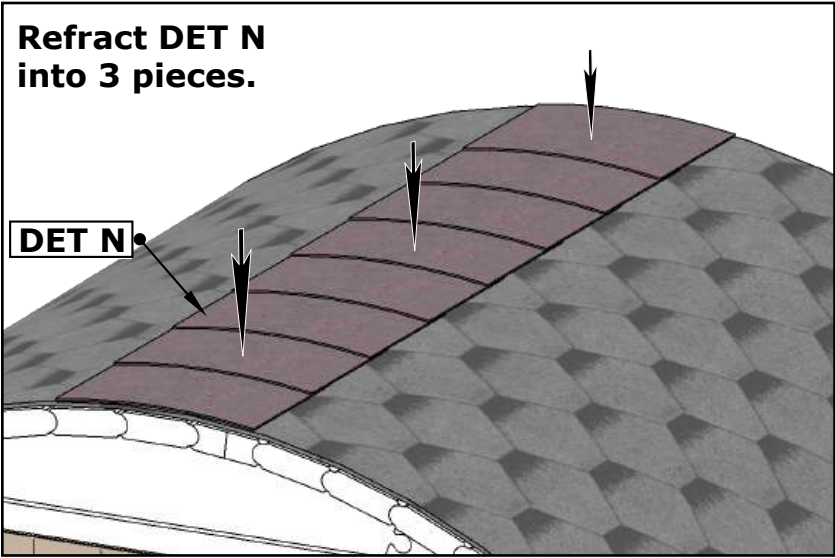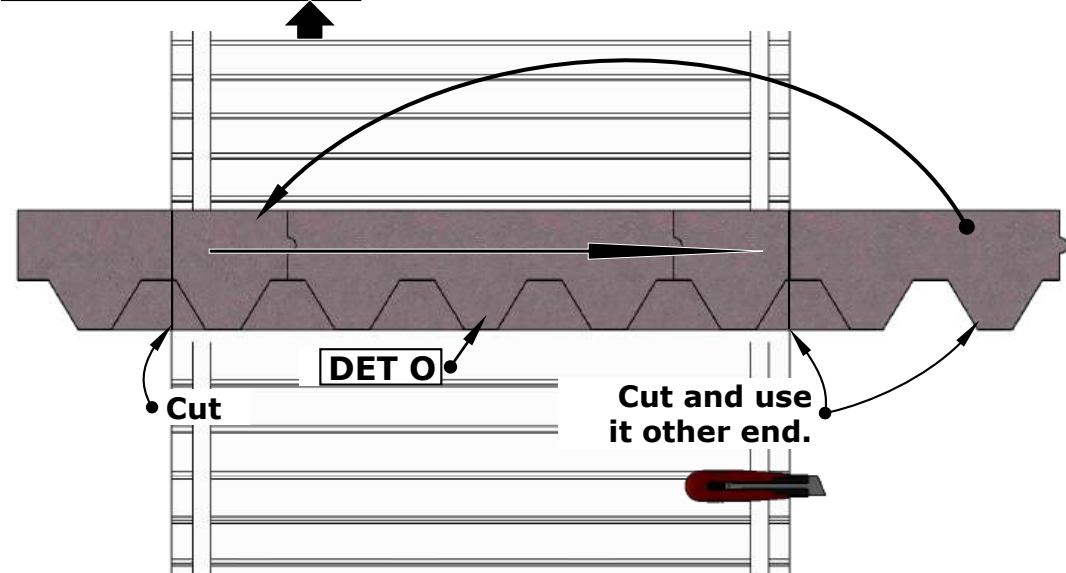


9xDET 25

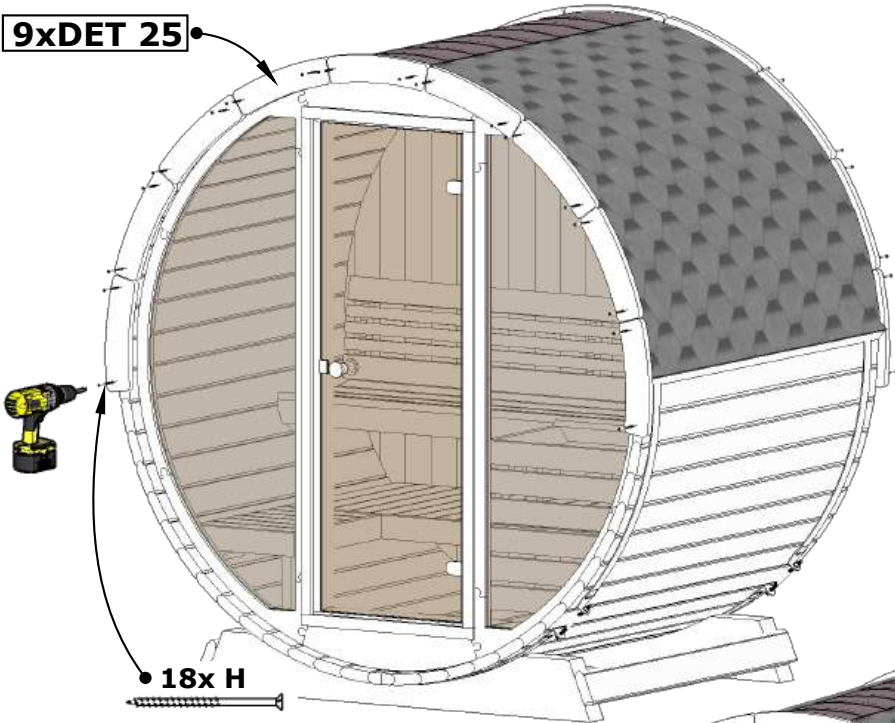

I

9xDET 25

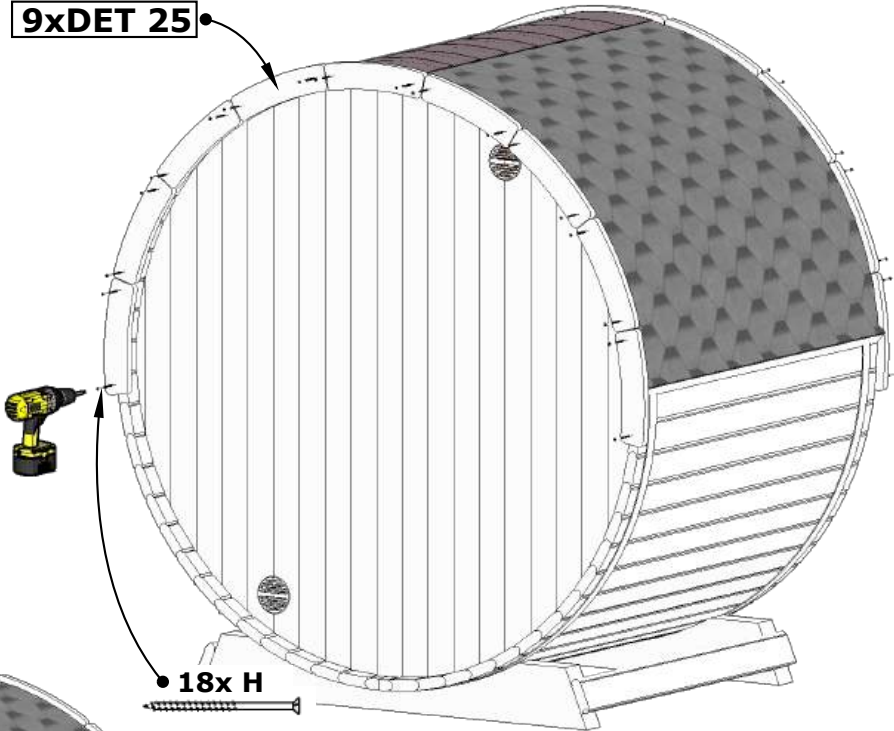

II

