

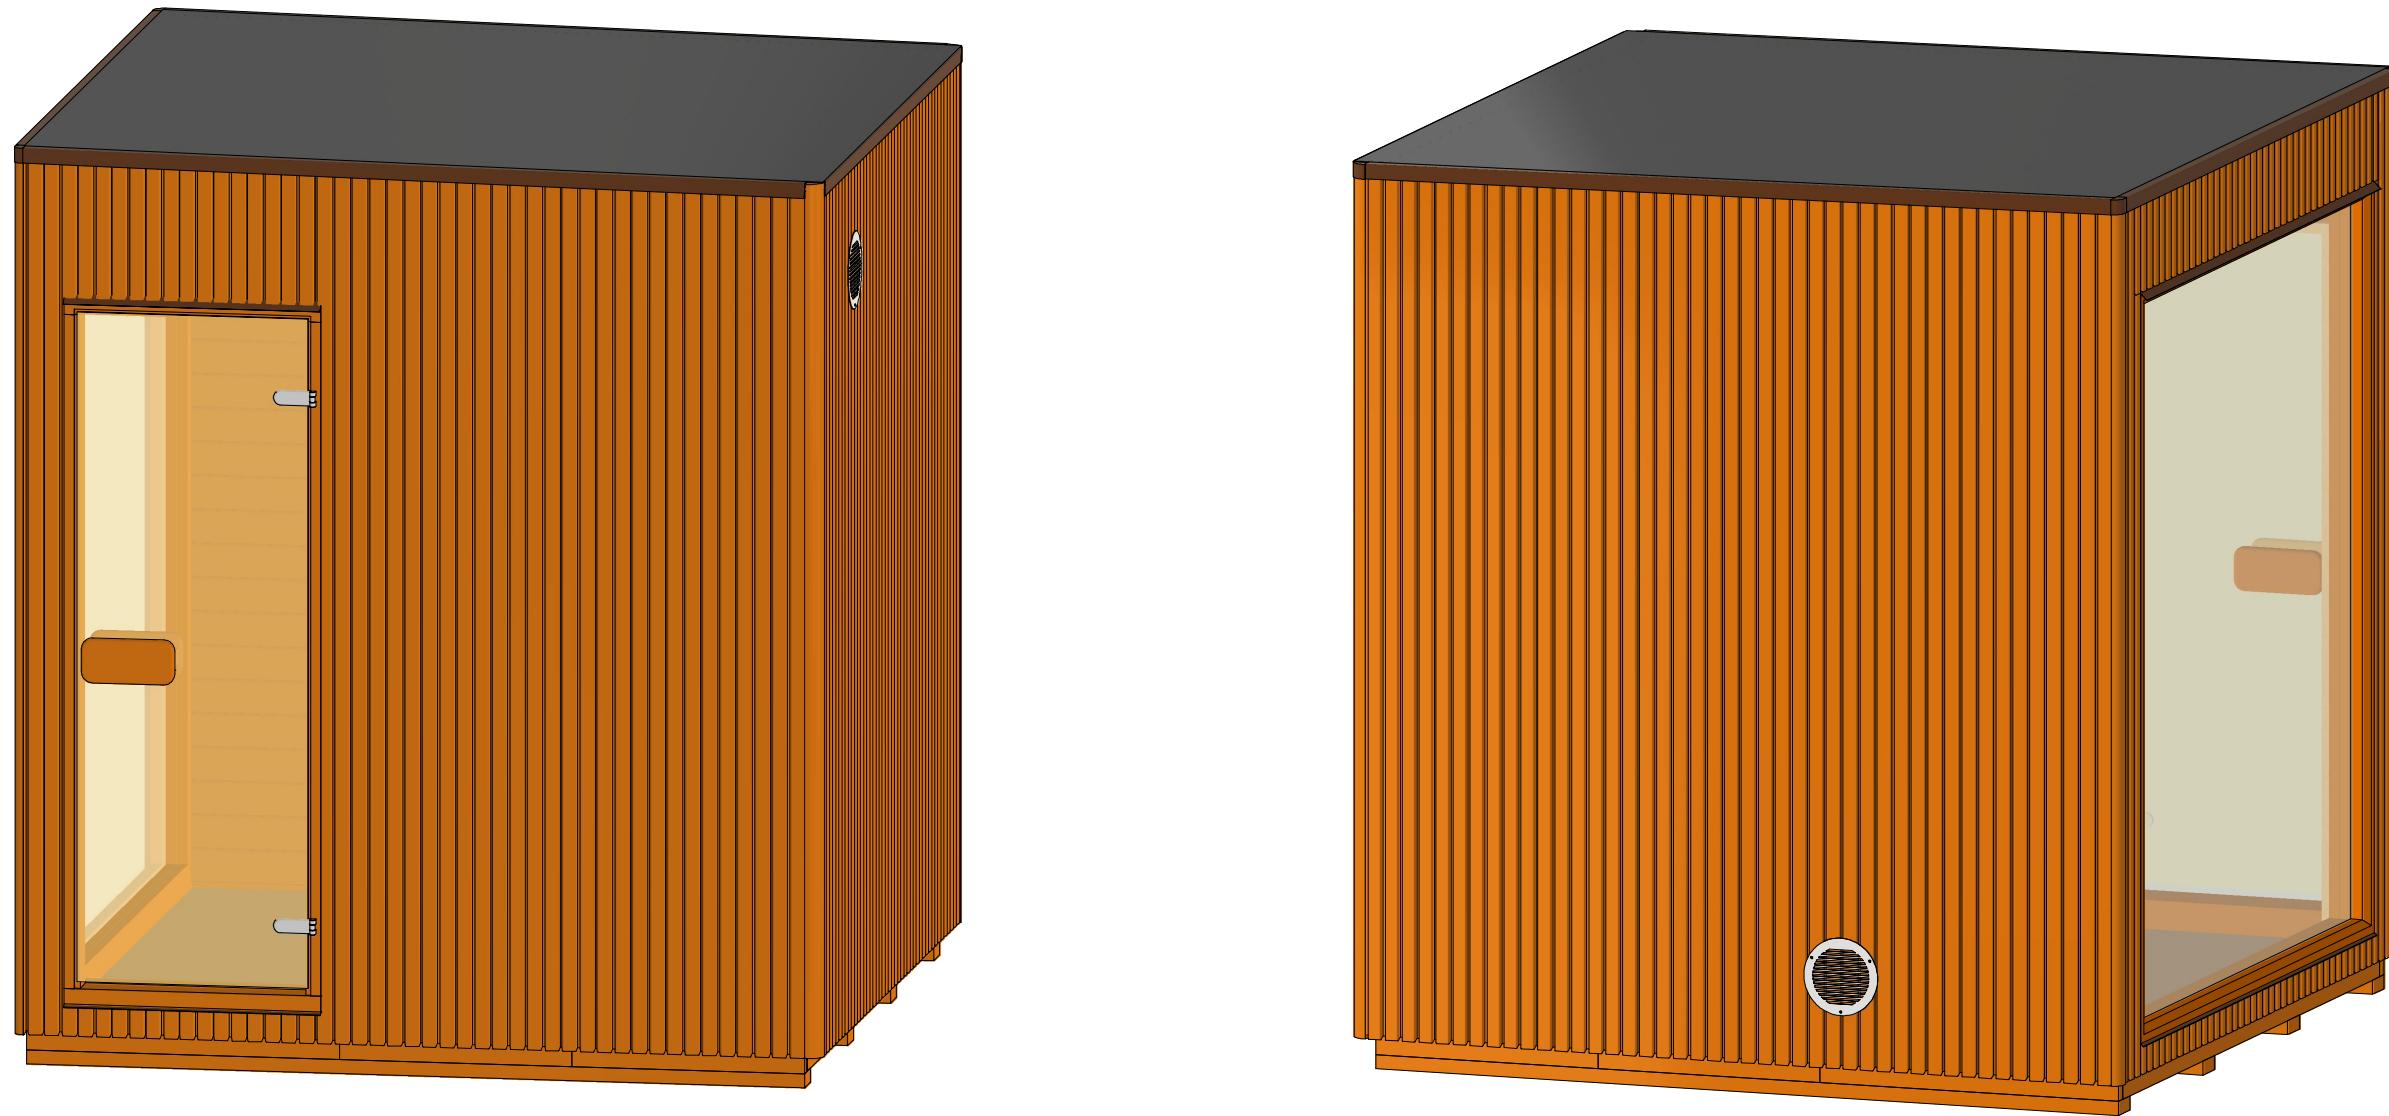
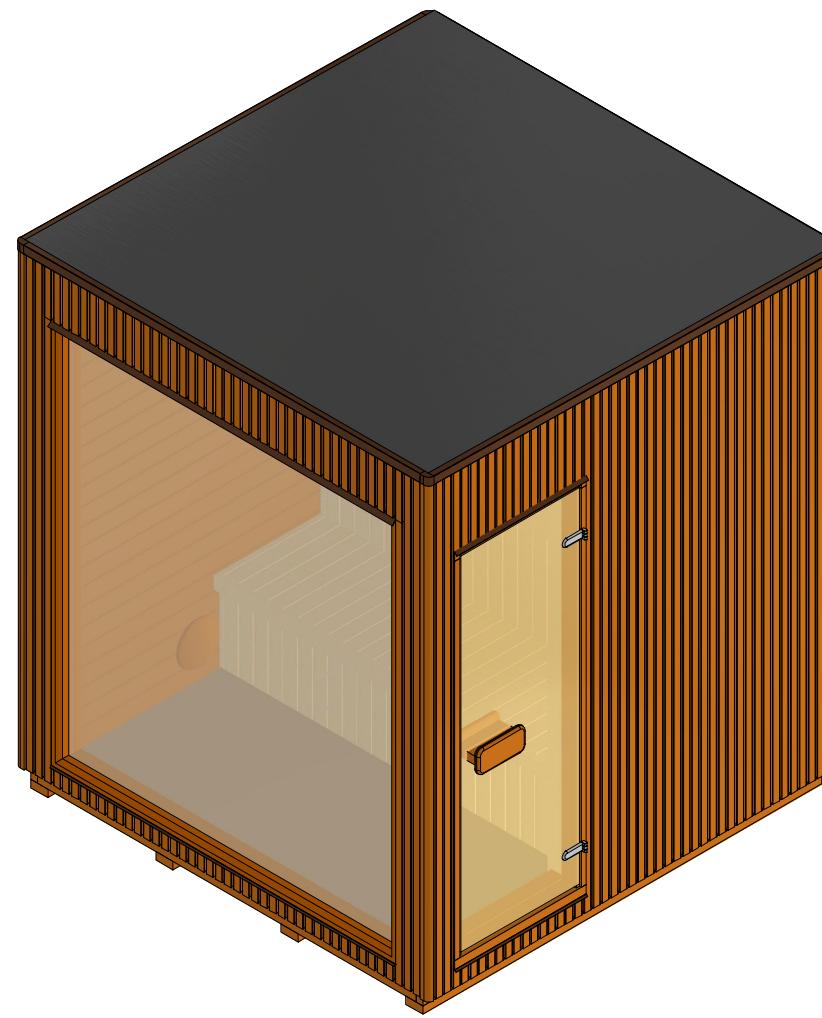
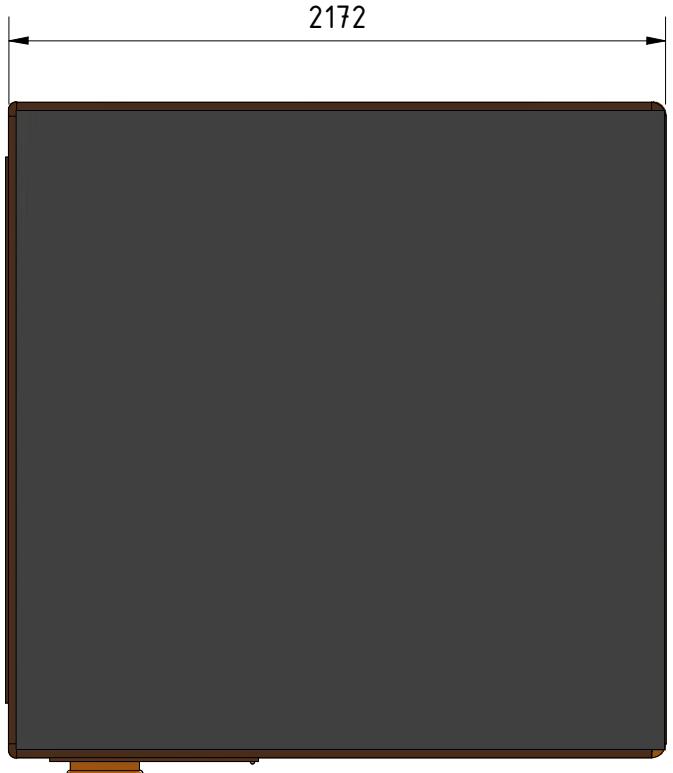


Assembly Manual - Heritage Lux Stromboli Small and Large

*Please note measurements reflect the Stromboli Small

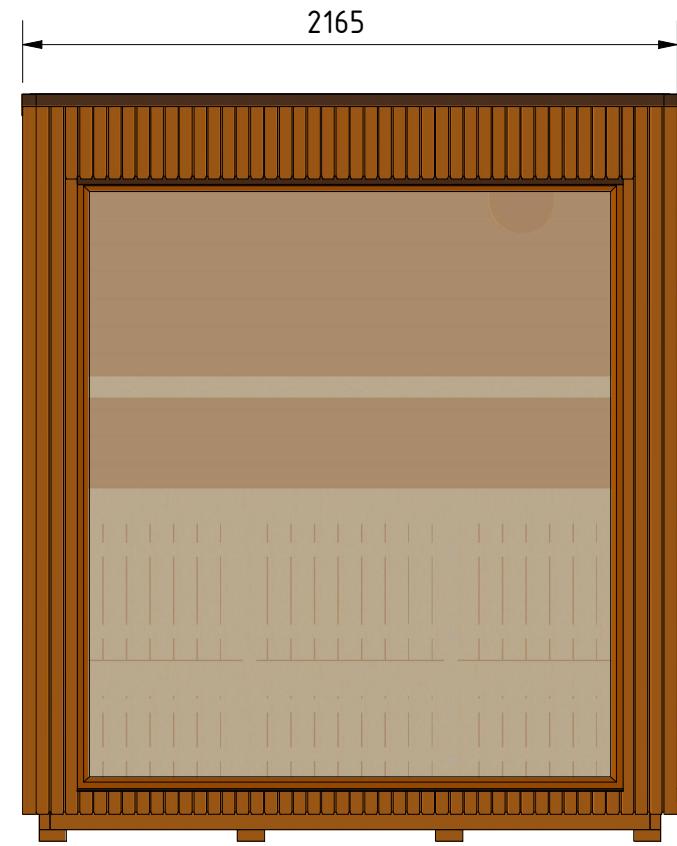


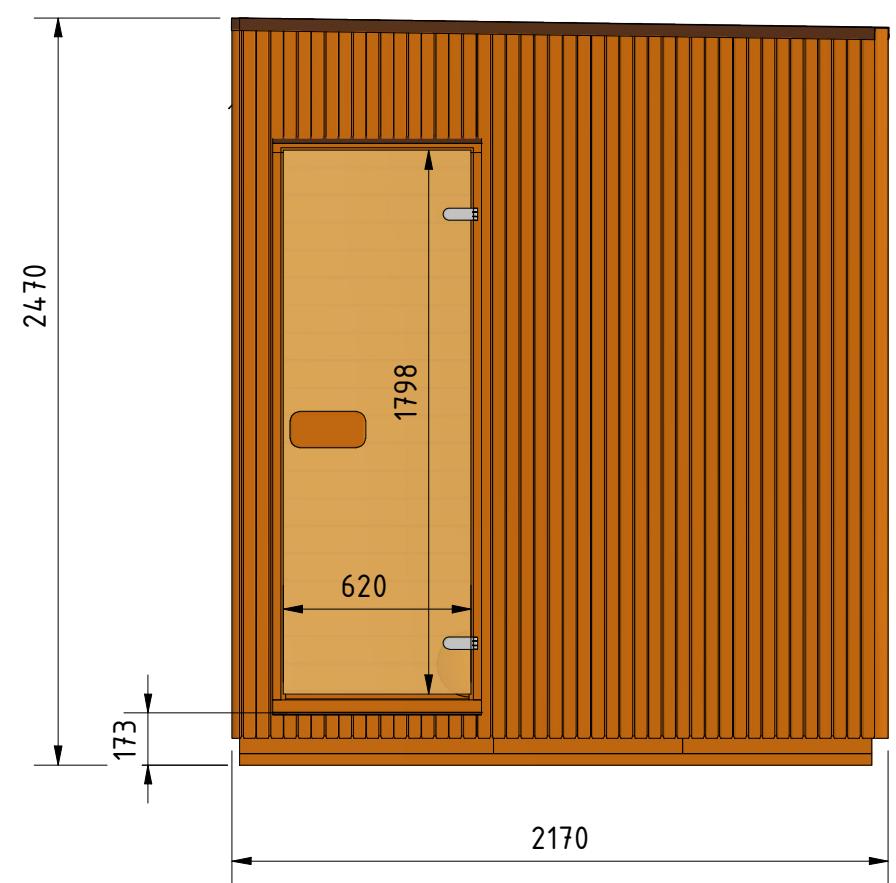


TOOLS NEEDED



CORDLESS DRILL

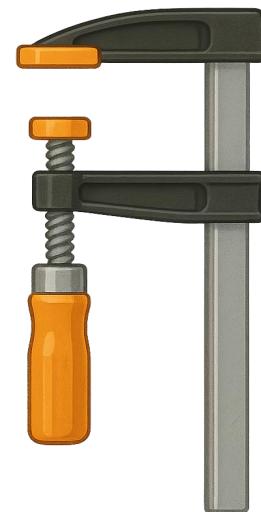

CLAMPS

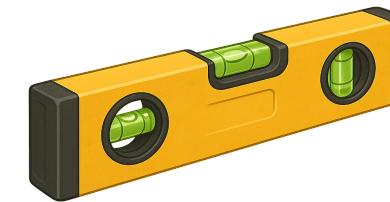

SPIRIT LEVEL



RUBBER HAMMER



NAIL GUN





STEP LADDER









DRILL BITS













JIG SAW

ITEM	QTY	VIEW
1	5	
2	7	
3	2	
4	2	
5	14	
6	1	
7	2	
8	1	
9	1	
10	2	
11	1	
12	1	
13	1	
14	1	
15	2	

ITEM	QTY	VIEW
16	4	
17	1	
18	2	
19	1	
20	1	
21	1	
22	20	
23	20	
24	18	
25	7	
26	1	
27	7	
28	1	
29	1	
30	1	

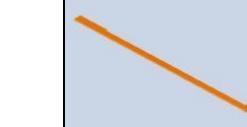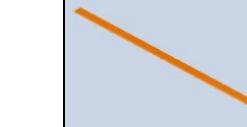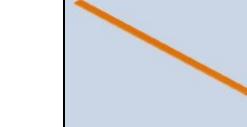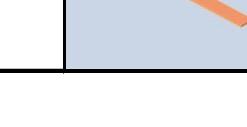
ITEM	QTY	VIEW
31	1	
32	22	
33	11	
34	2	
35	2	
36	1	
37	1	
38	1	
39	1	
40	1	
41	1	
42	19	
43	23	
44	1	
45	21	

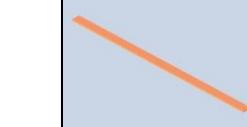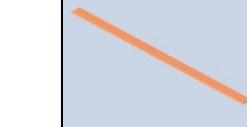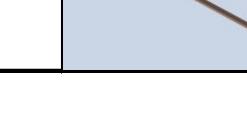ITEM	QTY	VIEW
46	2	
47	1	
48	25	
49	200	
50	50	
51	50	
52	50	
53	150	
54	250	
55	1	
56	1	
57	1	
58	4	
60	1	
62	2	

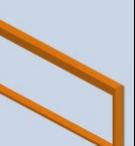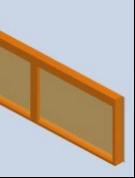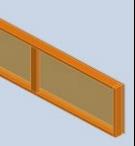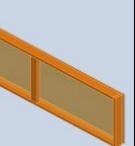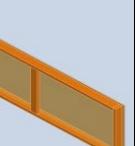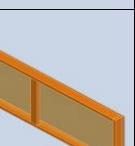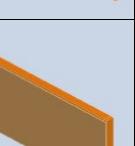
ITEM	QTY	VIEW
63	1	
64	1	
66	1	
67	1	
68	1	
69	1	
70	1	
ADR	1	
AL	1	
B	2	
CL	1	
CR	1	
D	2	
RA	1	
RB	1	

ITEM	QTY	VIEW
RC	1	
VENT	2	


EXTERIOR VIEW SIDES

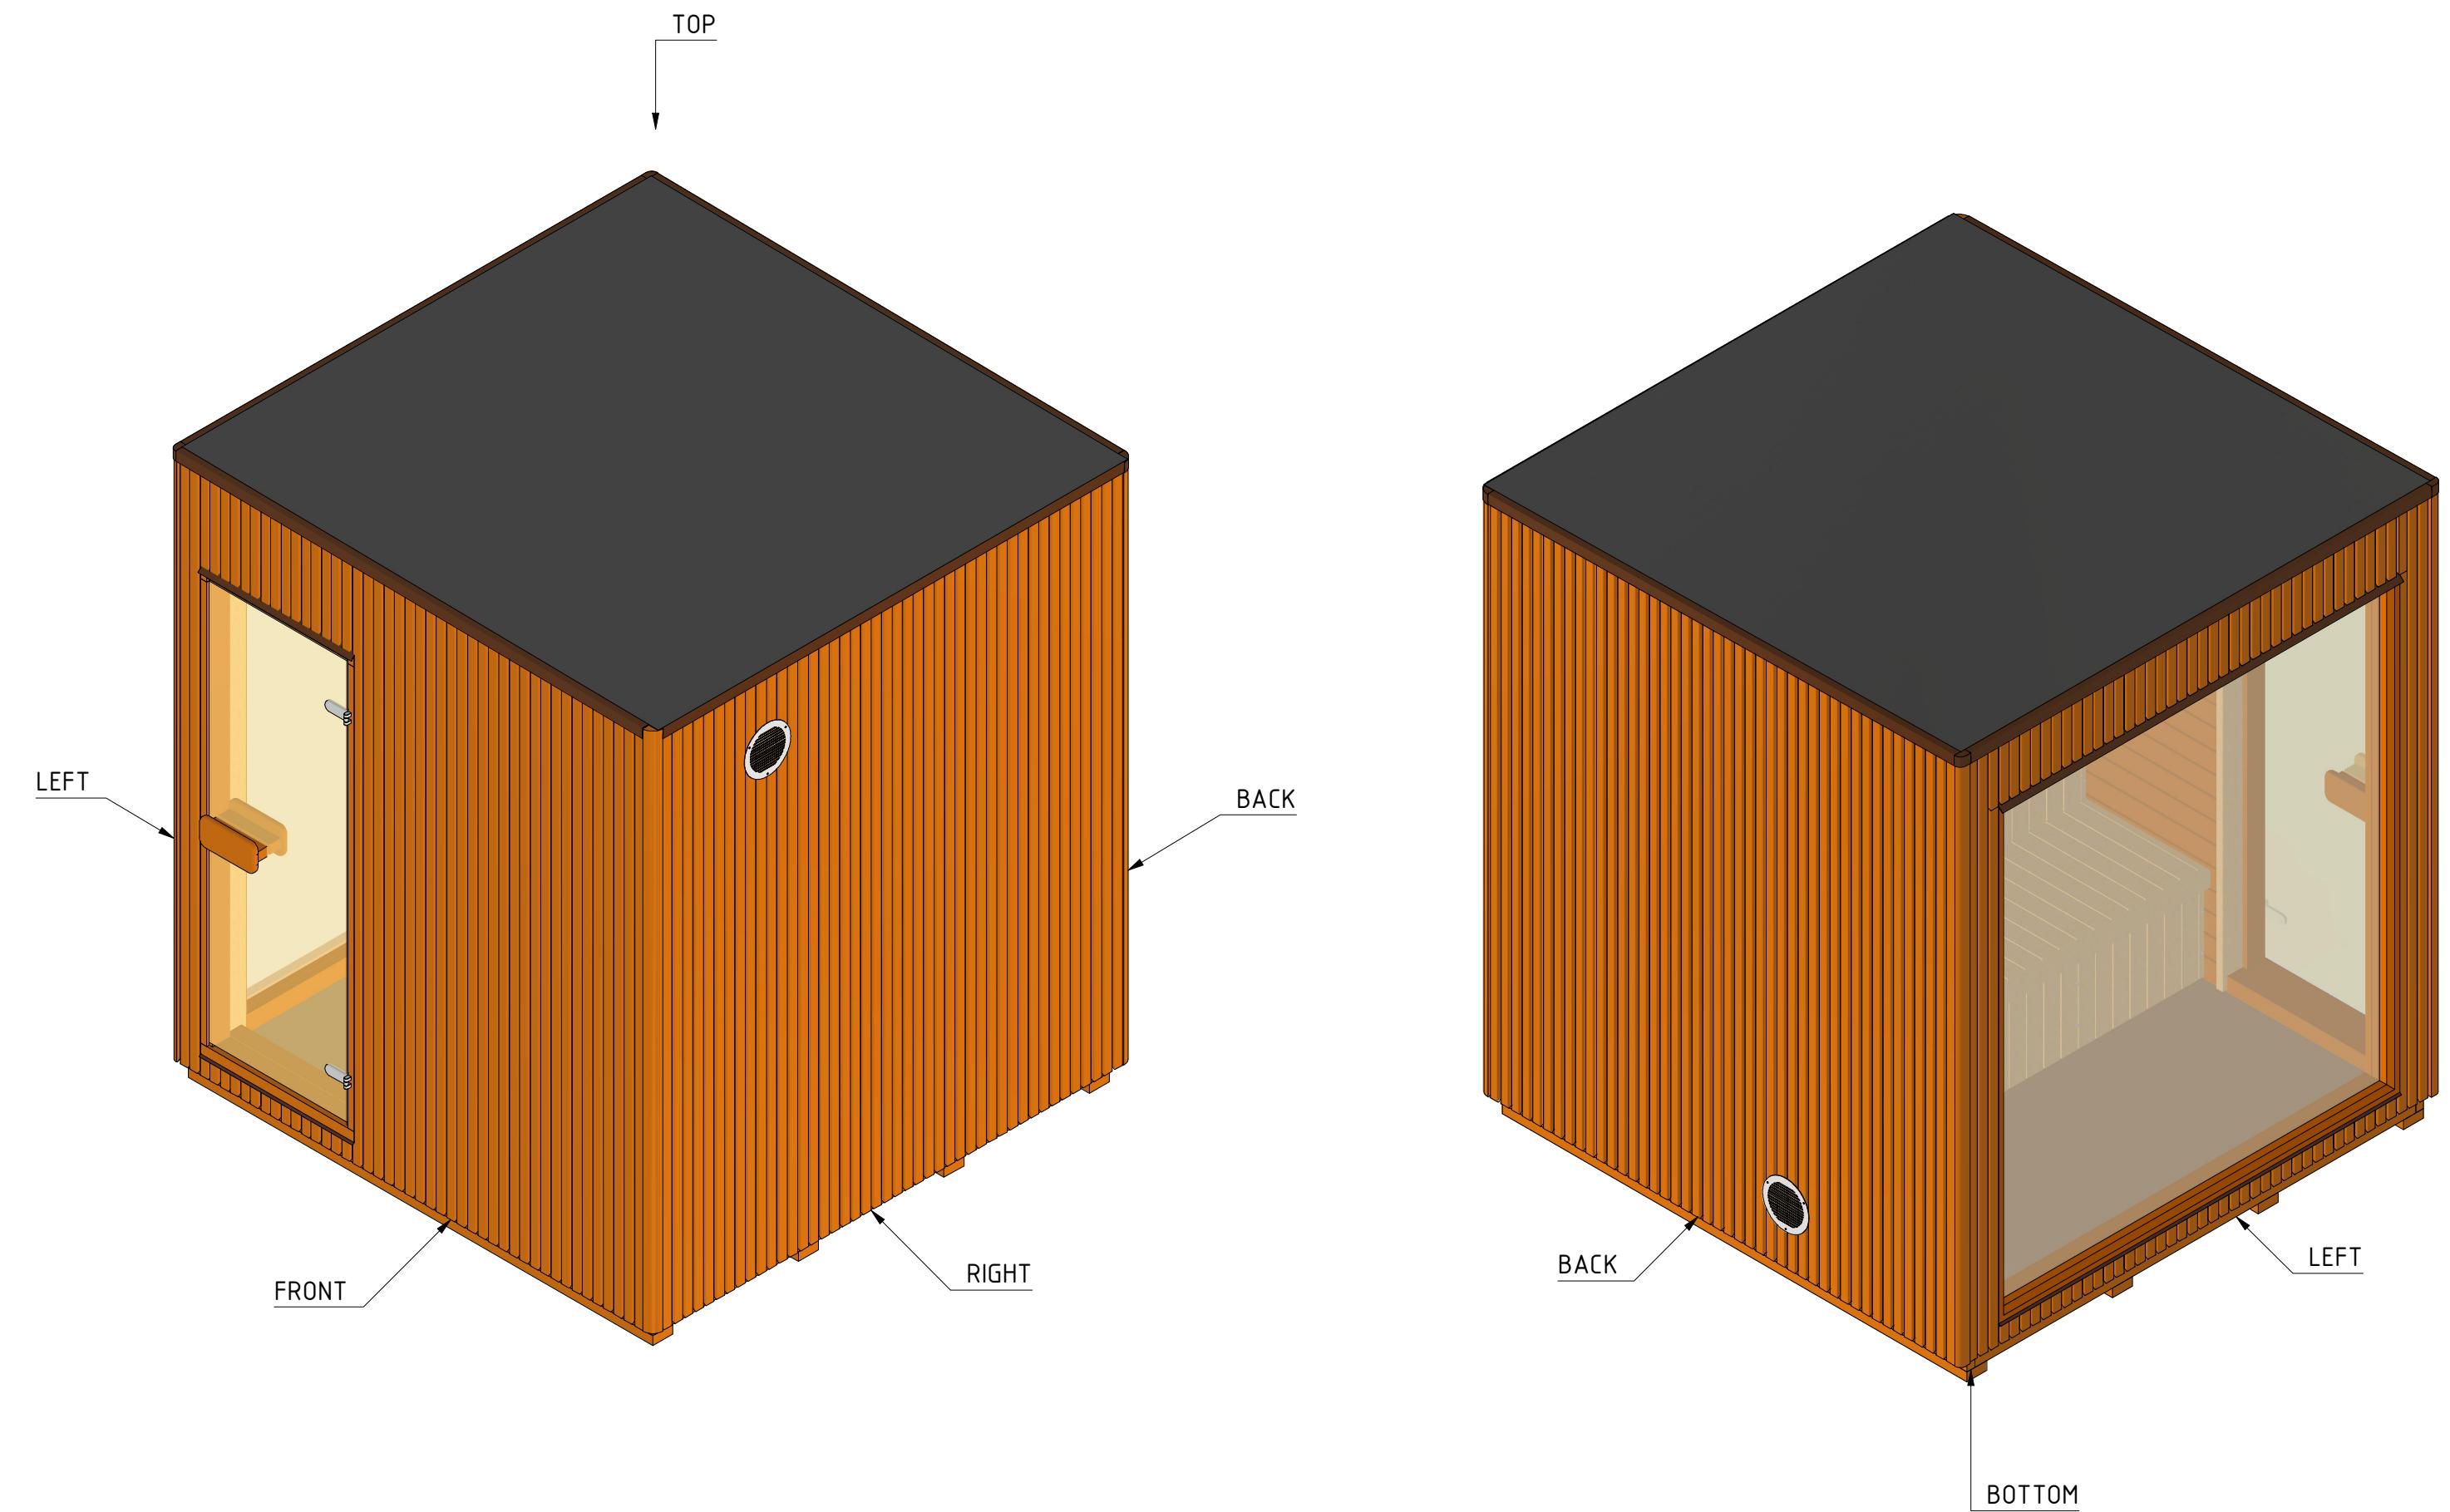



Step 1. Assemble bottom base.

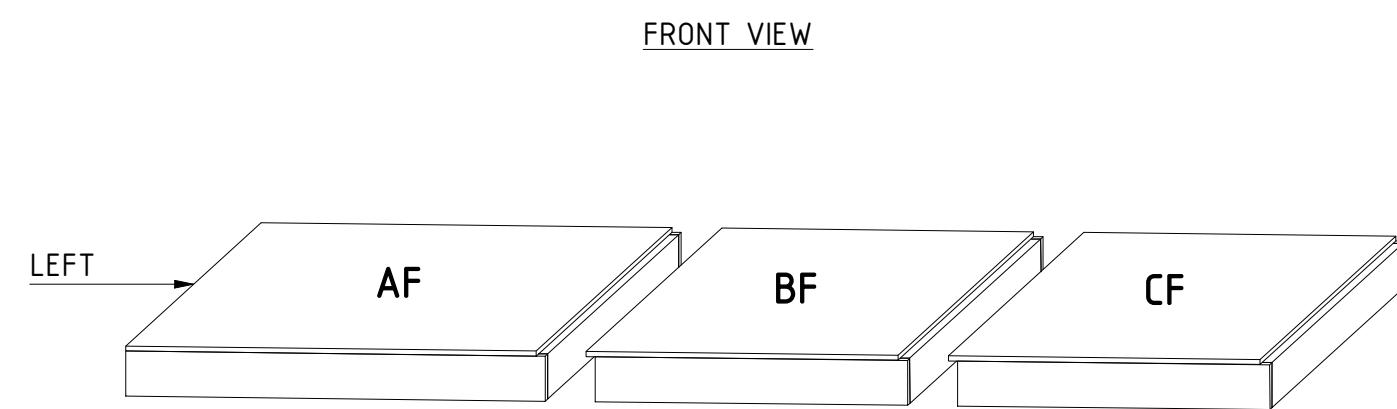

BOTTOM VIEW

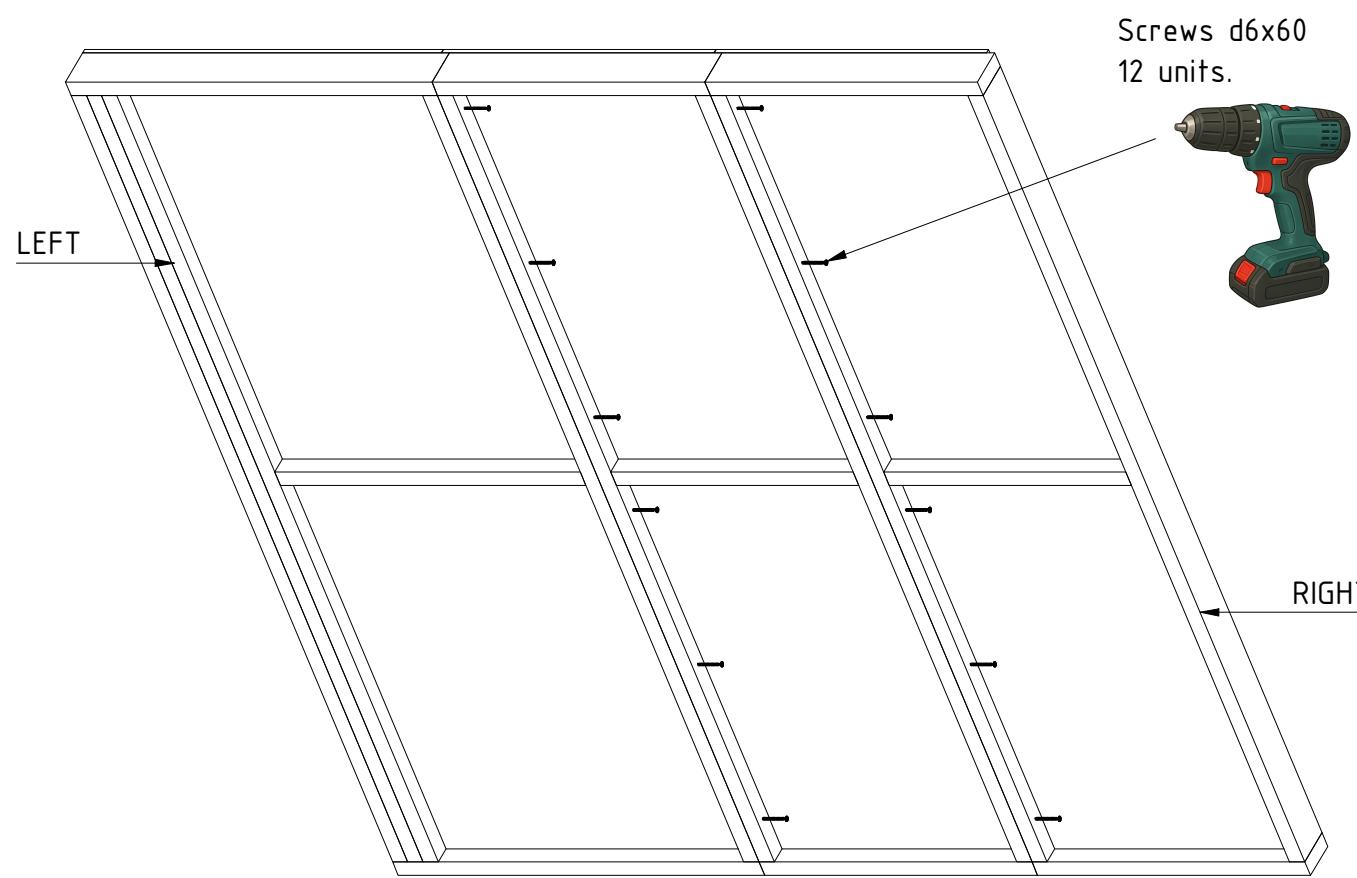


Connect base panels with d6x60 screws.
Use spirit level.

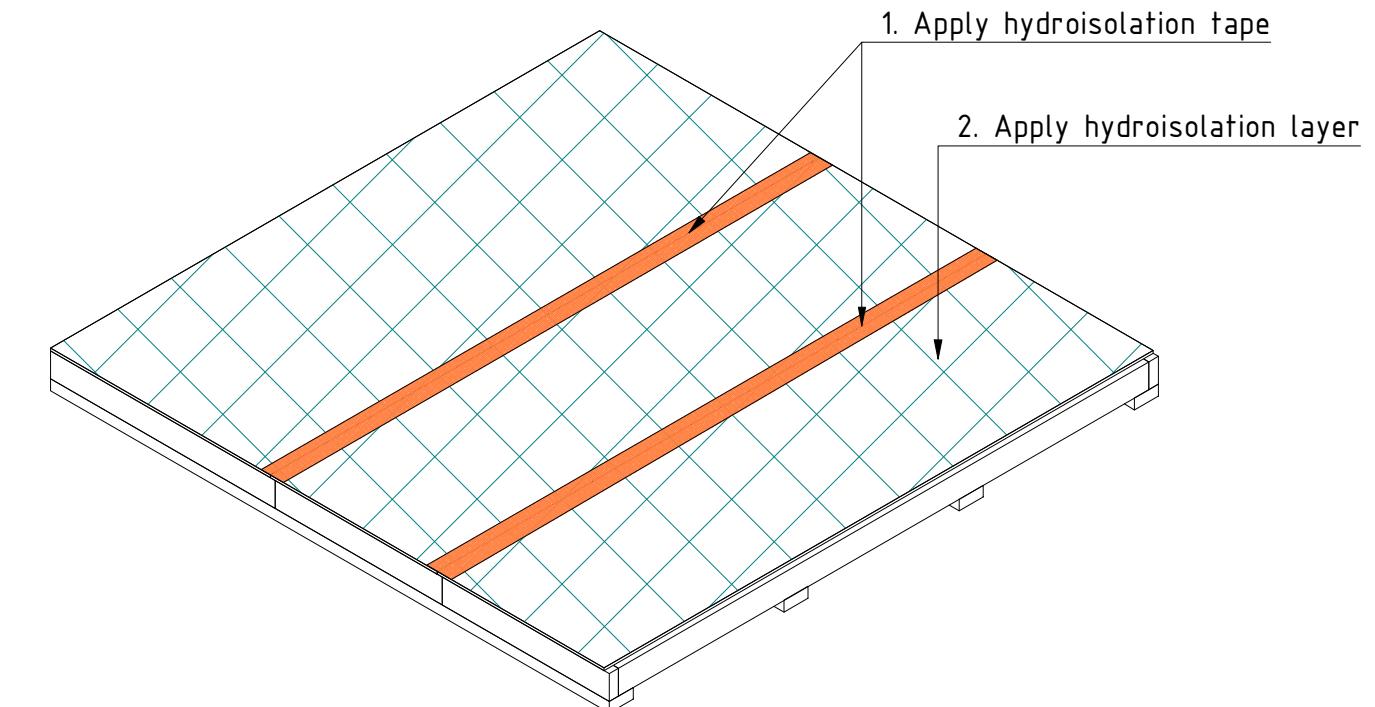
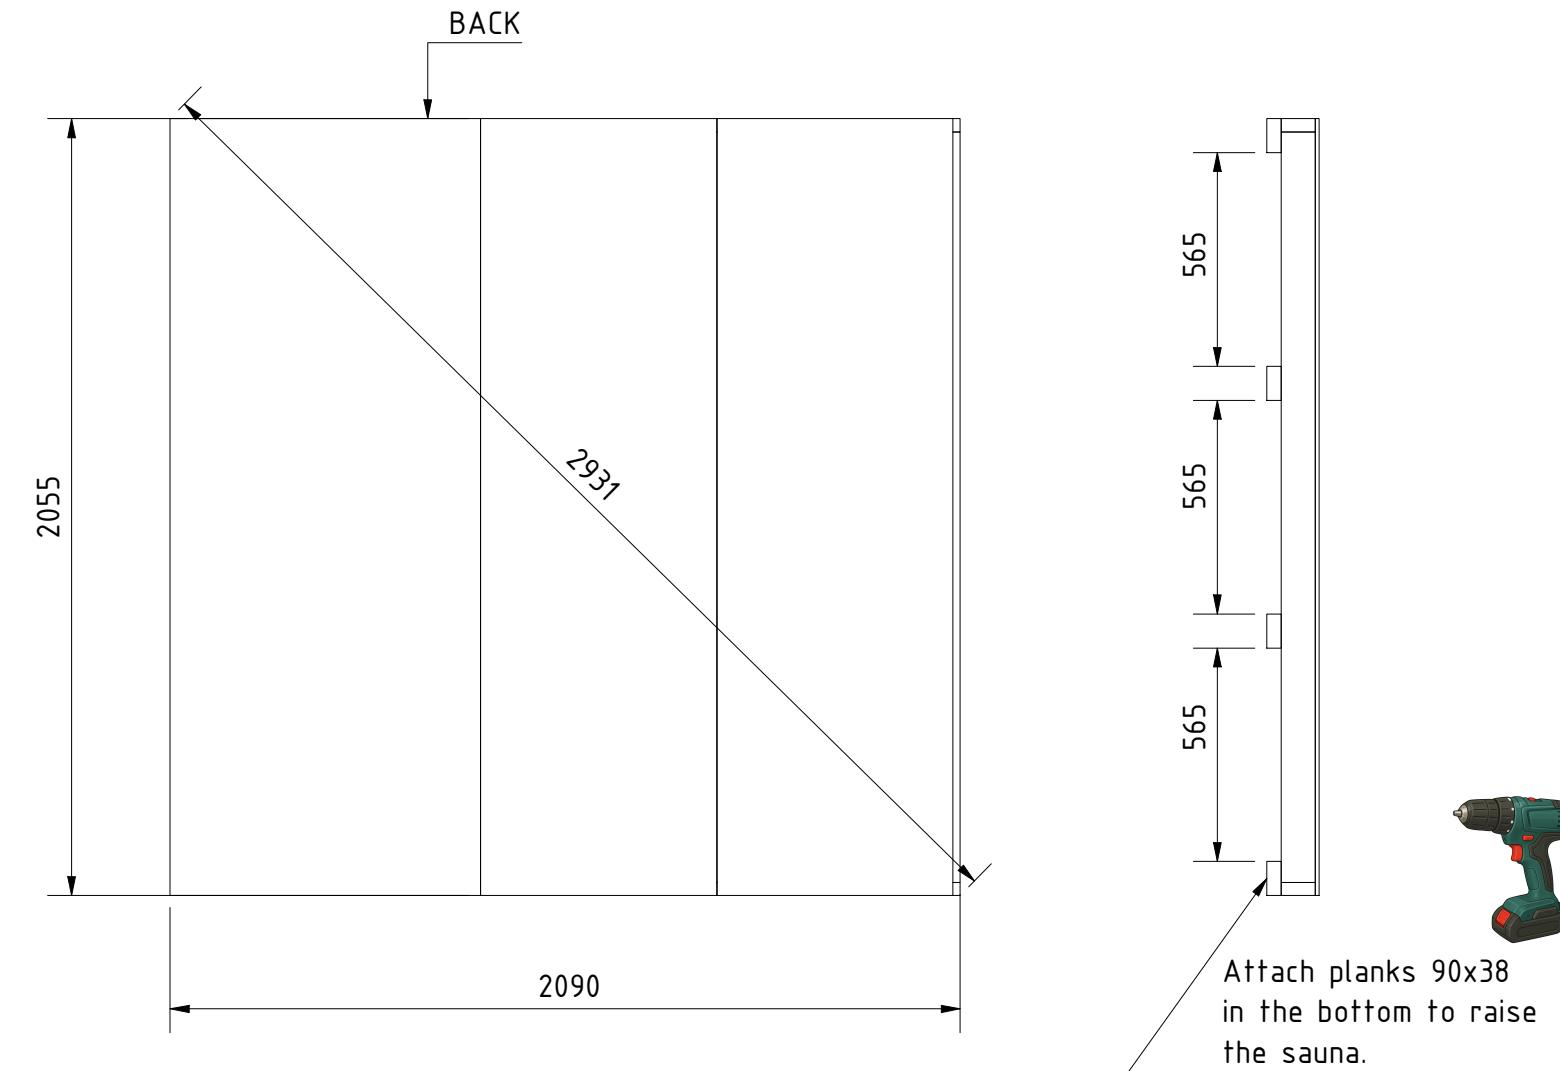


Step 2. Back walls assembly.

FRONT VIEW

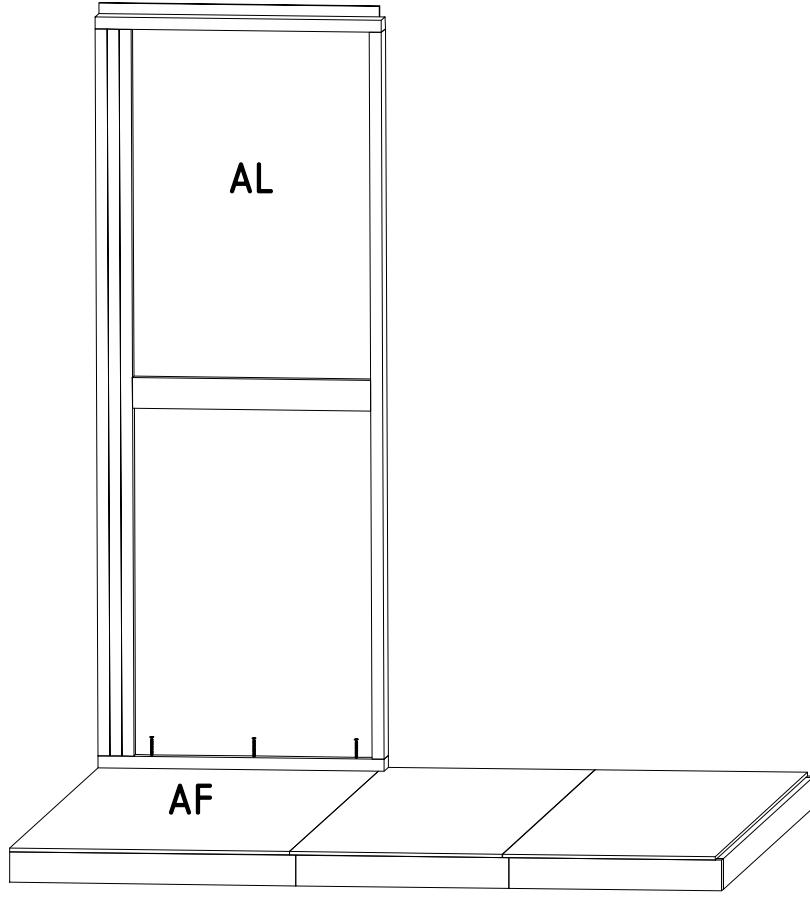

Use spirit level to get the plain.

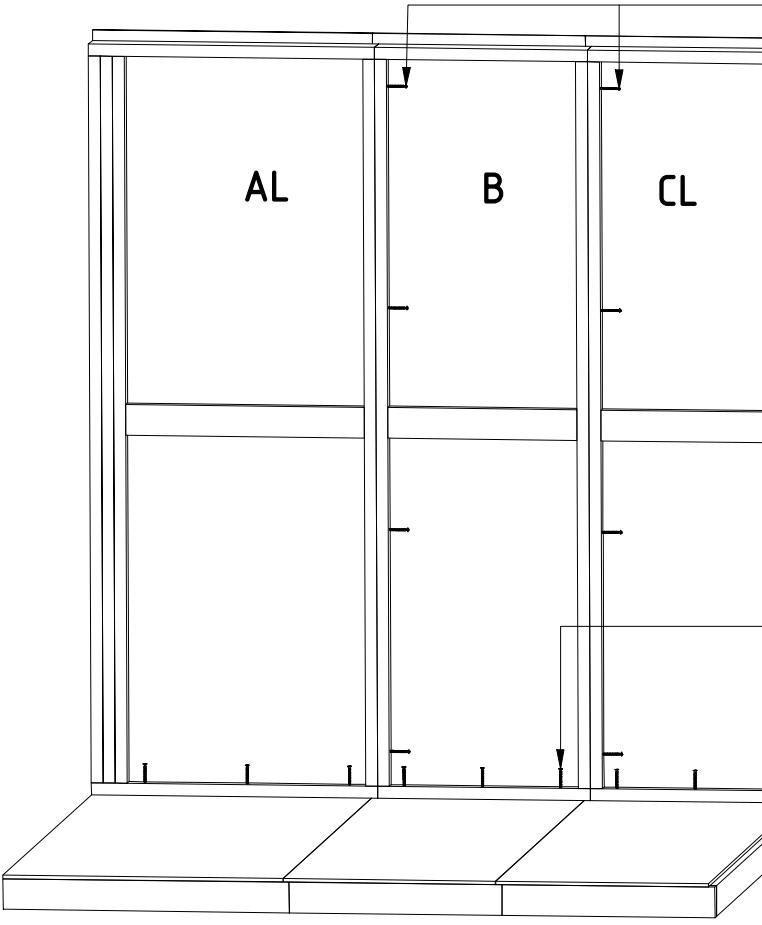

Screws d8x60 mm,
6 units.





Screws d6x60 mm,
6 units.



Screws d6x60 mm,
6 units.



Step 3. Continue wall assembly.

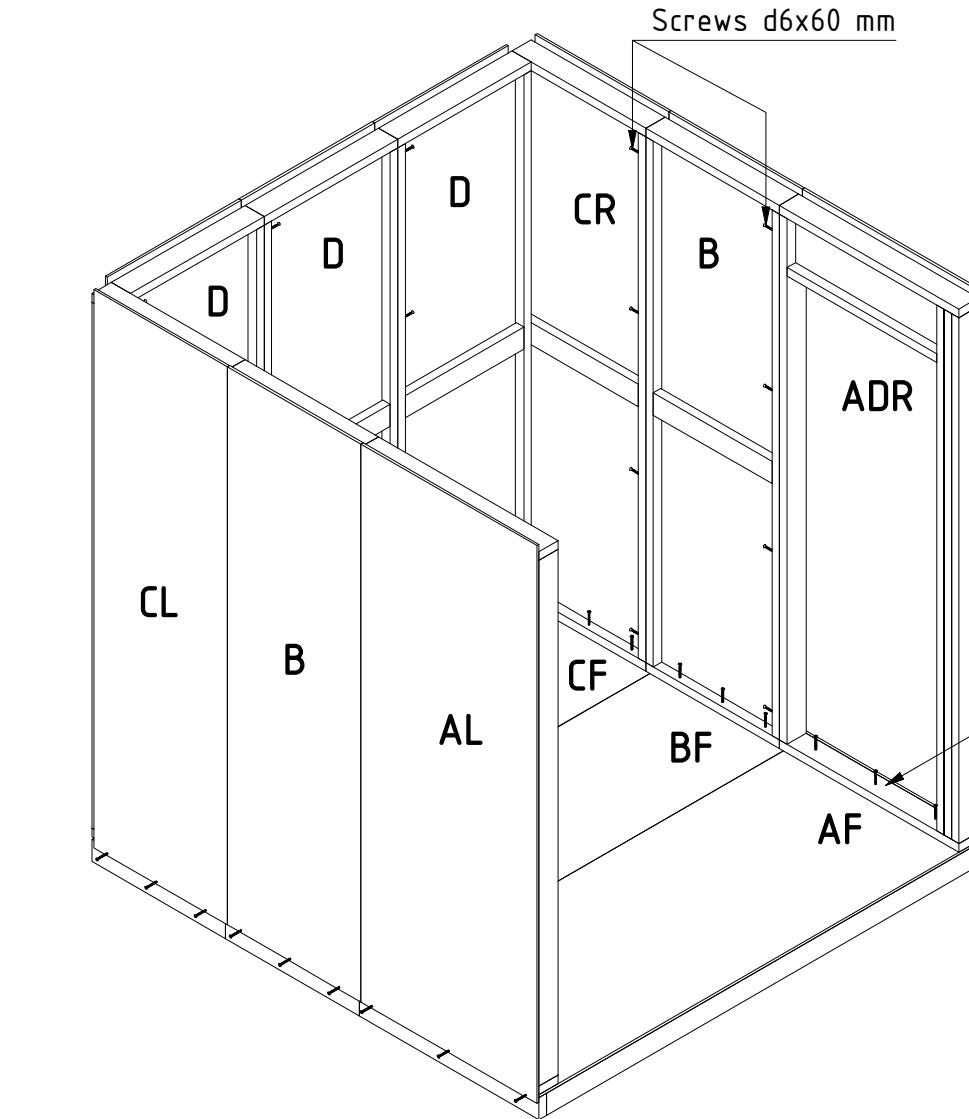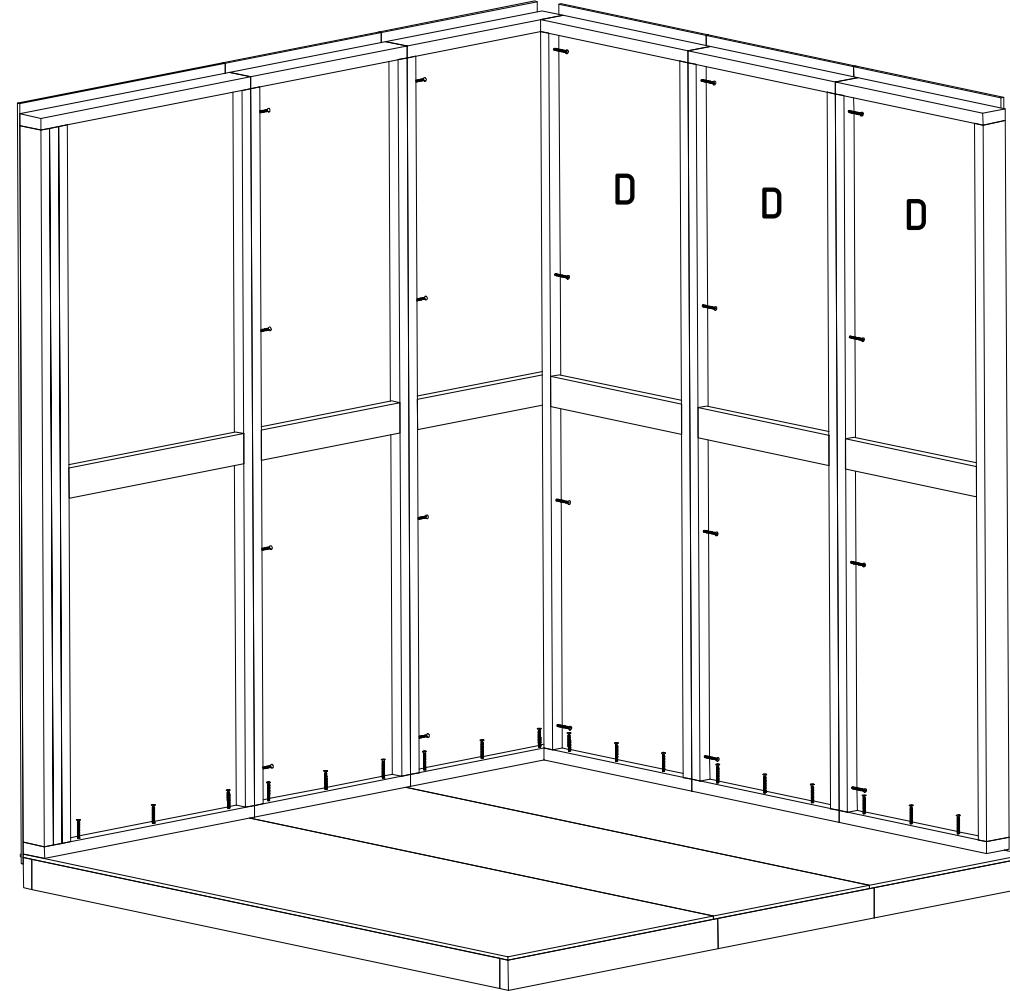

Screws d6x60 mm





Step 3.1. Screw placement from outside to panels.

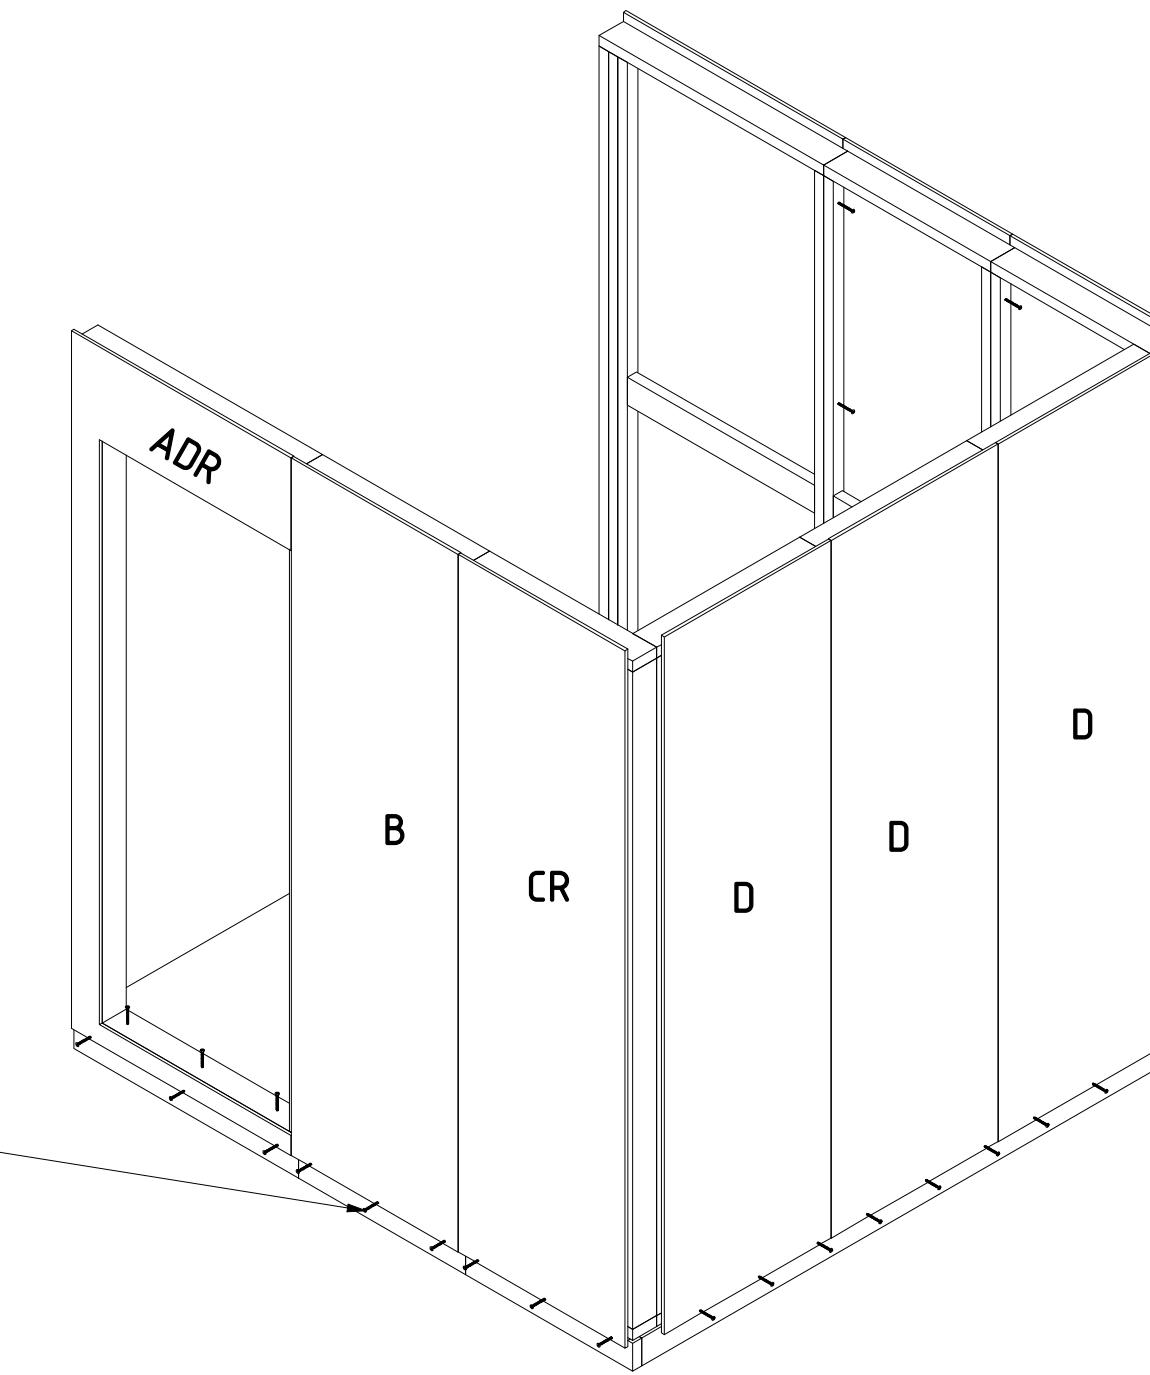
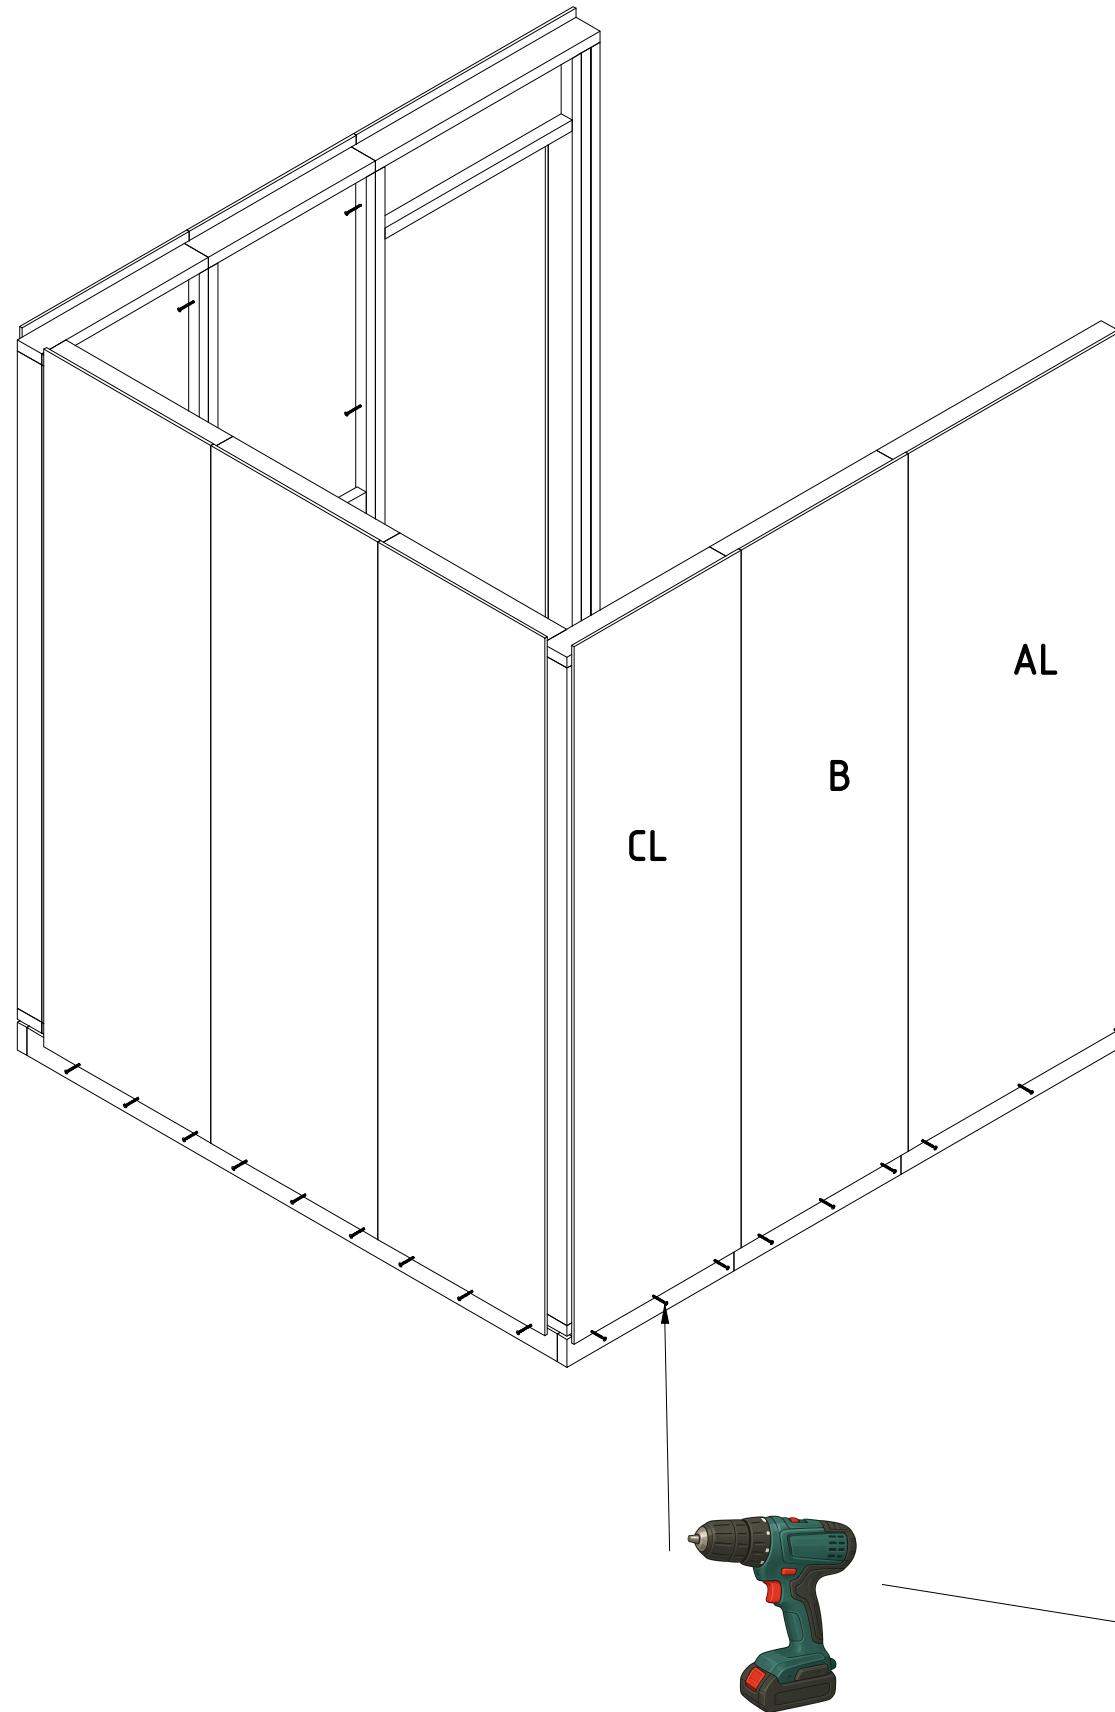


Typical screw placement



EXTERNAL VIEW

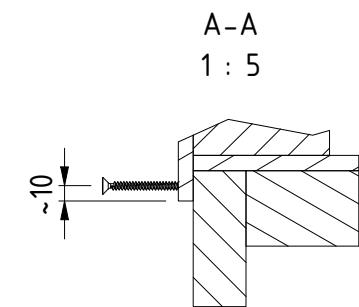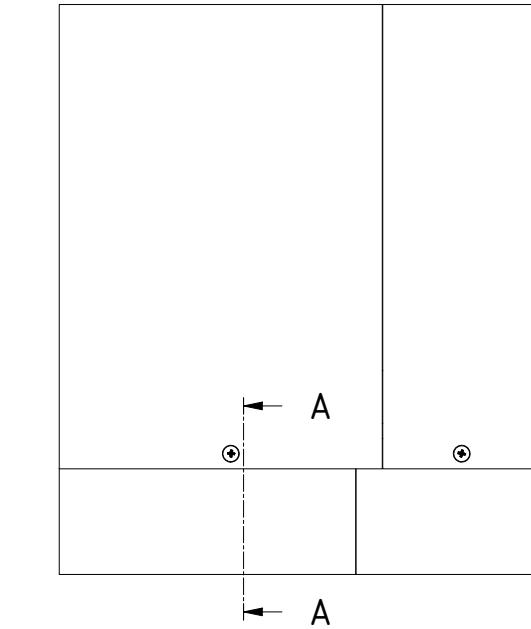



Step 4. Top assembly.

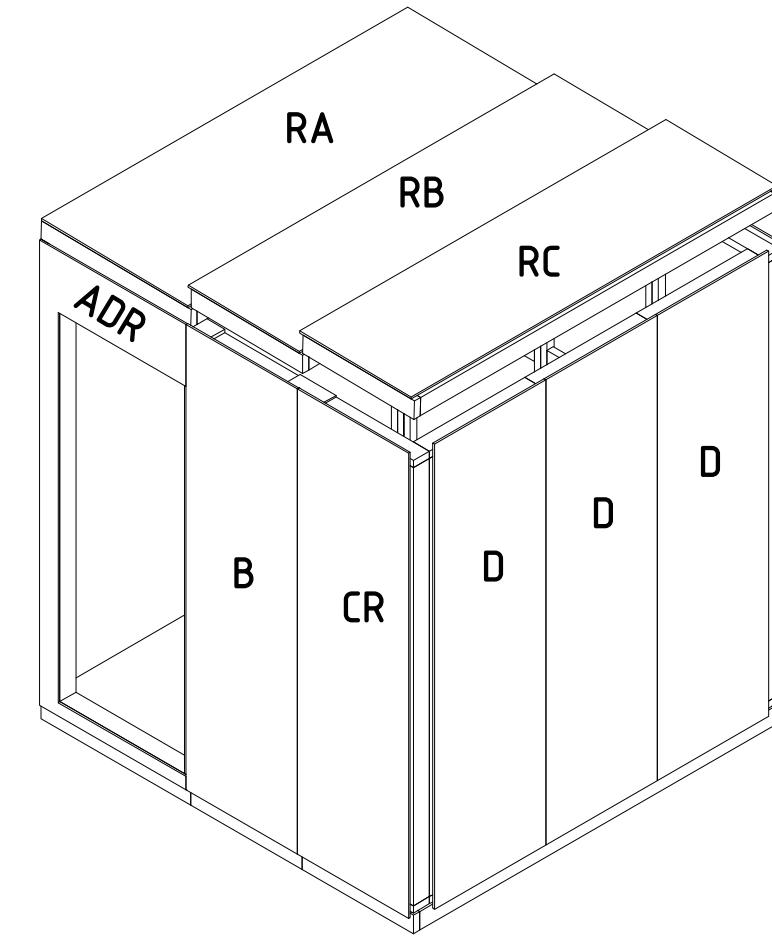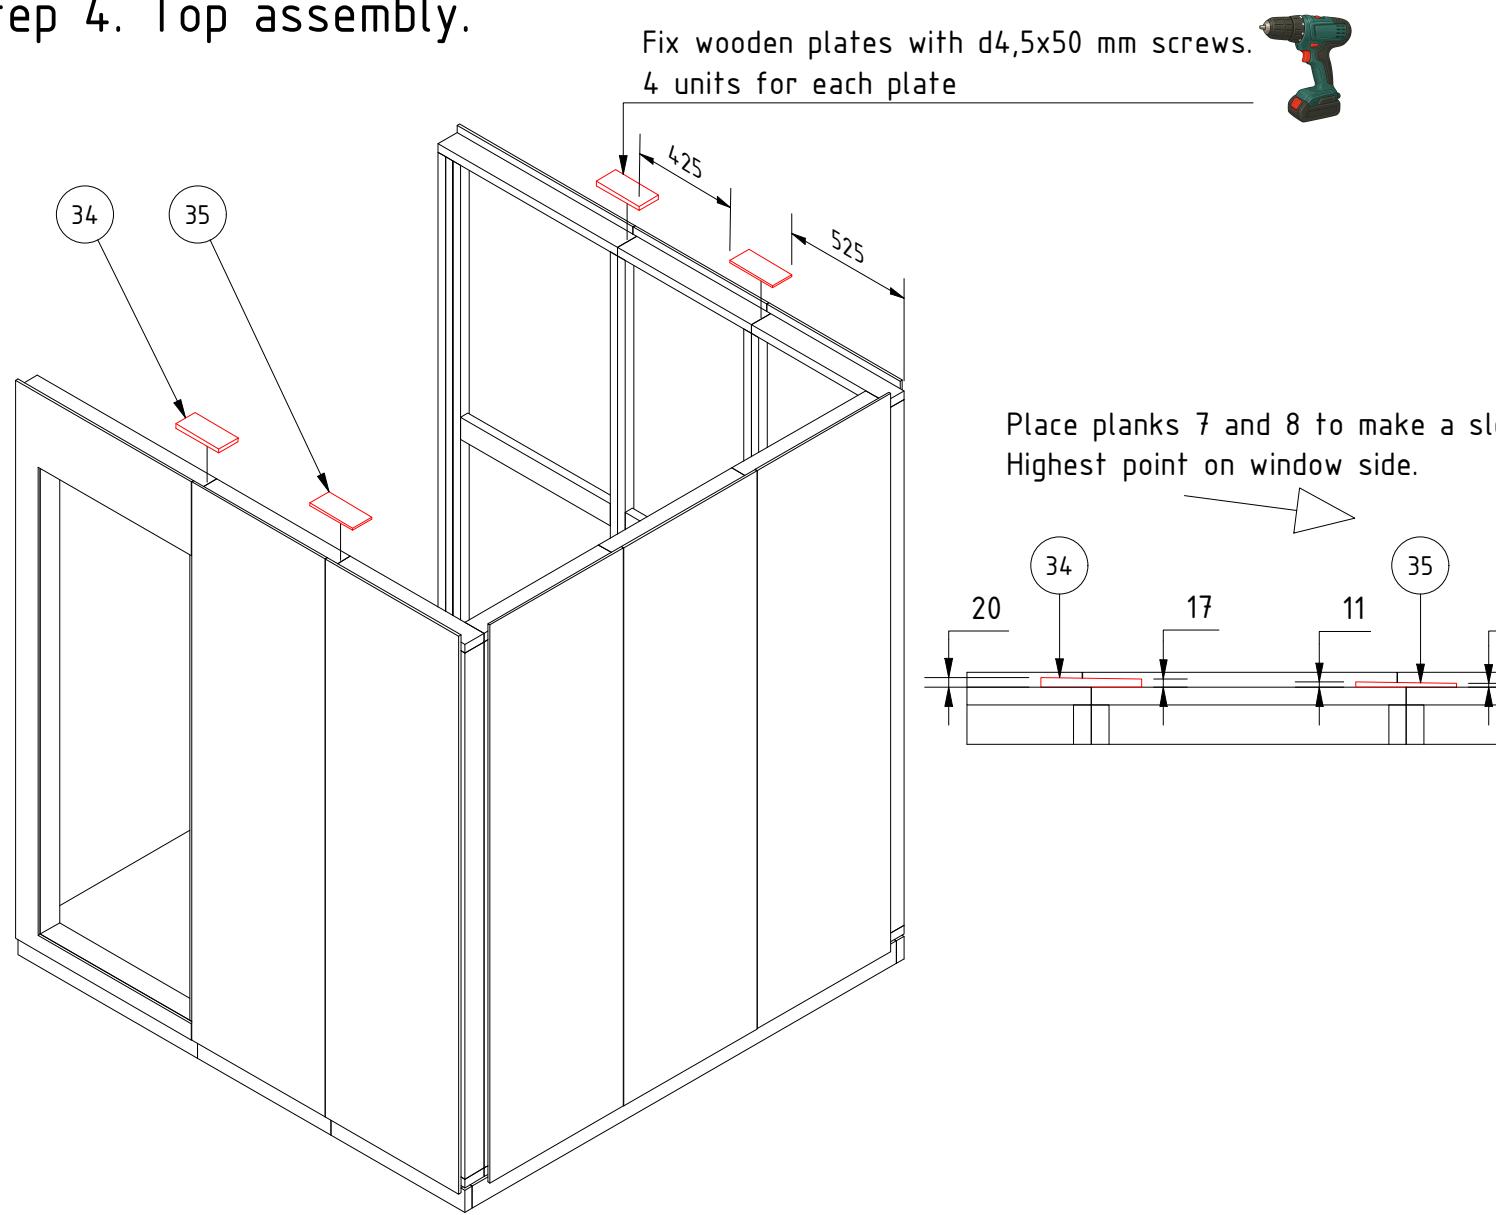


VIEW FROM THE INSIDE

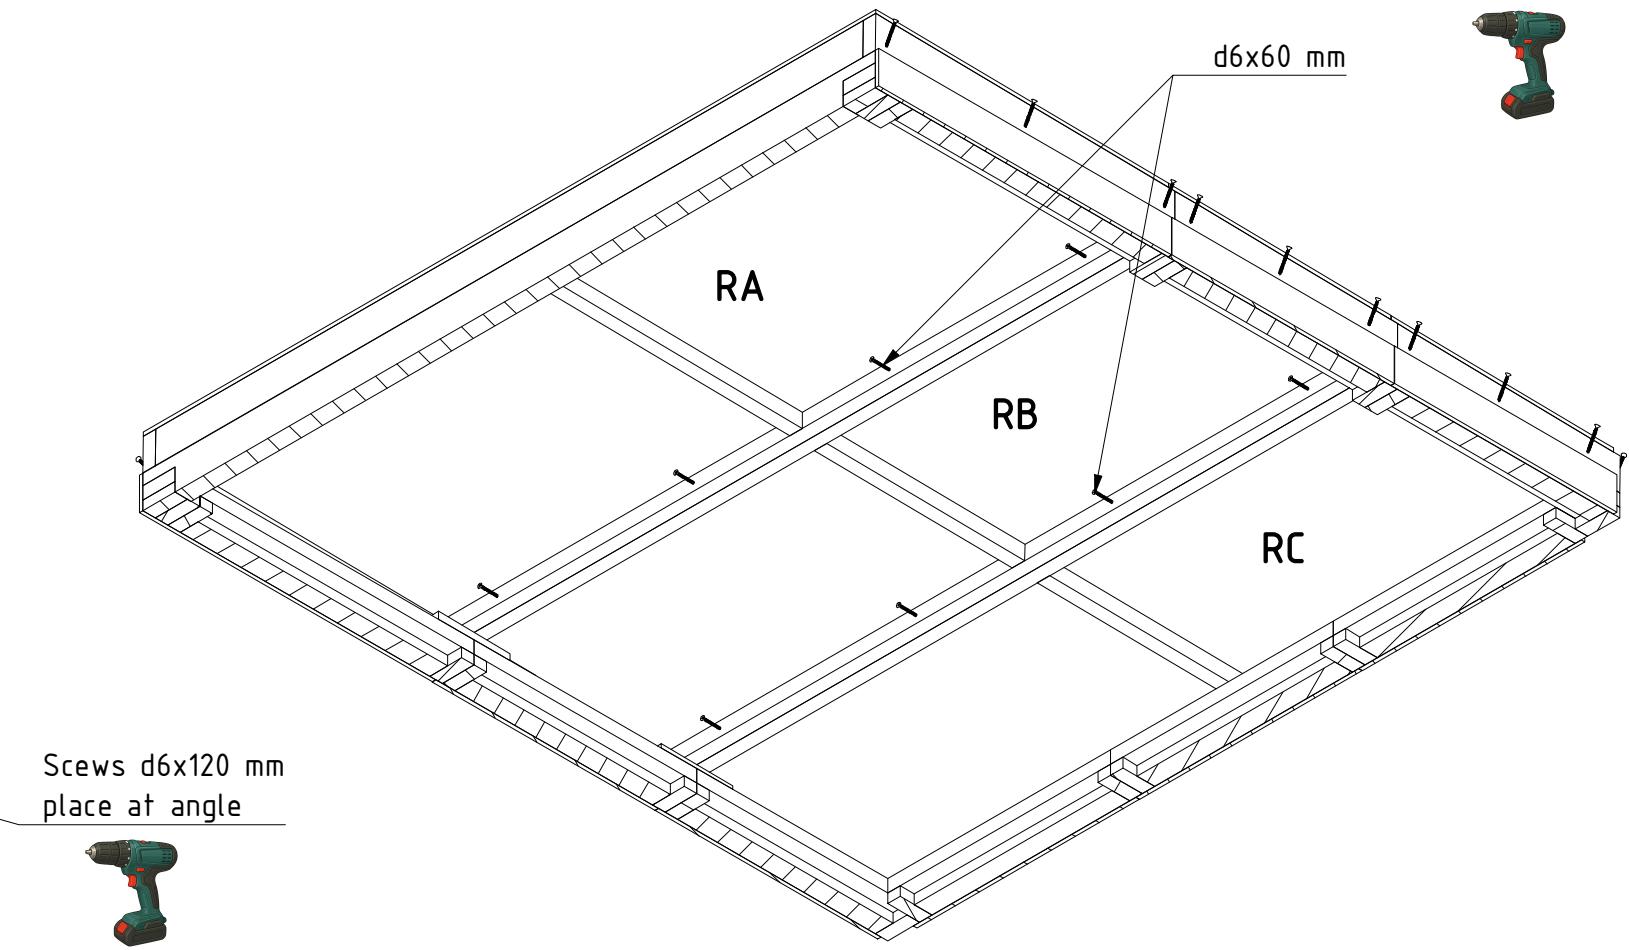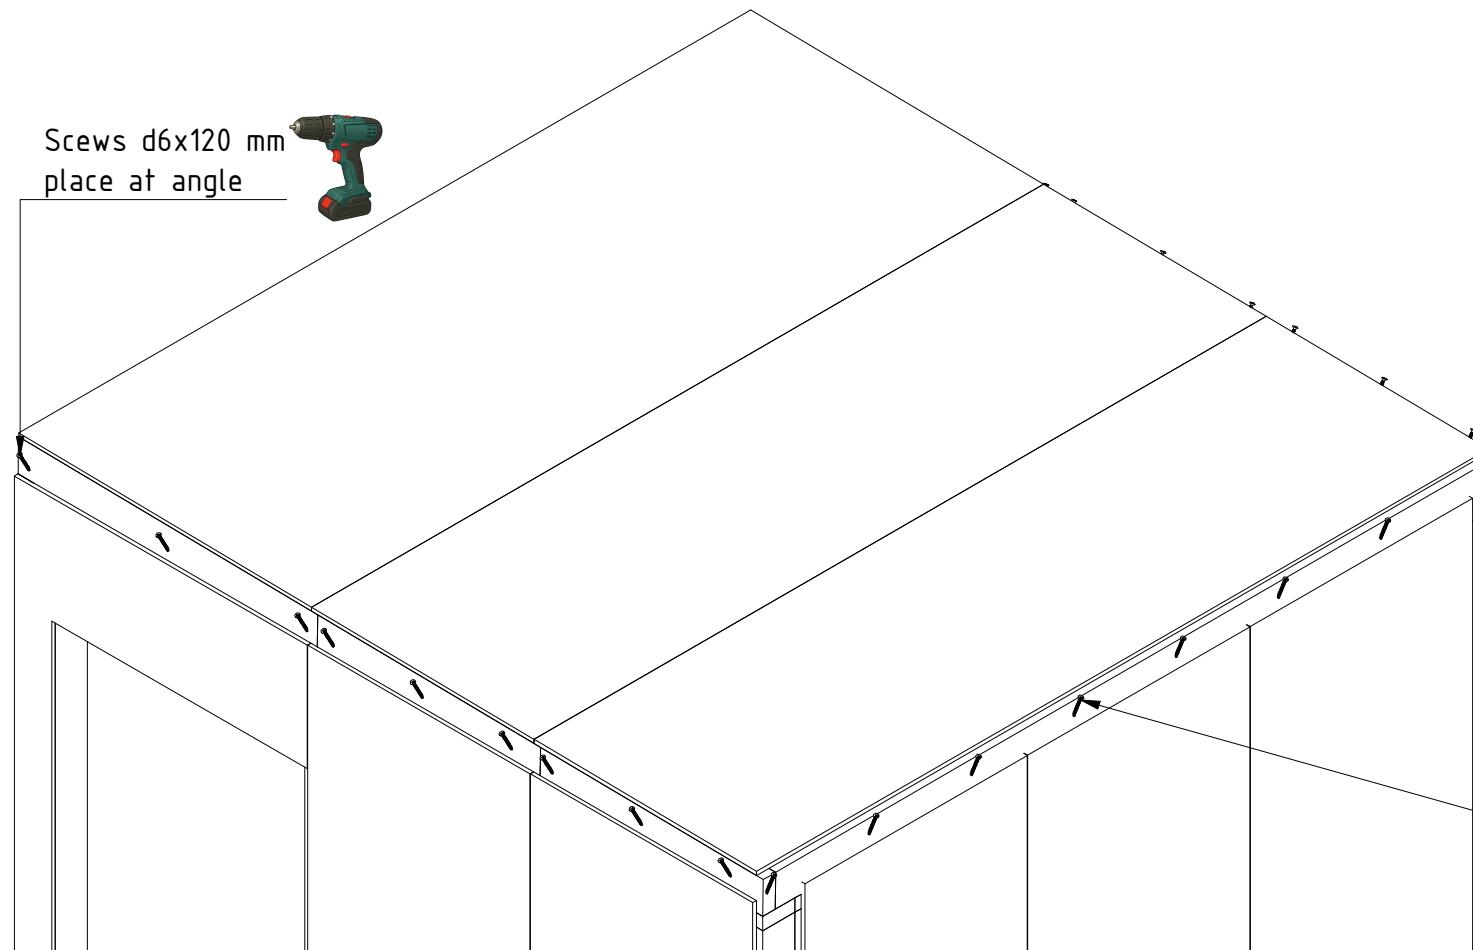


Step 5. Install the window.

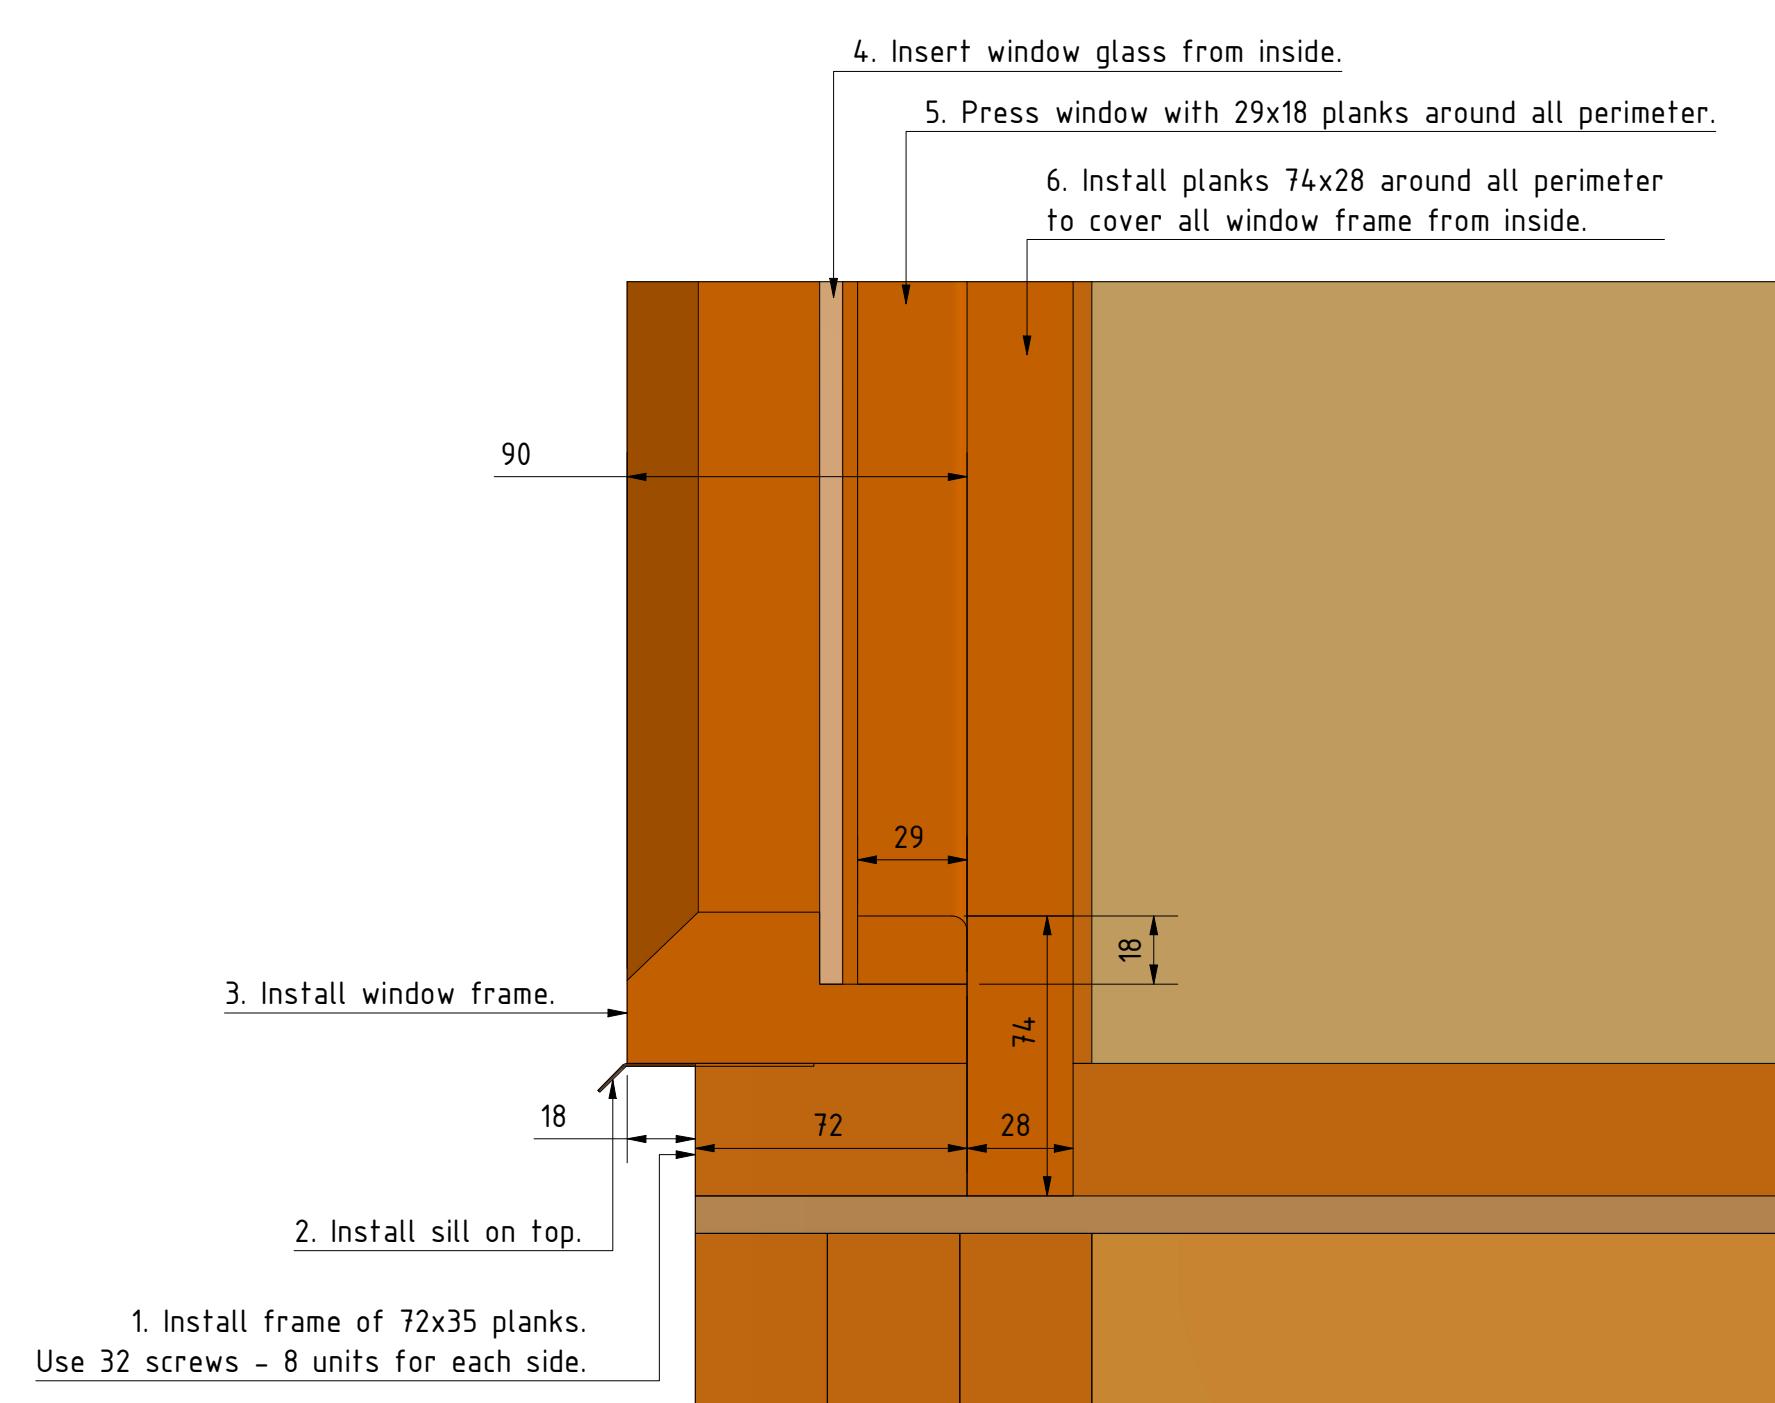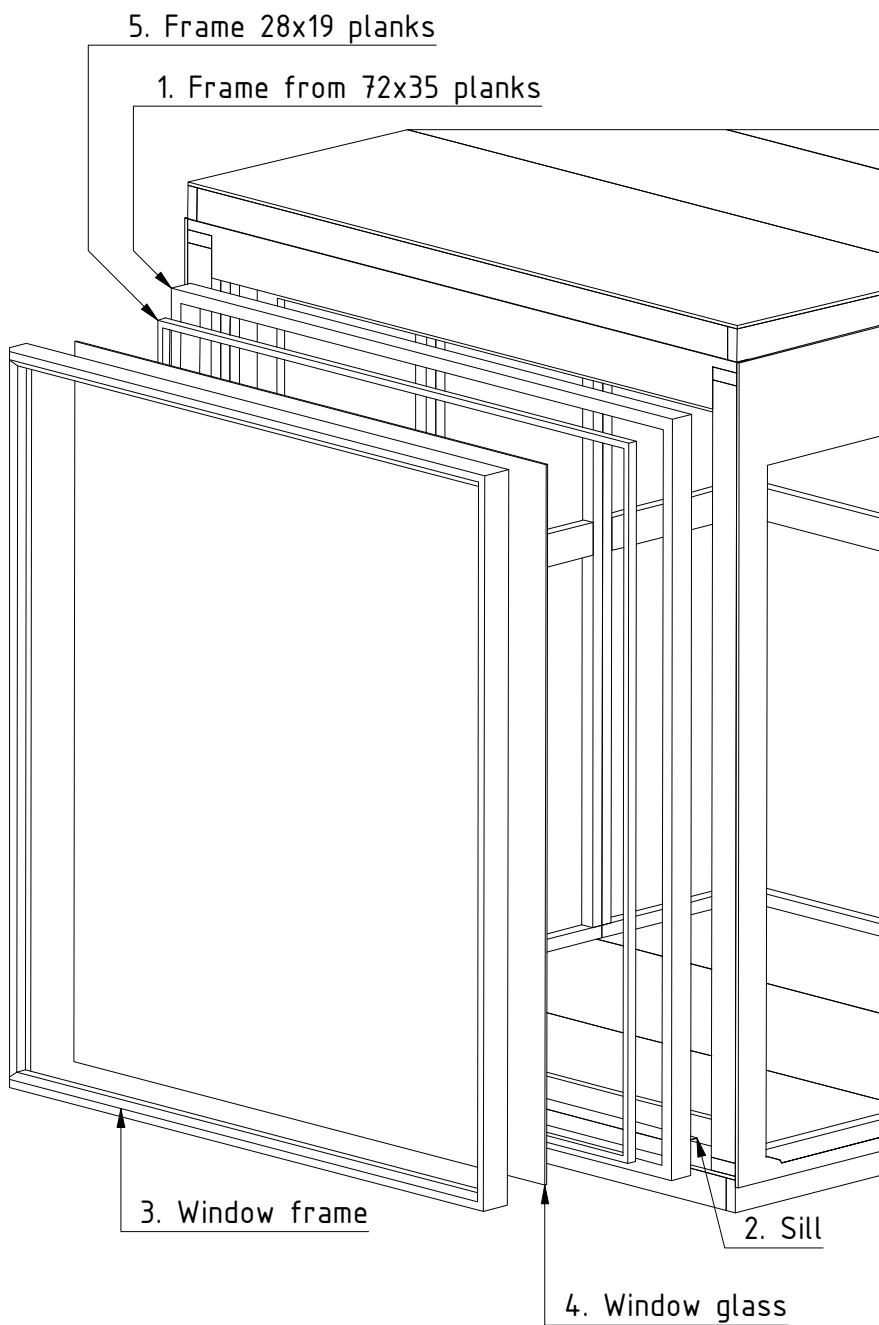


Step 6. Door installation.

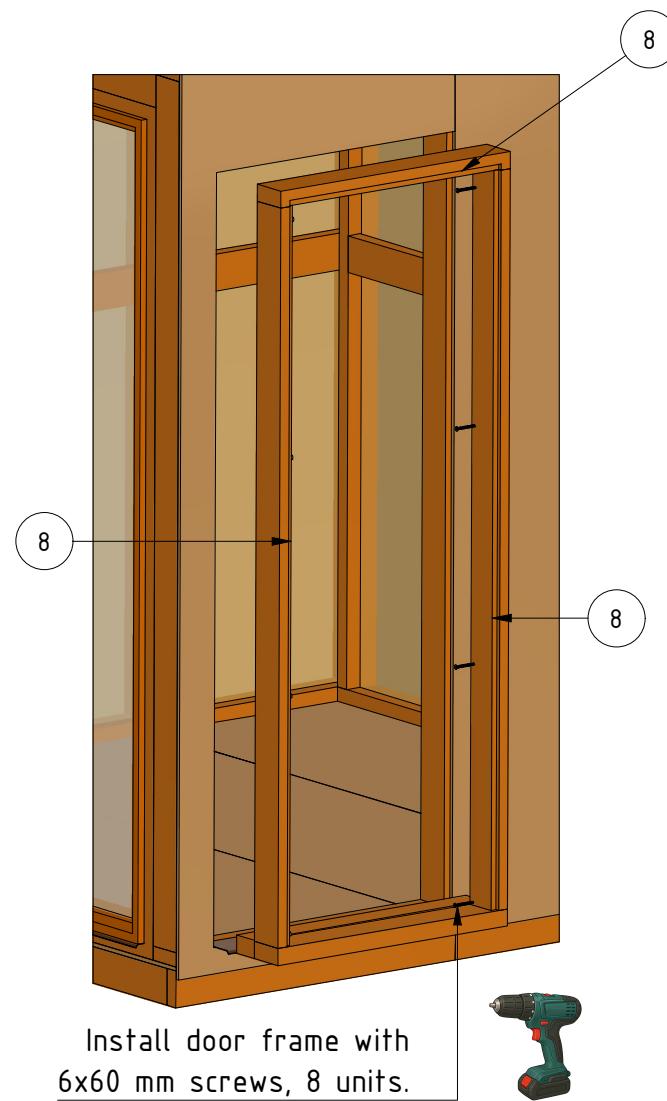


Install door frame with
6x60 mm screws, 8 units.

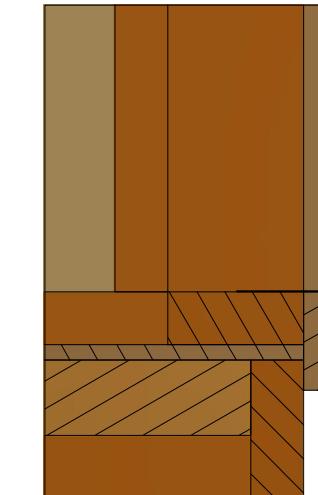


Add sill before mounting door frame

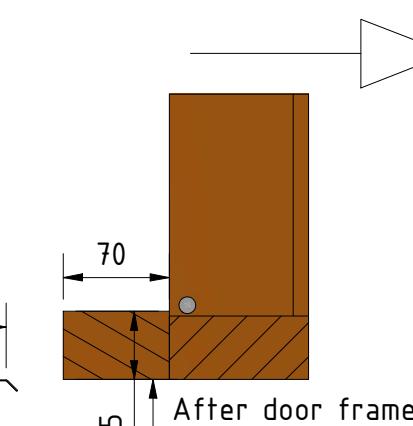

45 After door frame installation
attach this plank at the bot

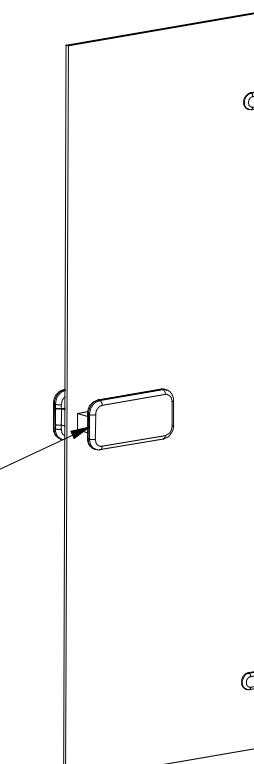



Install hinge

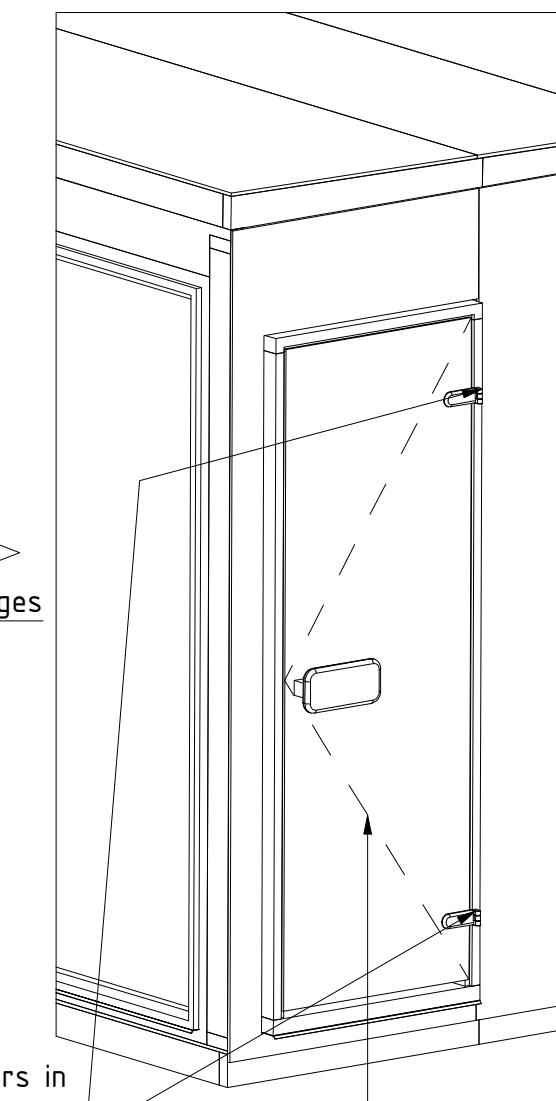

Install that door
opens outwards




Using spirit level place doors in the right position and screw the hinges.

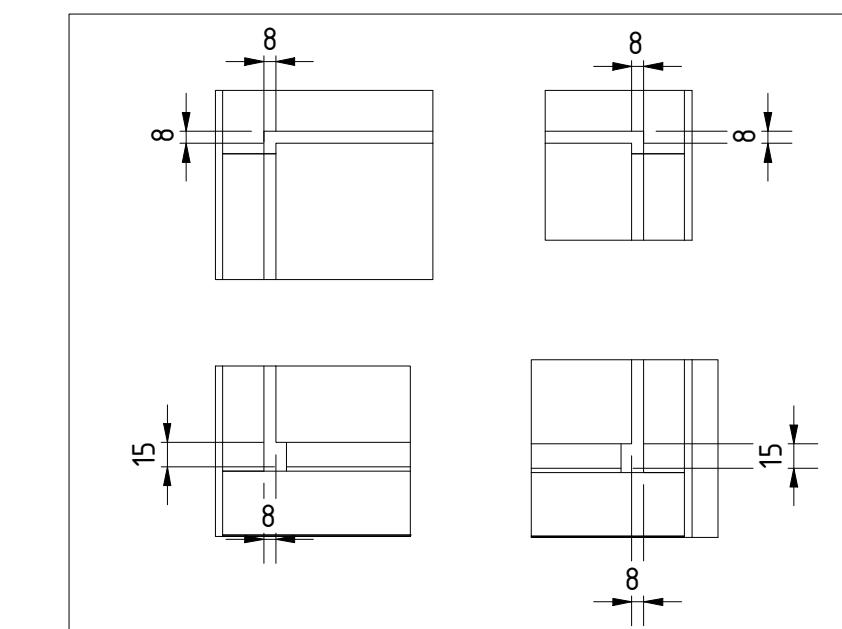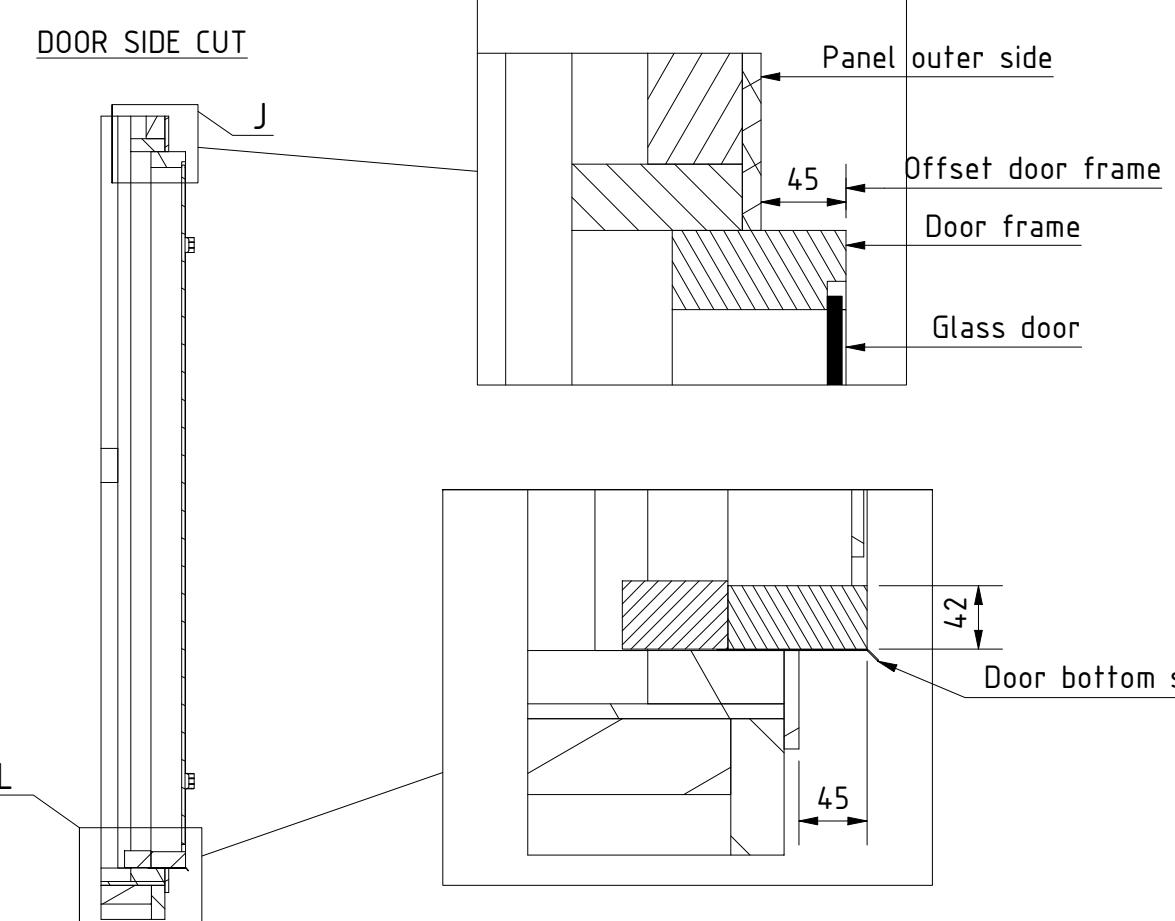


Step 7. Subframe for exterior.


RIGHT SIDE

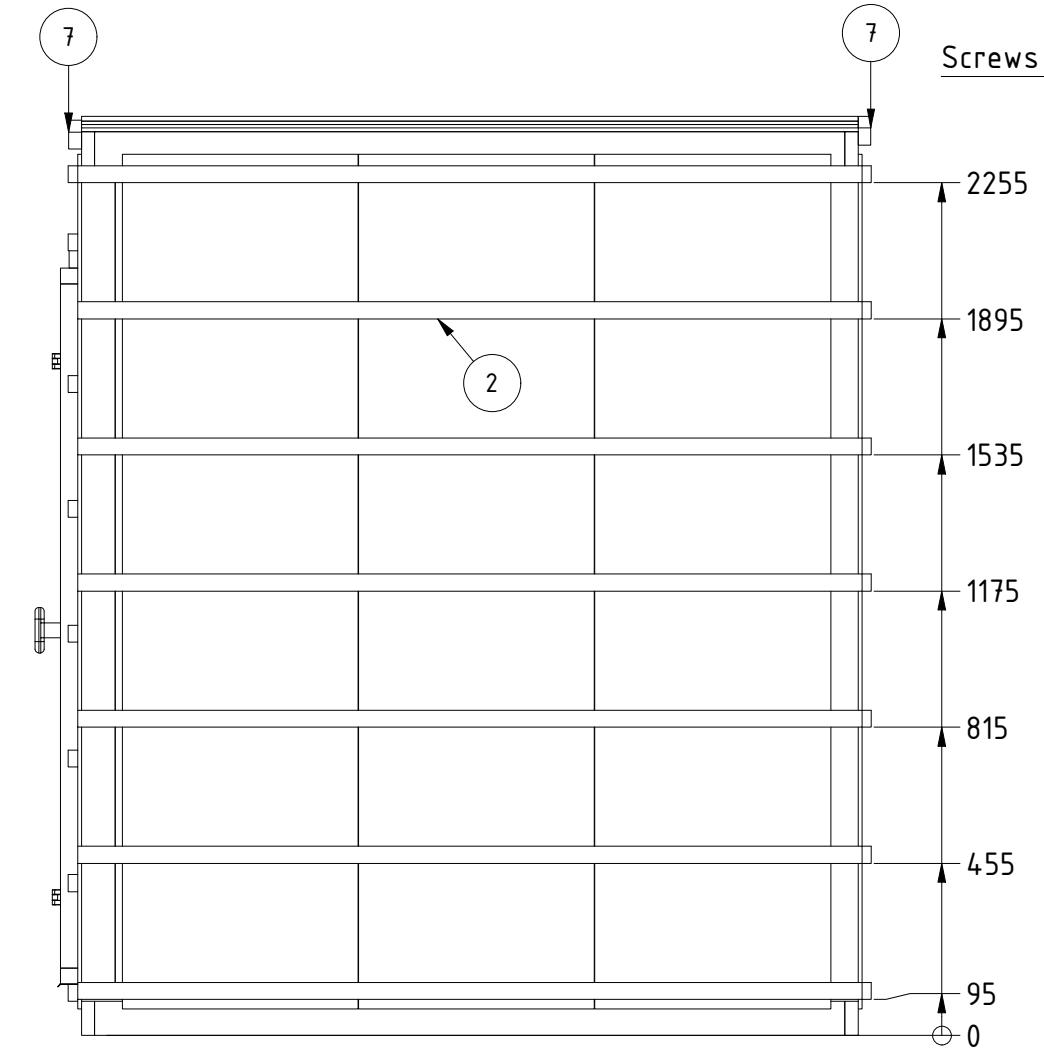




FRONT SIDE

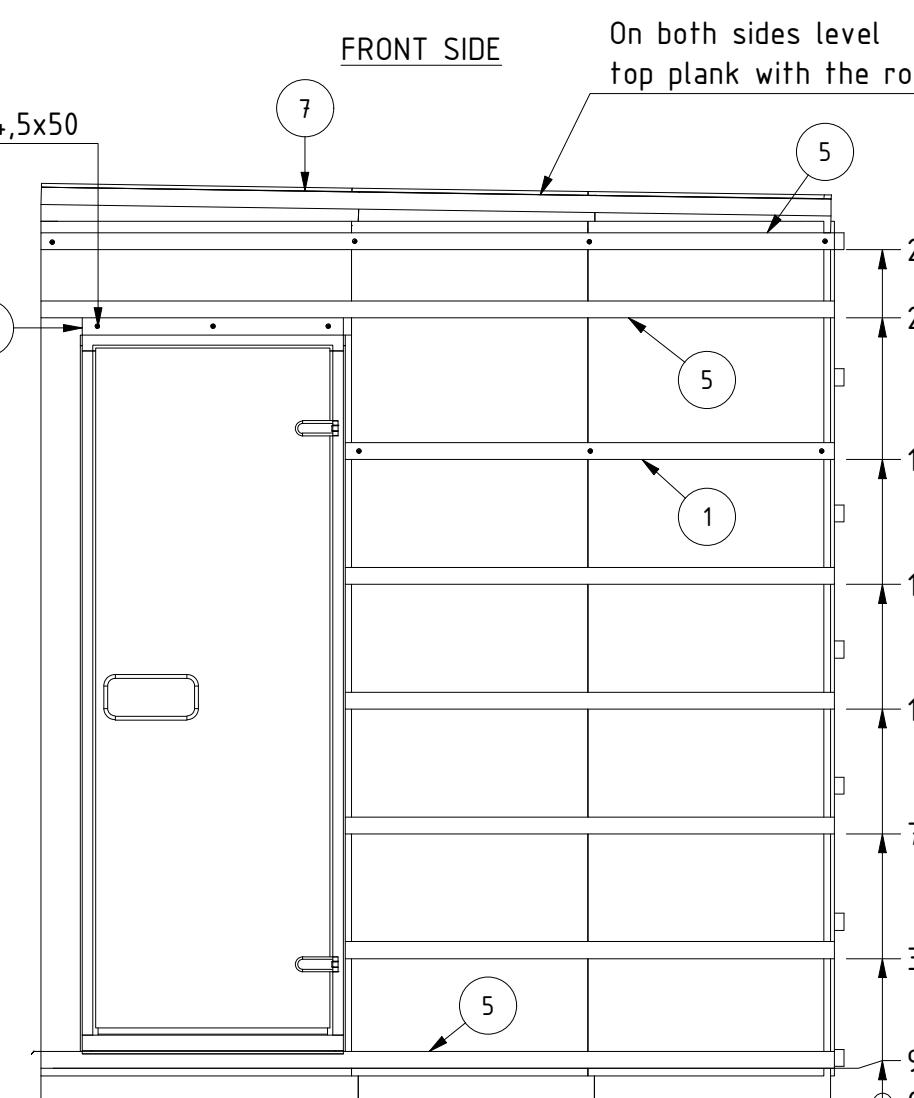


On both sides level top plank with the roof.

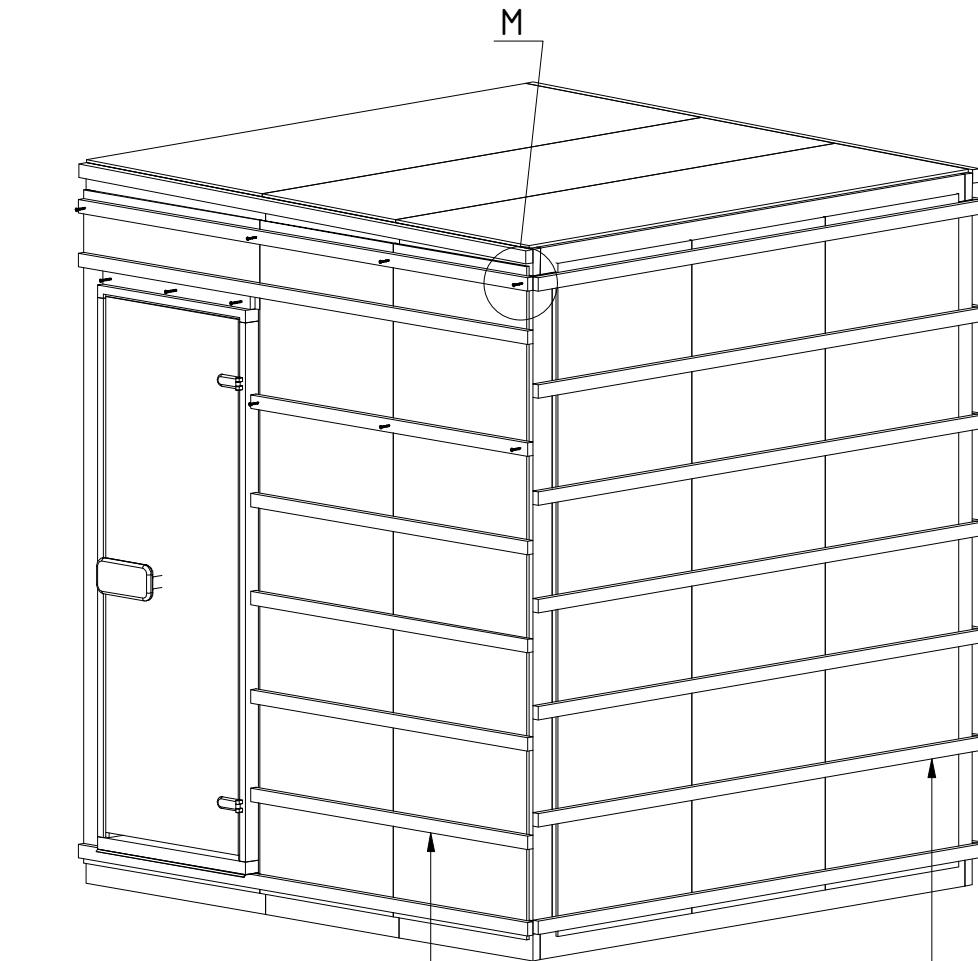


Do not attach any planks on window side wall

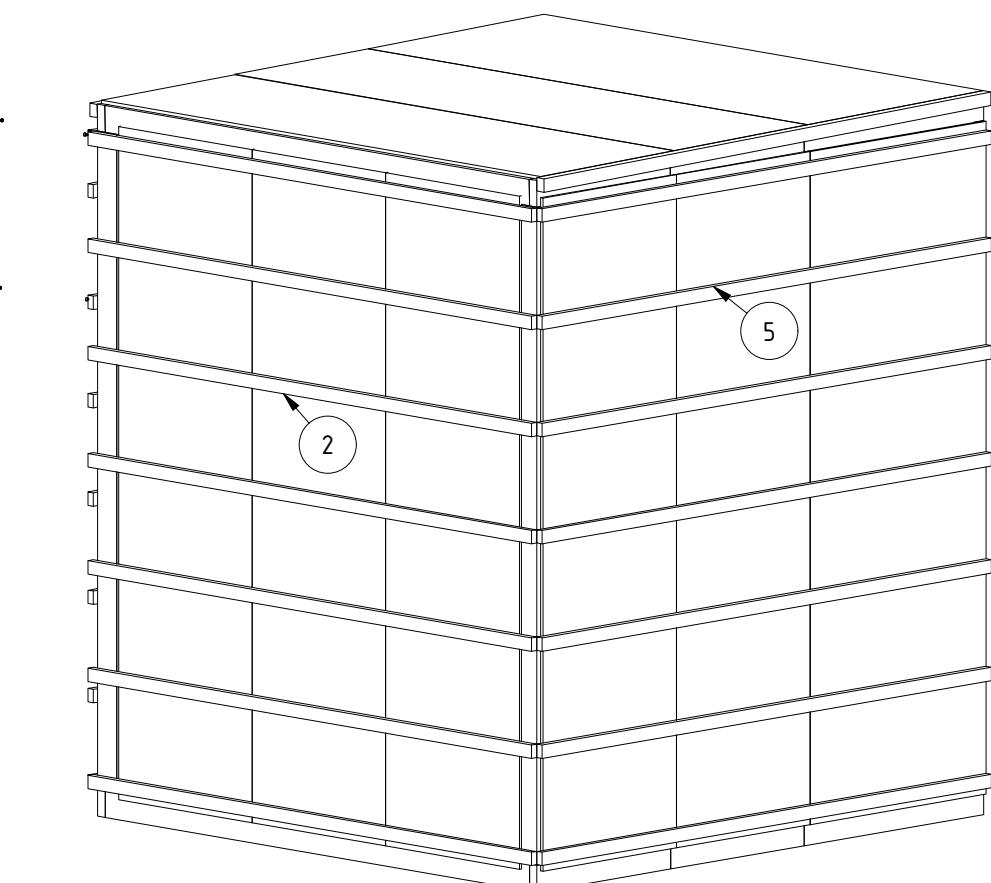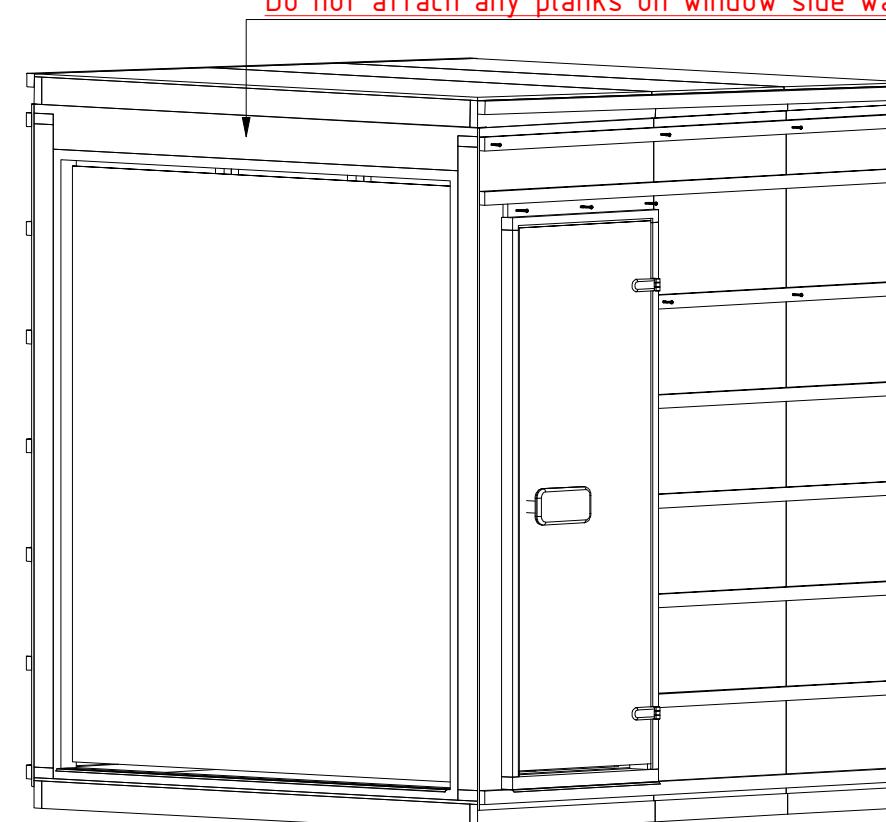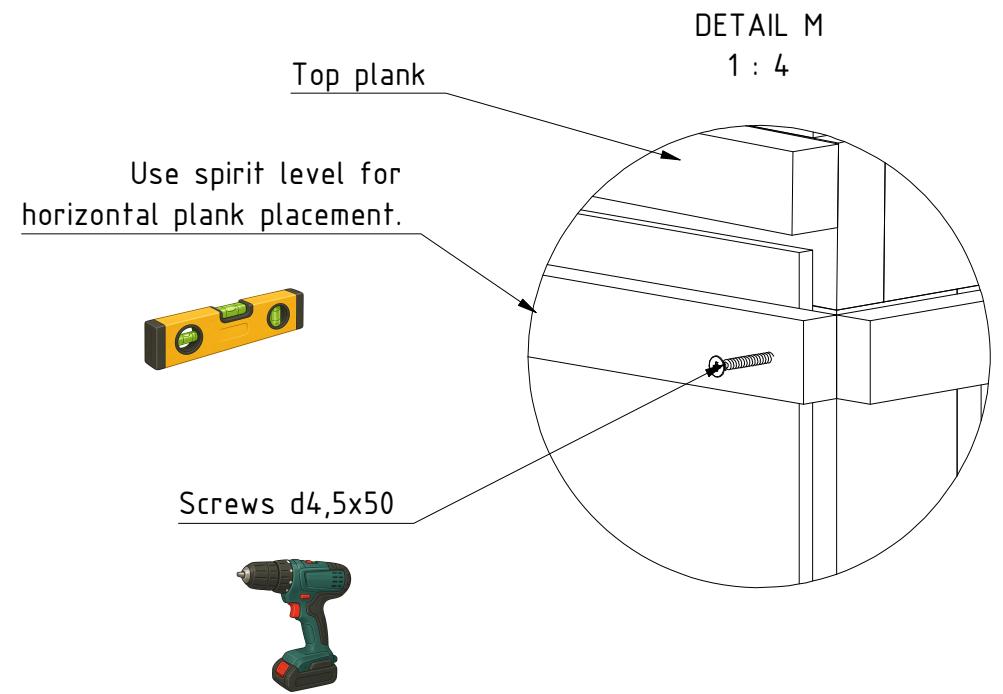

Step 8. Subframe corners.

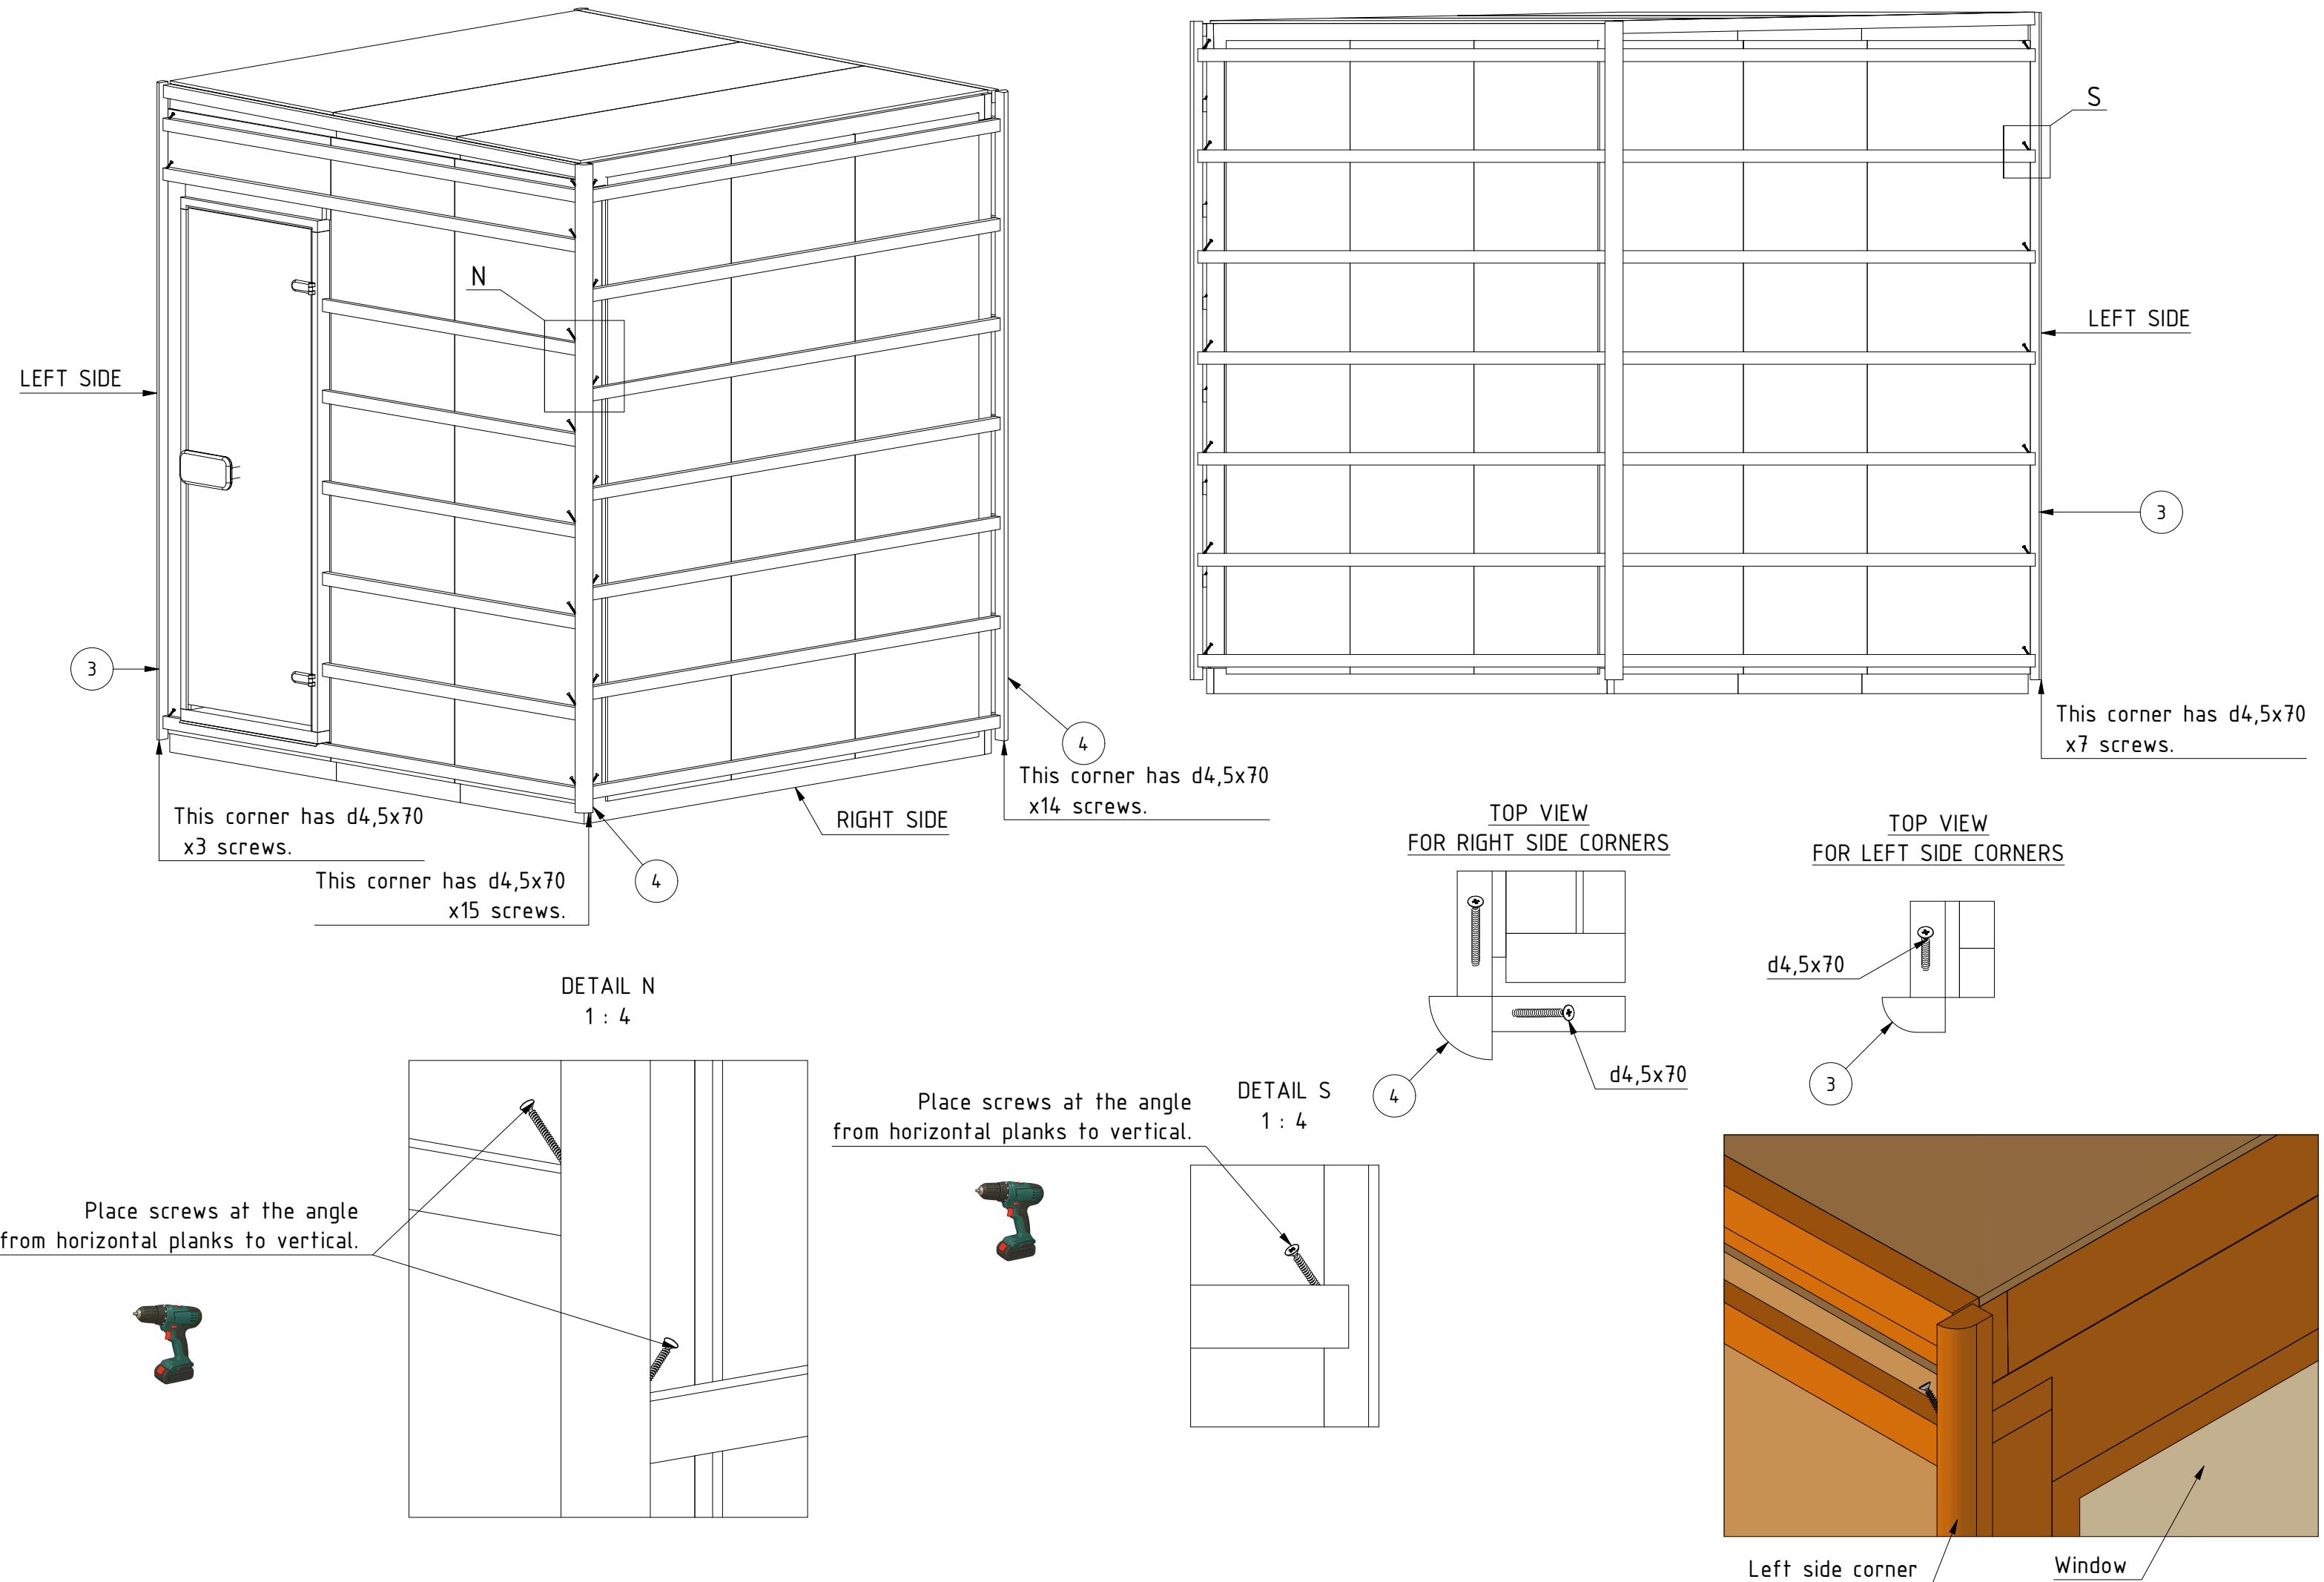

Step 9. Roof perimeter sheets installation.

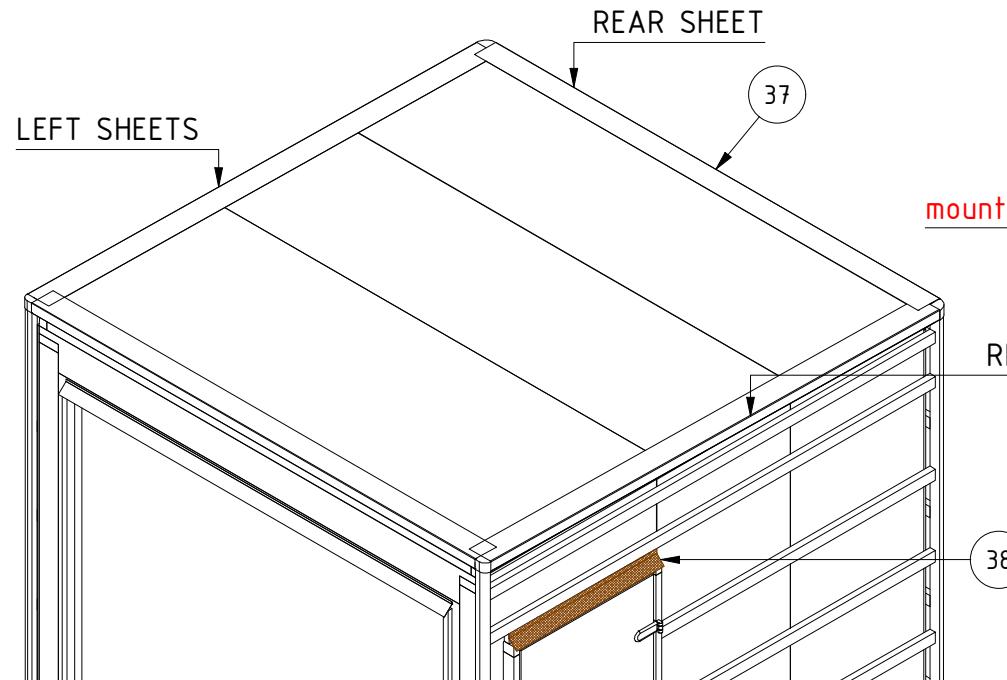


Before metal sheets,
mount plastic corner covers on top.

RIGHT SHEETS


FRONT CORNER PLANK

3

39

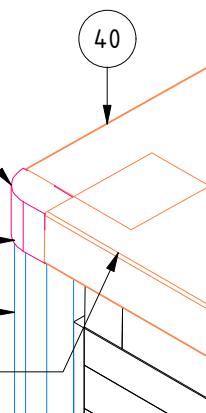


Before metal sheets,
mount plastic corner covers on top.

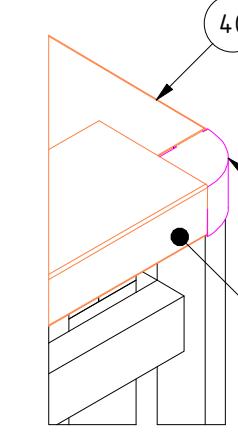

40


37

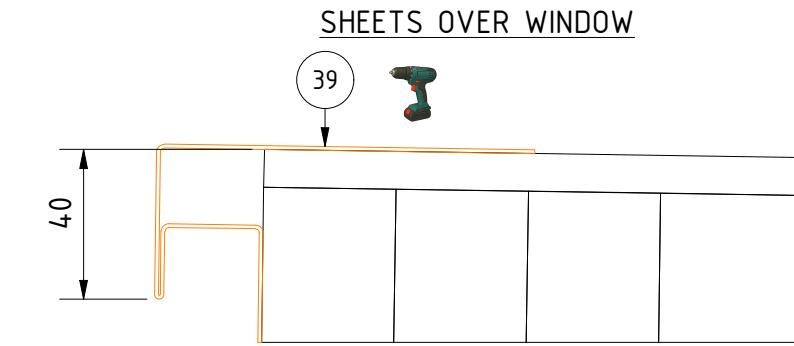

SHEETS OVER WINDOW

39

SIDE SHEETS

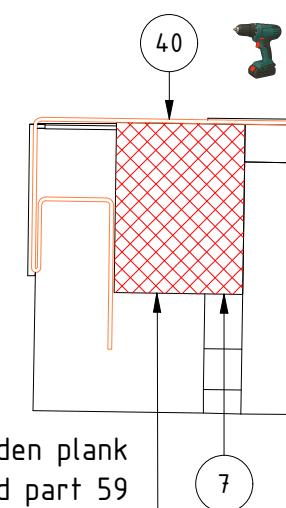


40

Side wooden plank
to hold part 59

7


SILL ABOVE THE DOOR

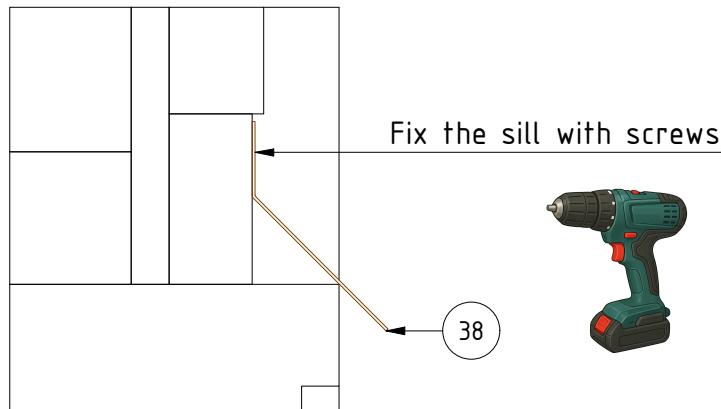

Fix the sill with screws.



REAR SHEET INSTALLATION


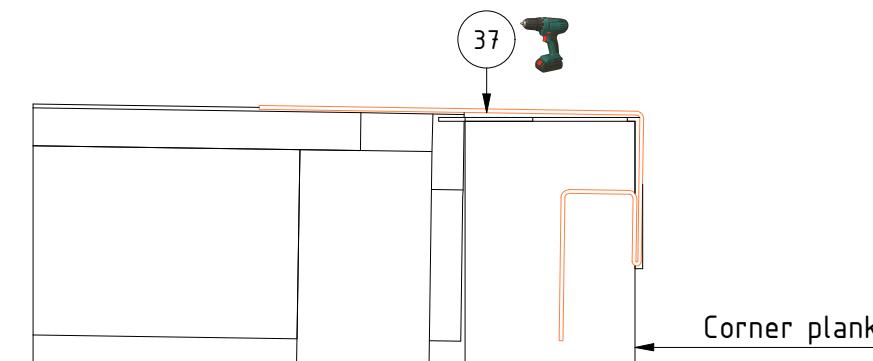


37


Corner plank

Step 10. Roofing installation.

Use a roll roofing to cover the roof
Then attach it with the nails.

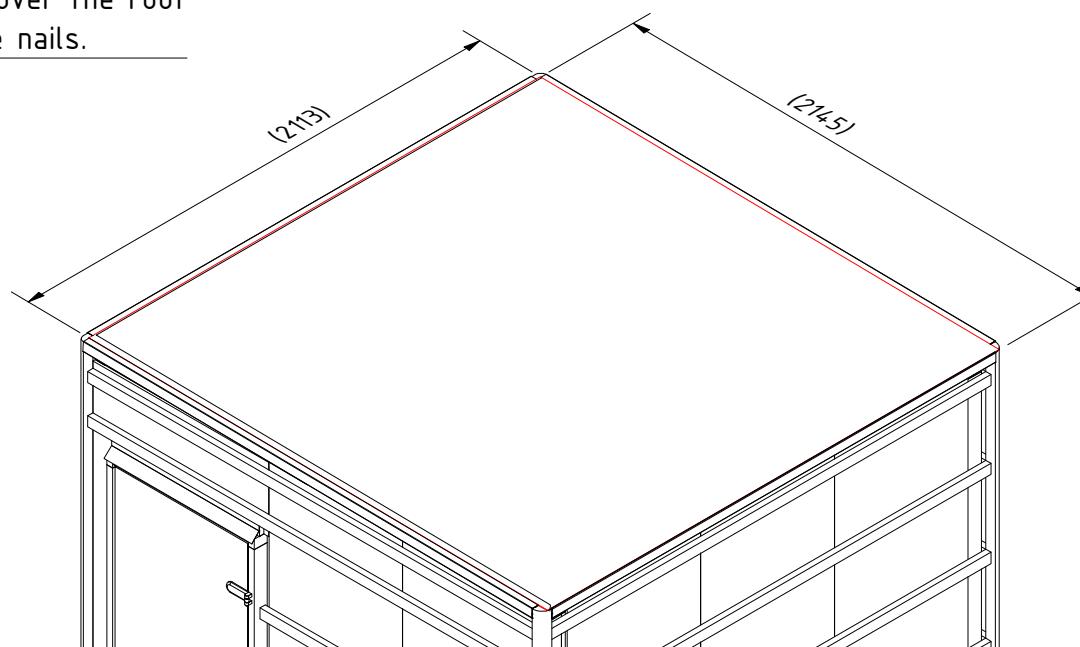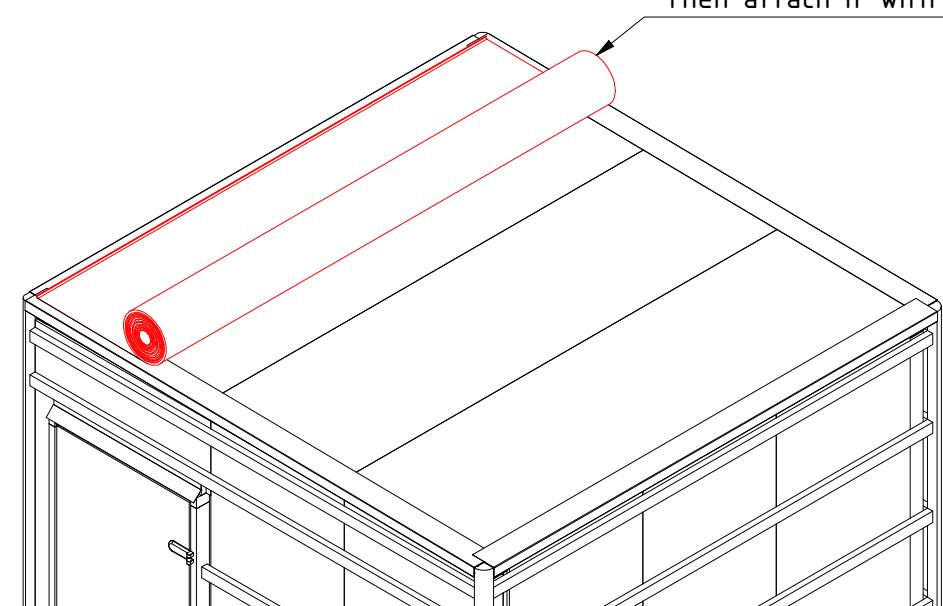

Cut roofing at the end.

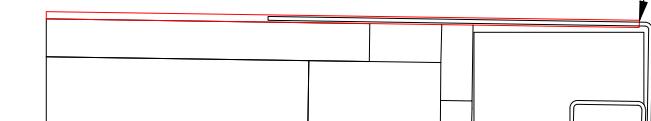


*Install roofing using manual and following requirements for it.

Step 11. Siding boards installation.




Use the nail gun to attach siding boards.
Use spirit level for alignment.

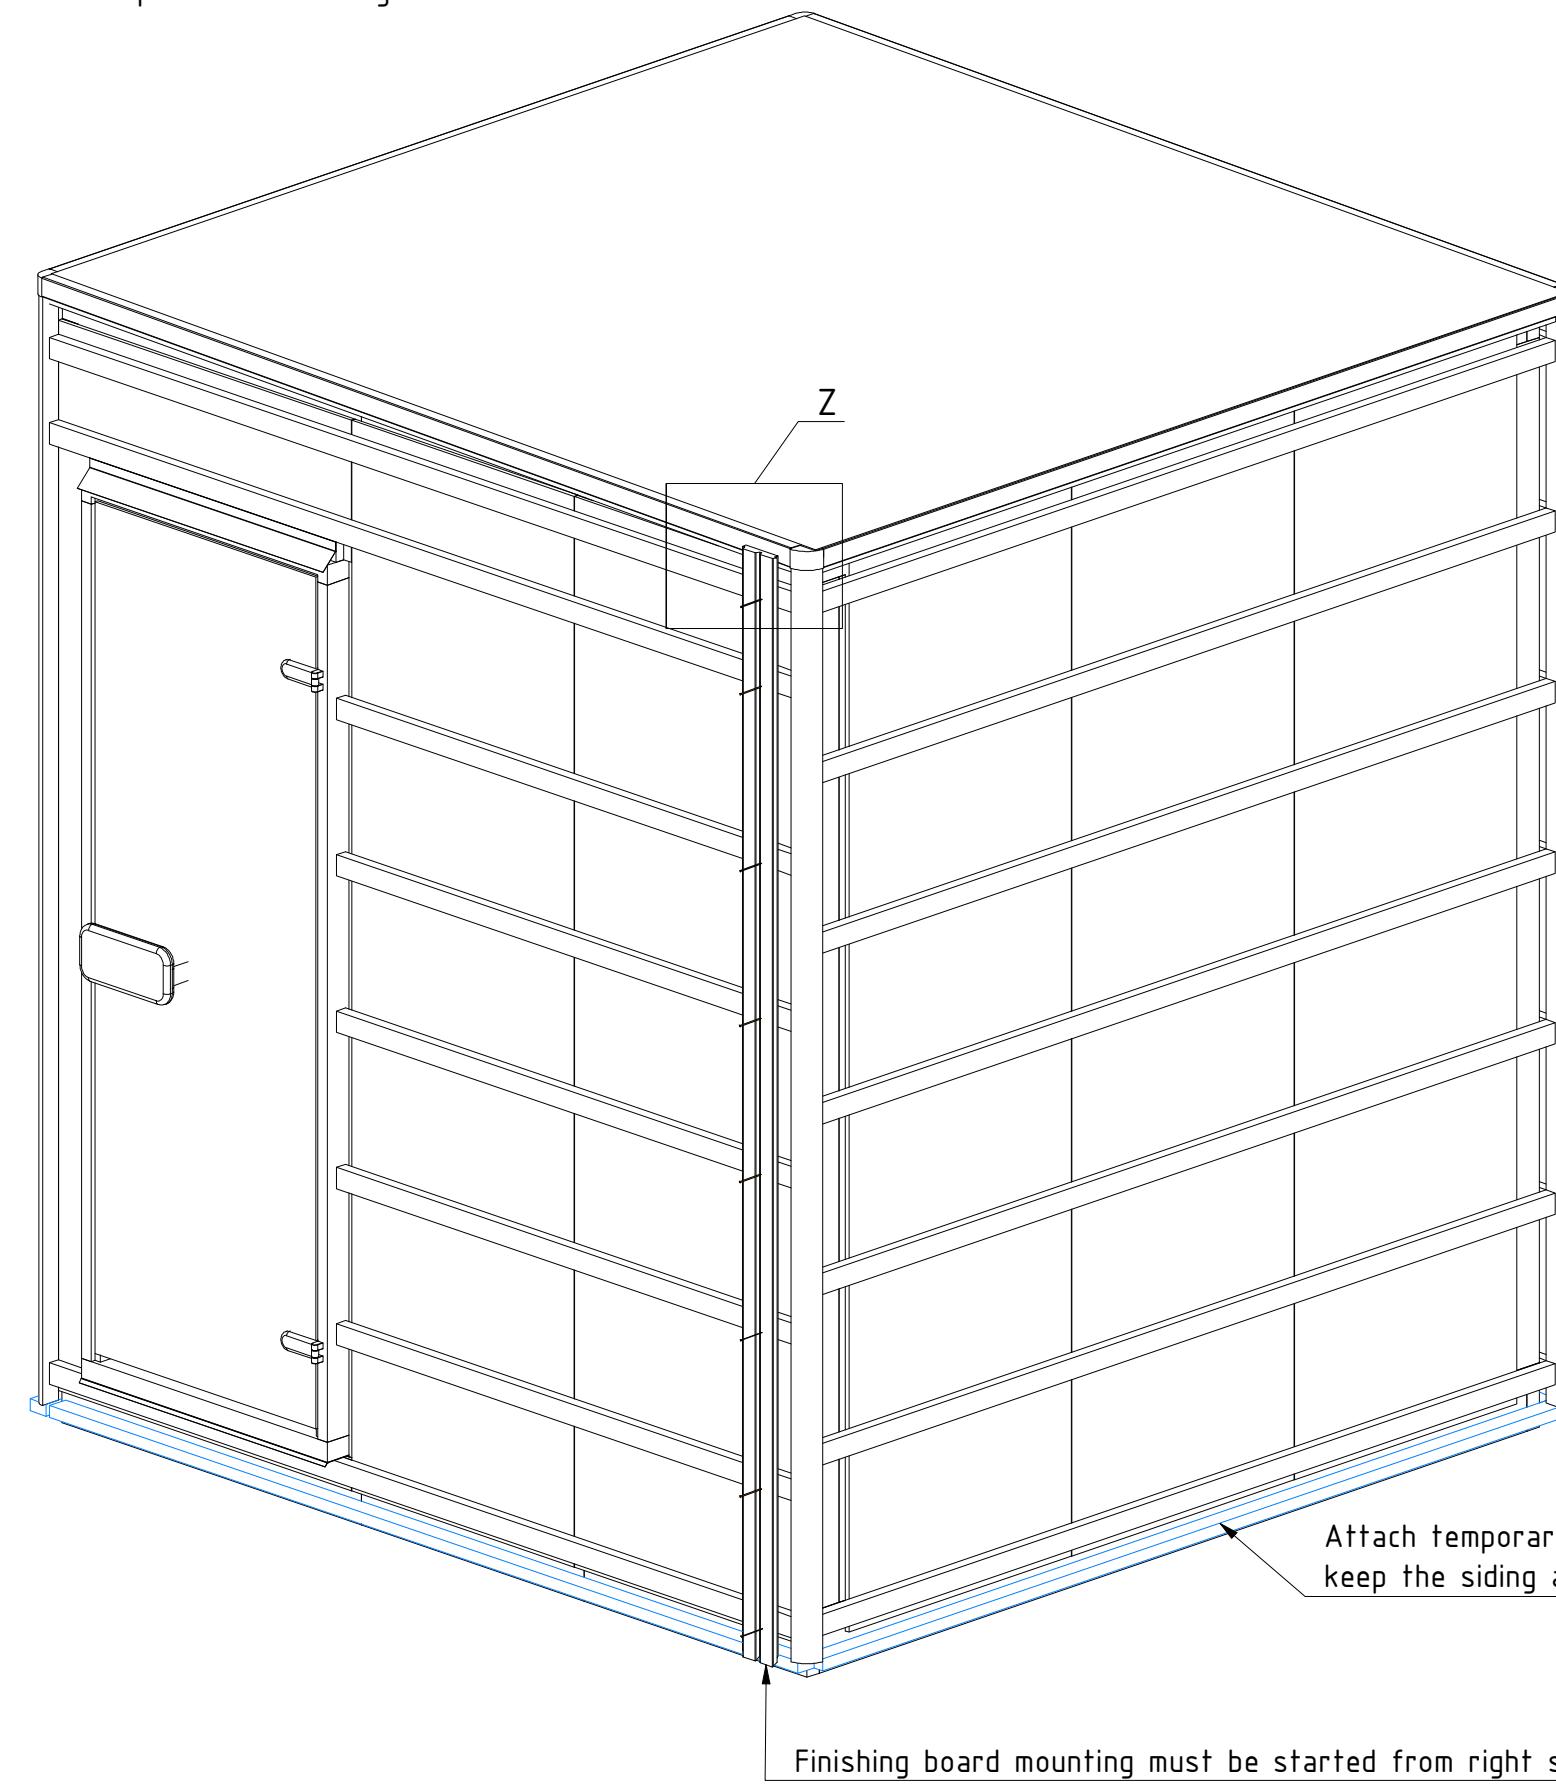


Boards top must be underneath metal sheet.
When placing push up from below.


DETAIL Z
1 : 4

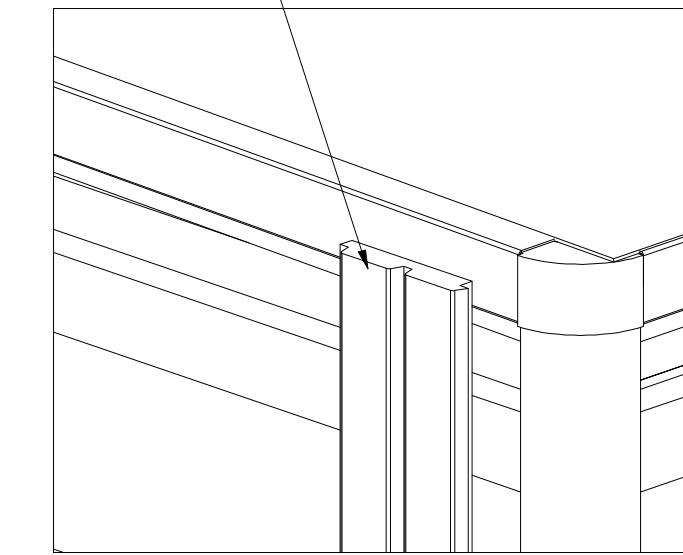


Boards top is underneath metal sheet

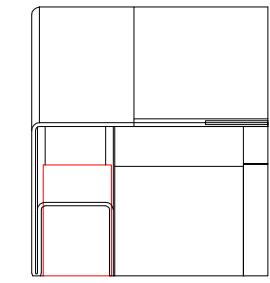

DISTANCE FROM THE BOTTOM VIEW

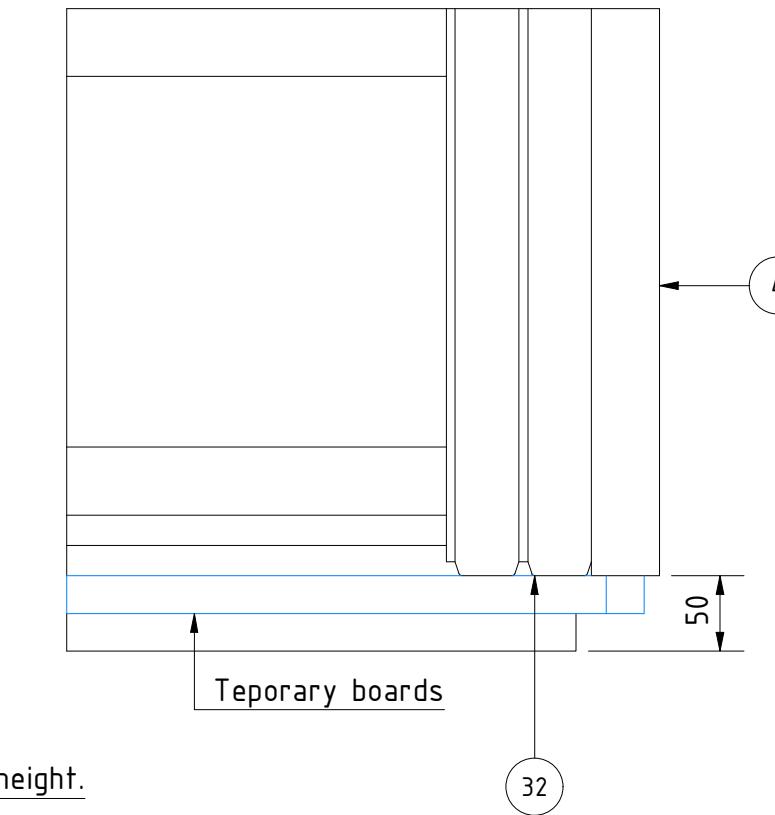







SIDE VIEW

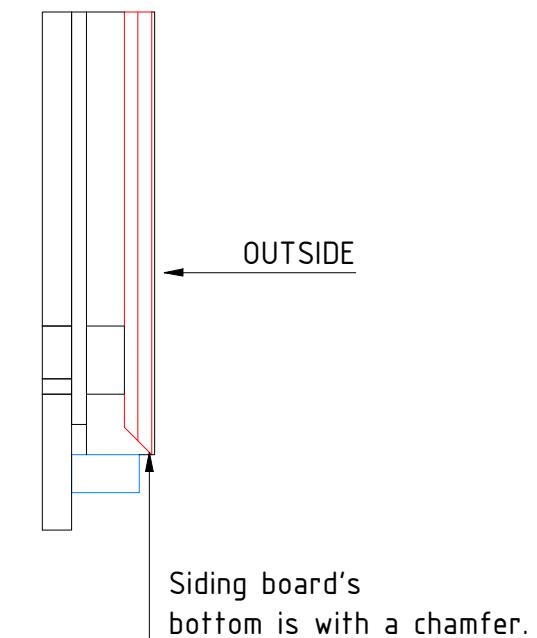



Siding board's bottom is with a chamfer.
OUTSIDE

Finishing board mounting must be started from right side.


Step 13. Continue siding boards installation.

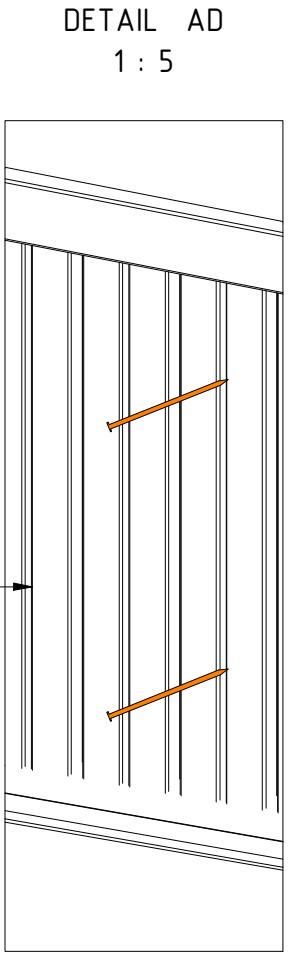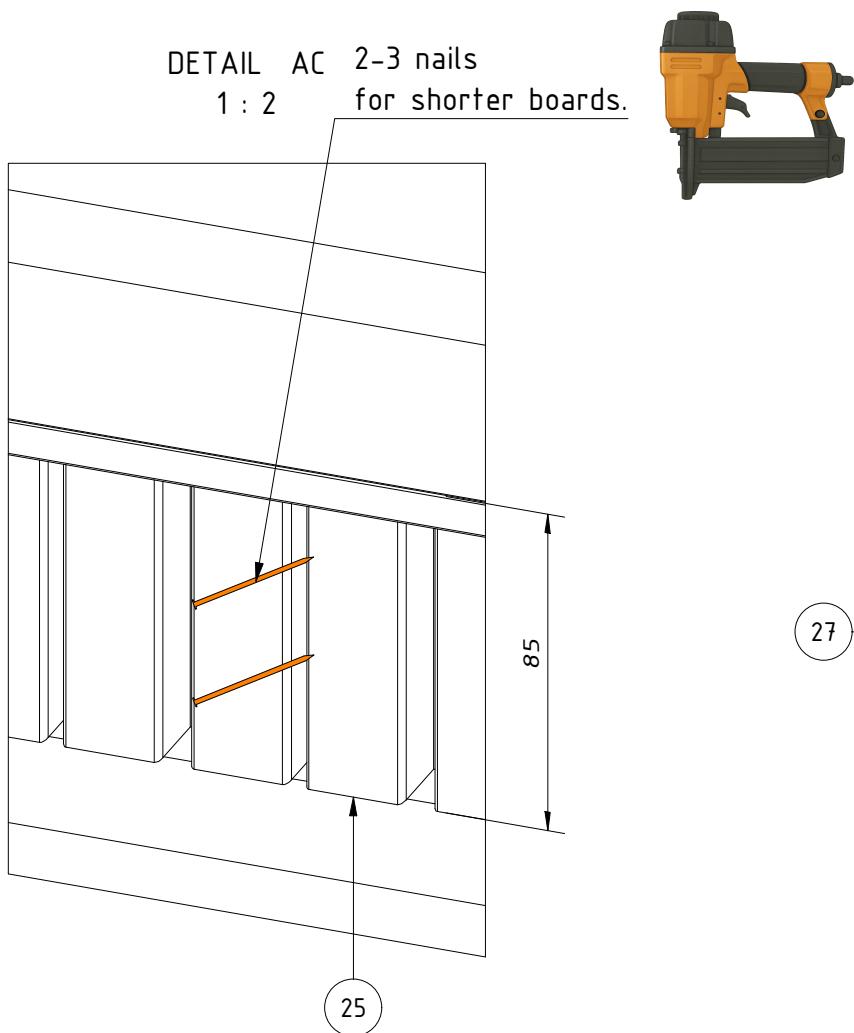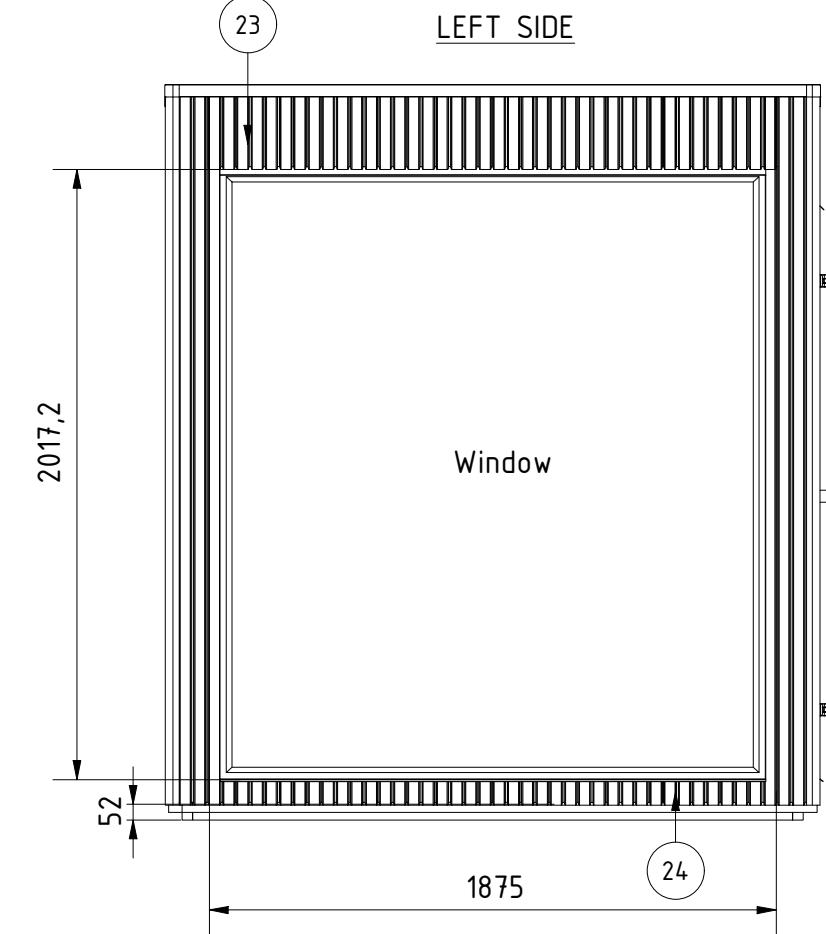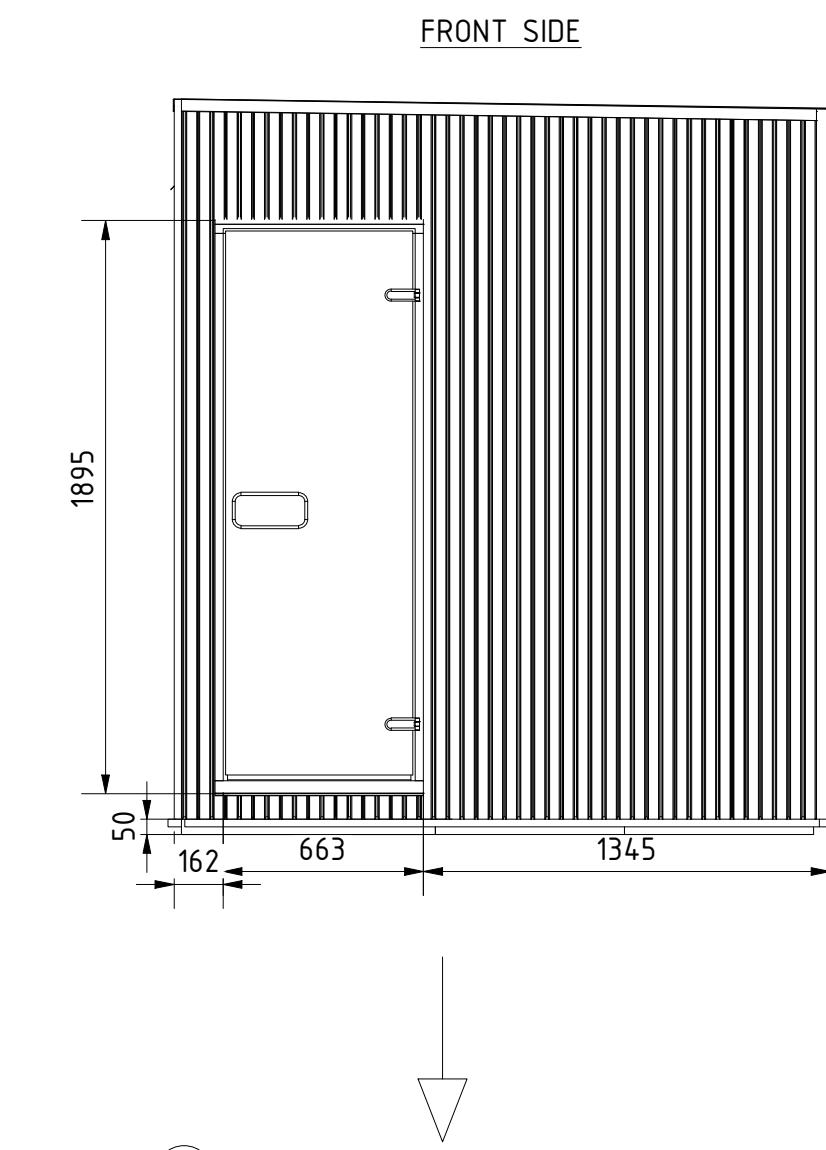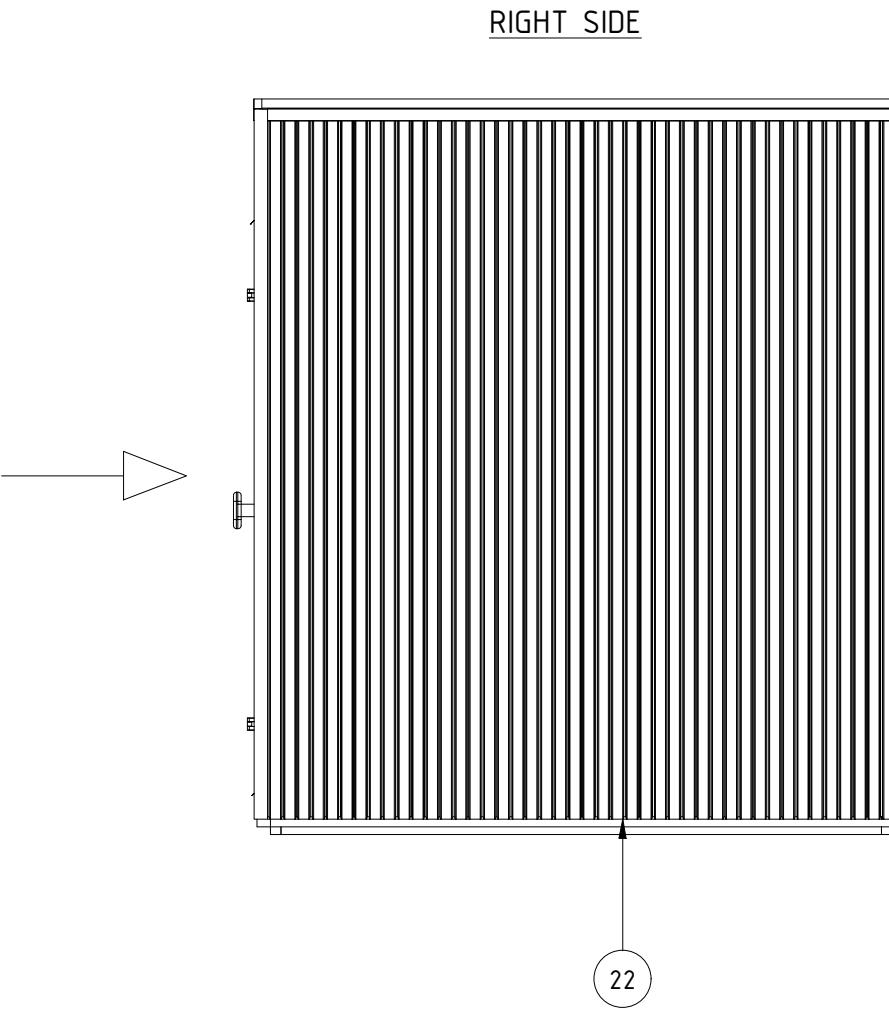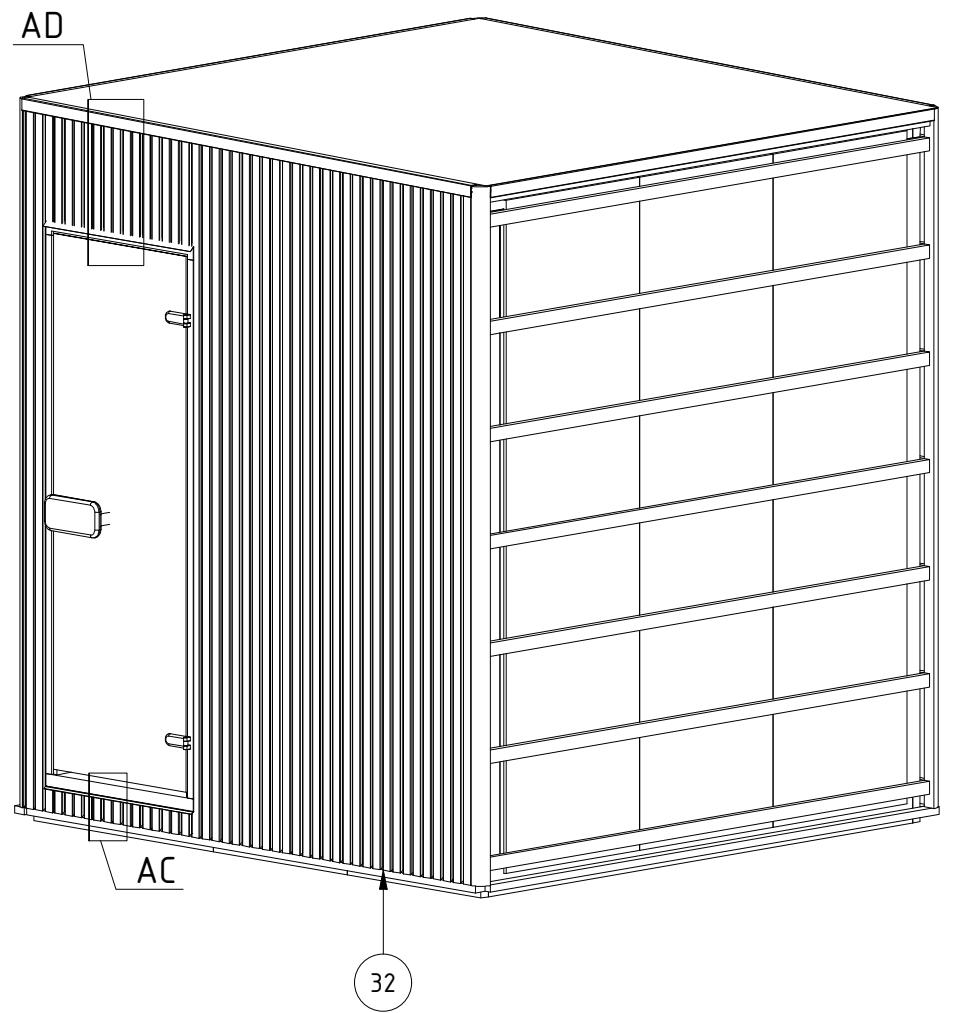



Step 14. Casing around the window.

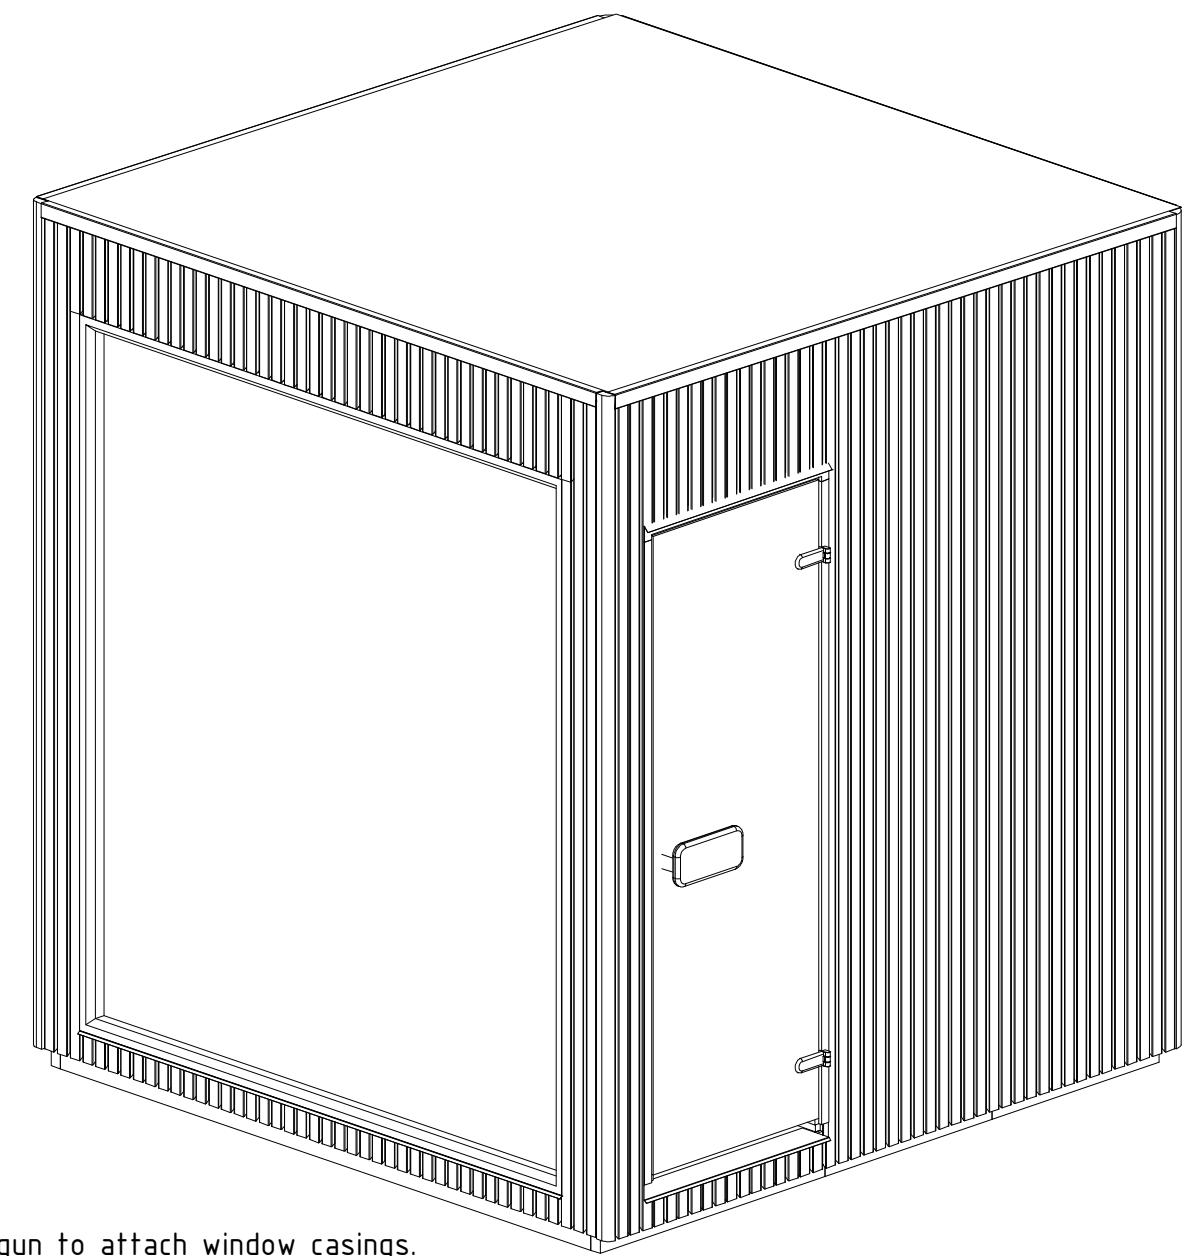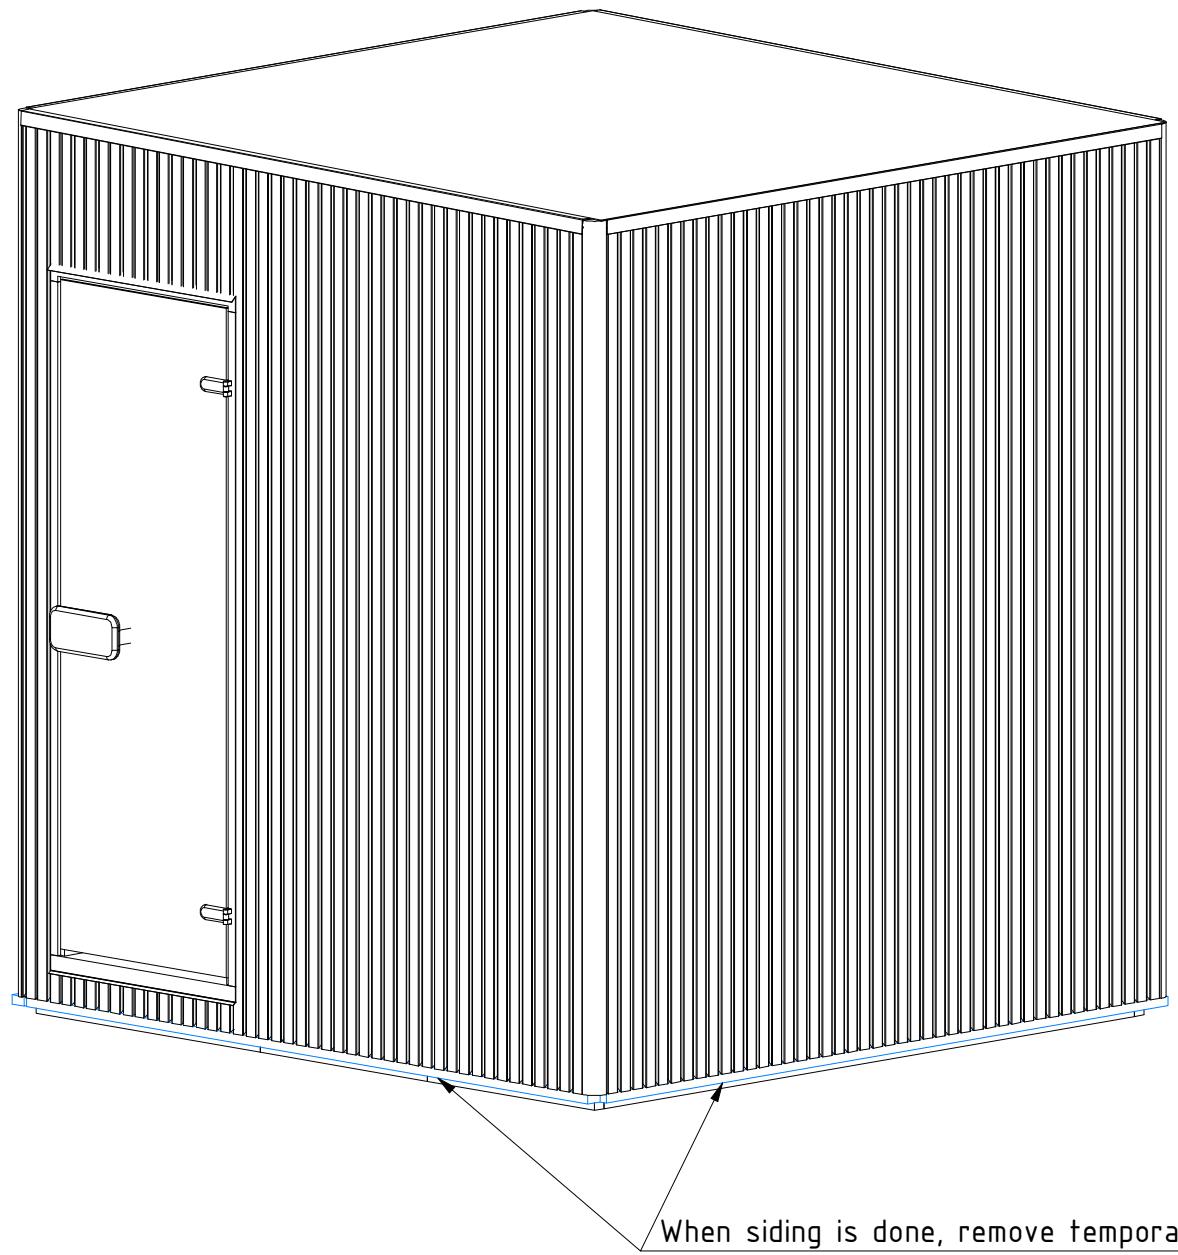



Use nails and nail gun to attach window casings.

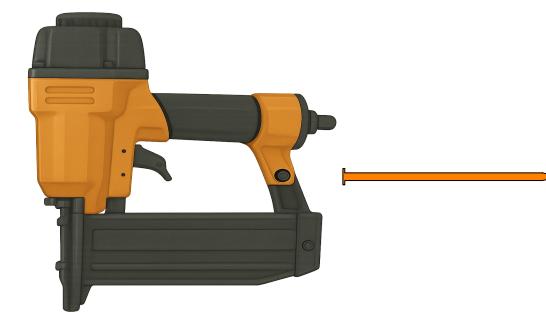


Step 15. Interior ceilings panel boards installation.

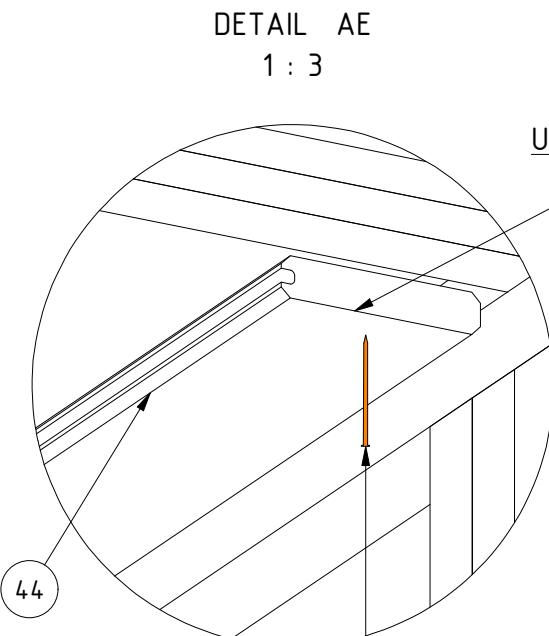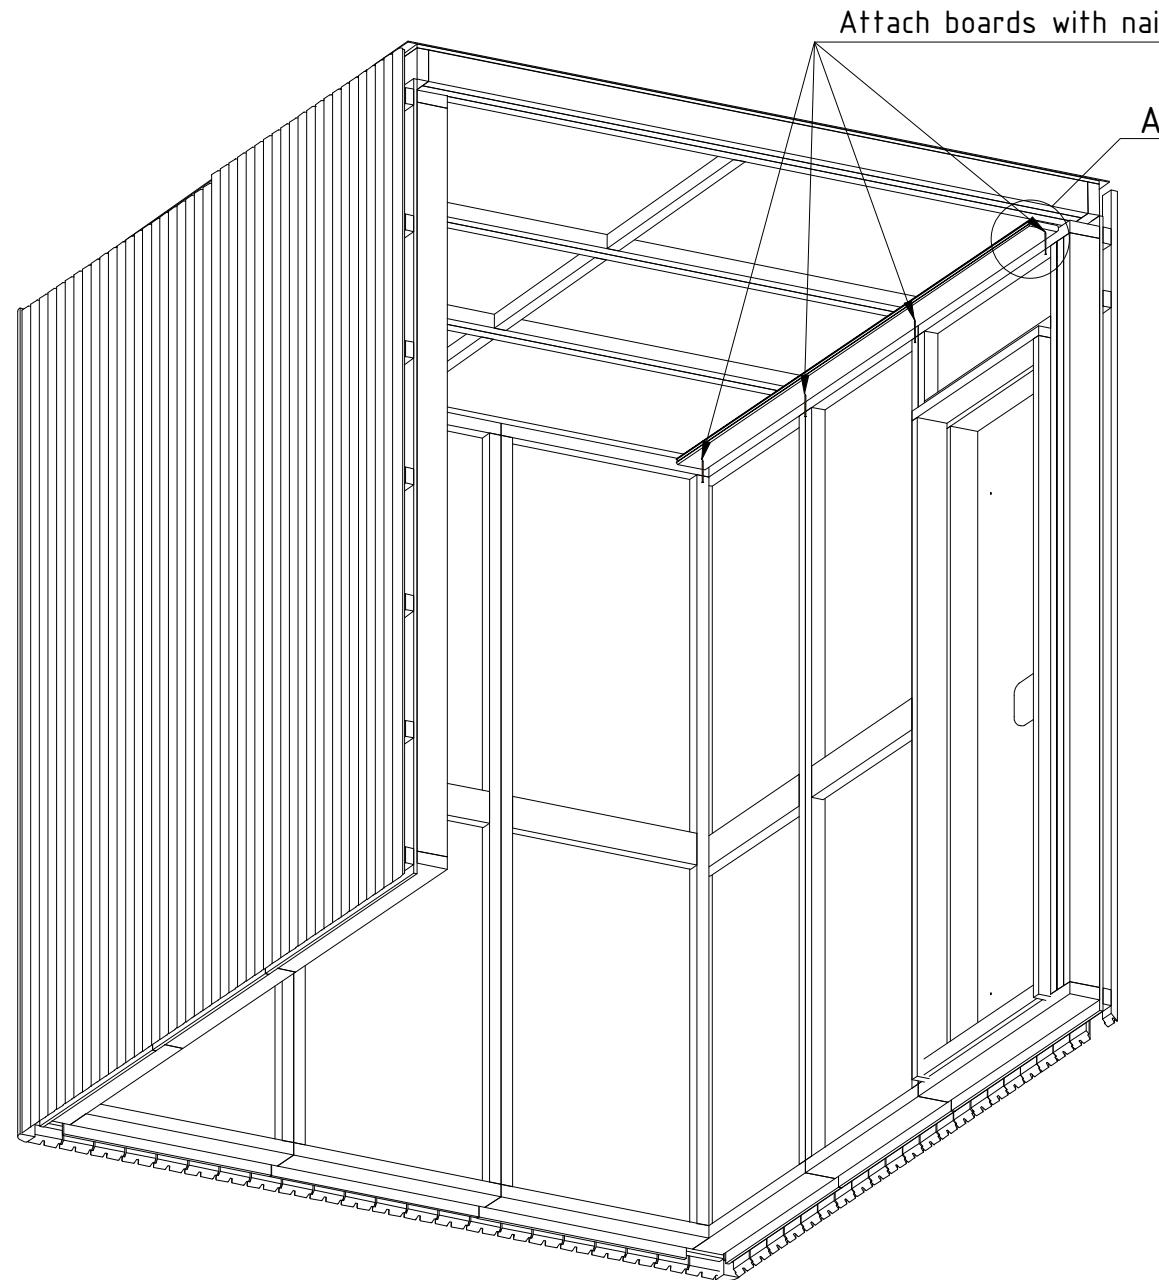

Attach boards with nails.

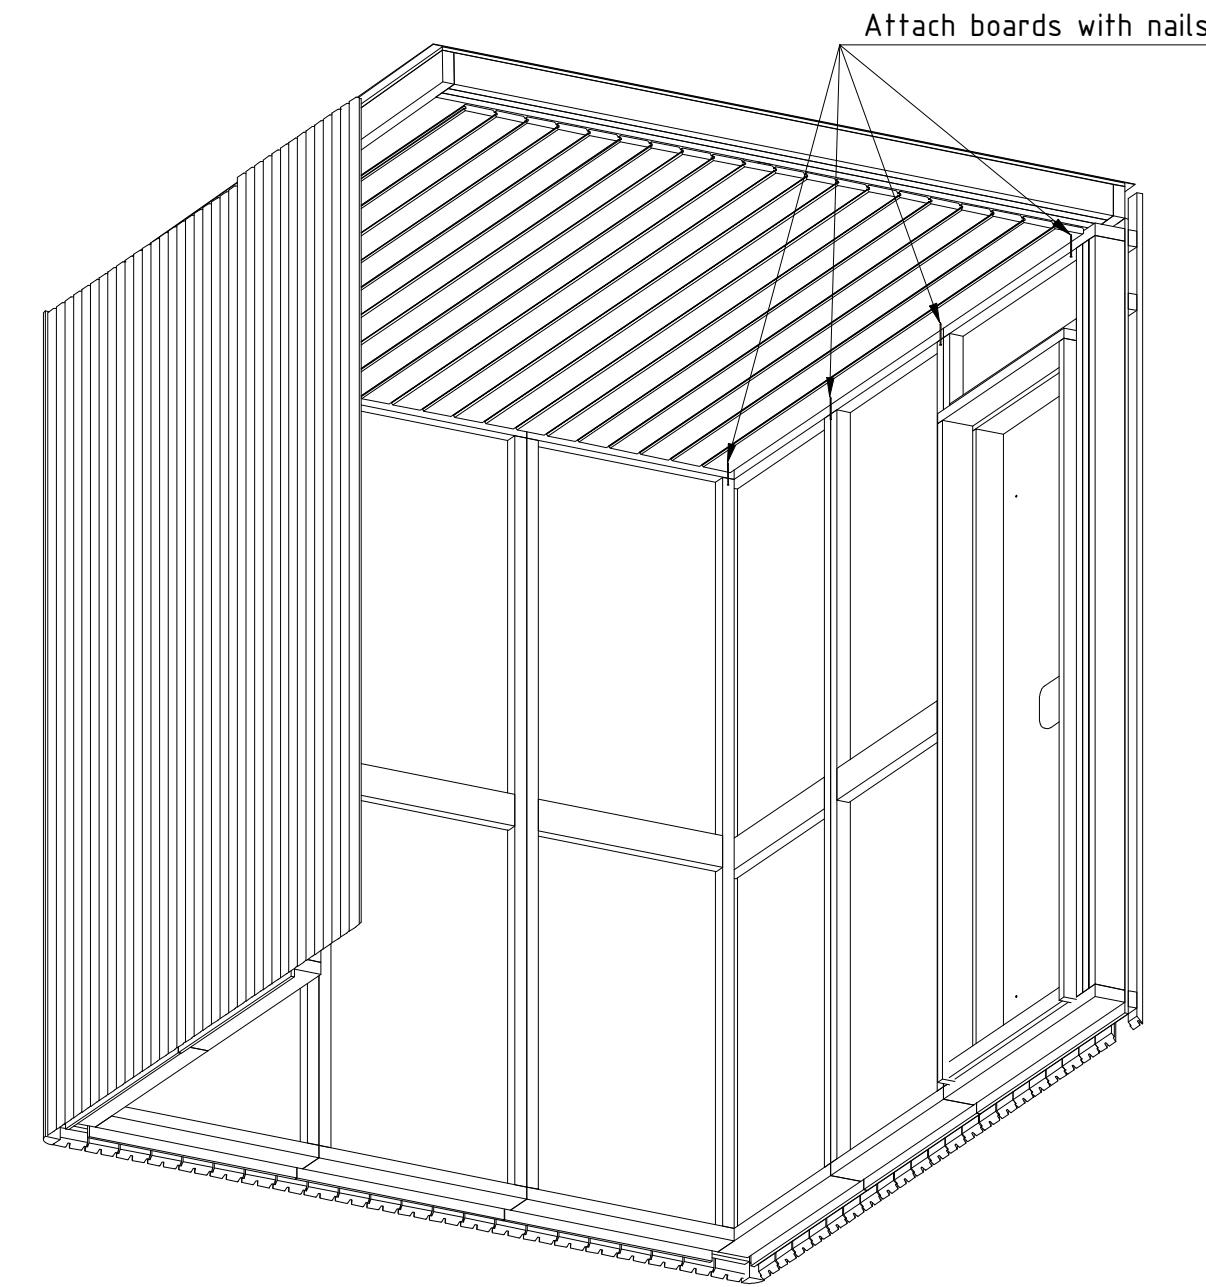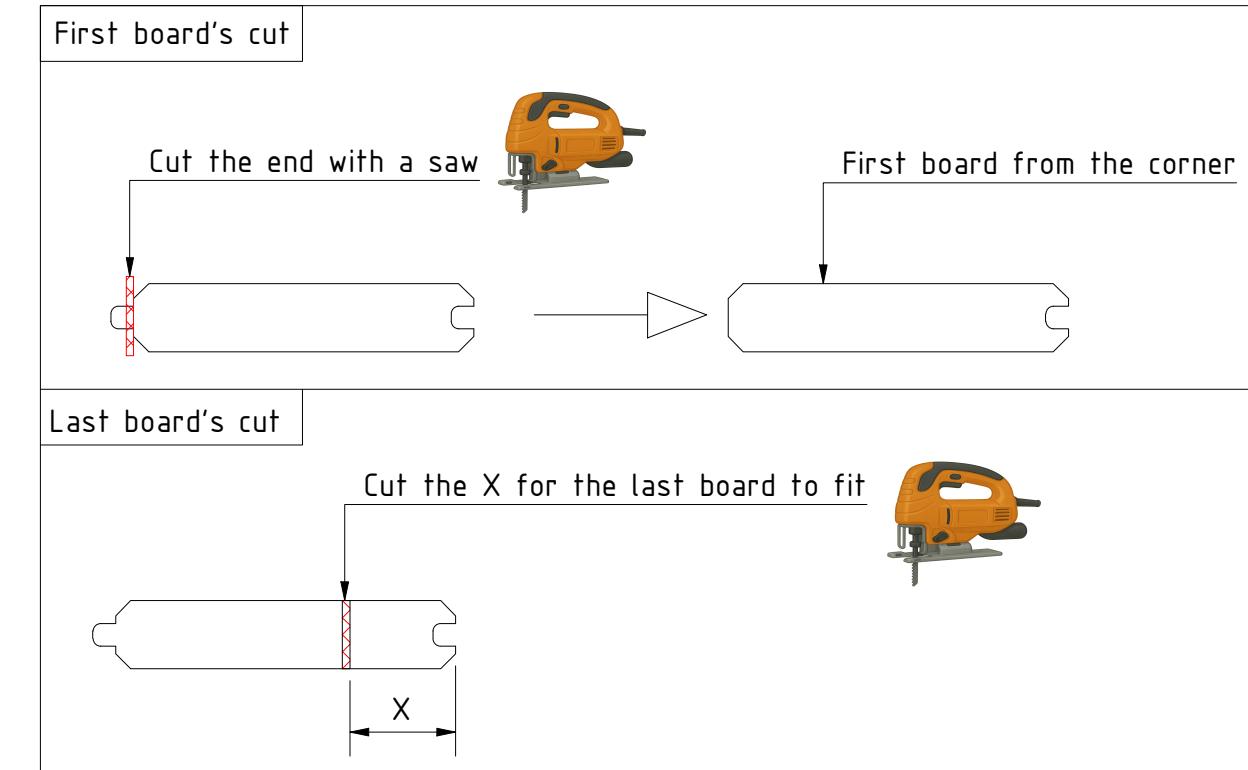


Step 17. Interior walls panel boards installation.

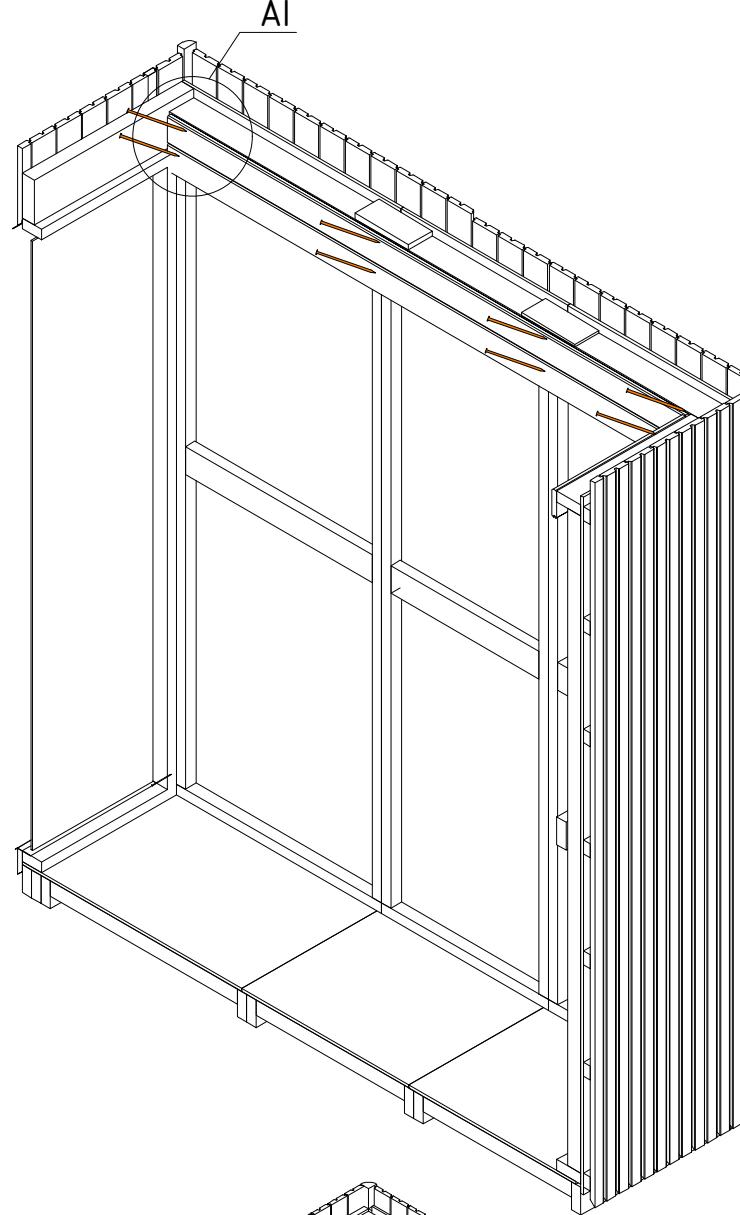

DETAIL AI
1 : 3



Place nails at the angle down

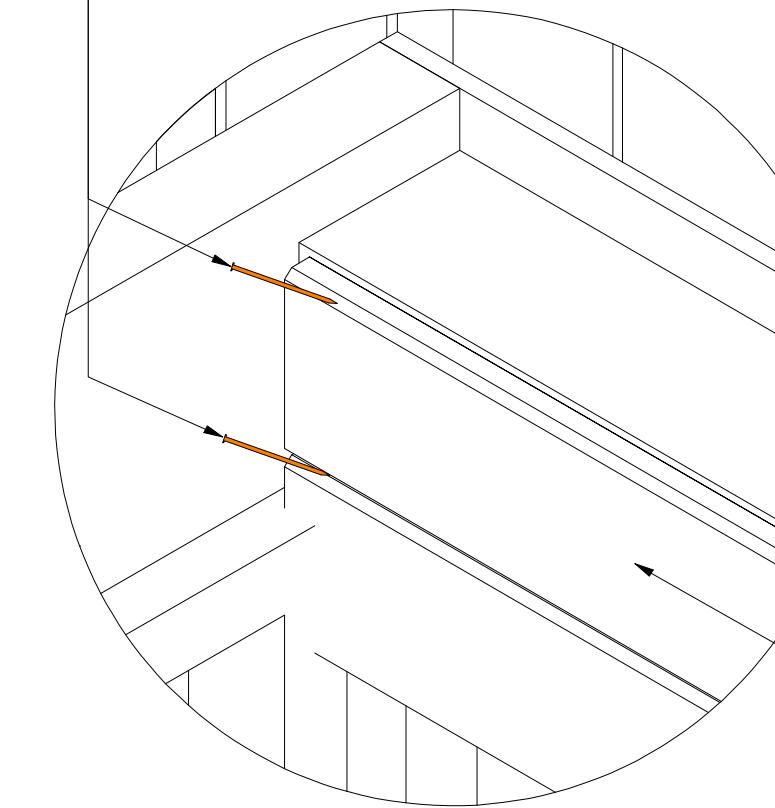


Use spirit level
for alignment.



Install panel boards
from top the bottom.


First board's cut

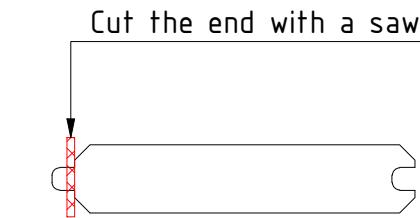



First board from the corner




Last board's cut

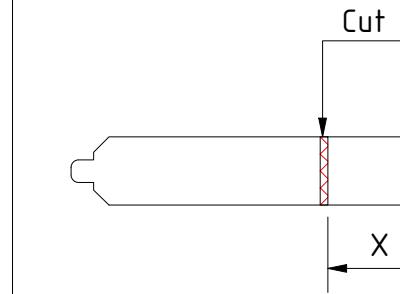


Cut the X for the last board to fit

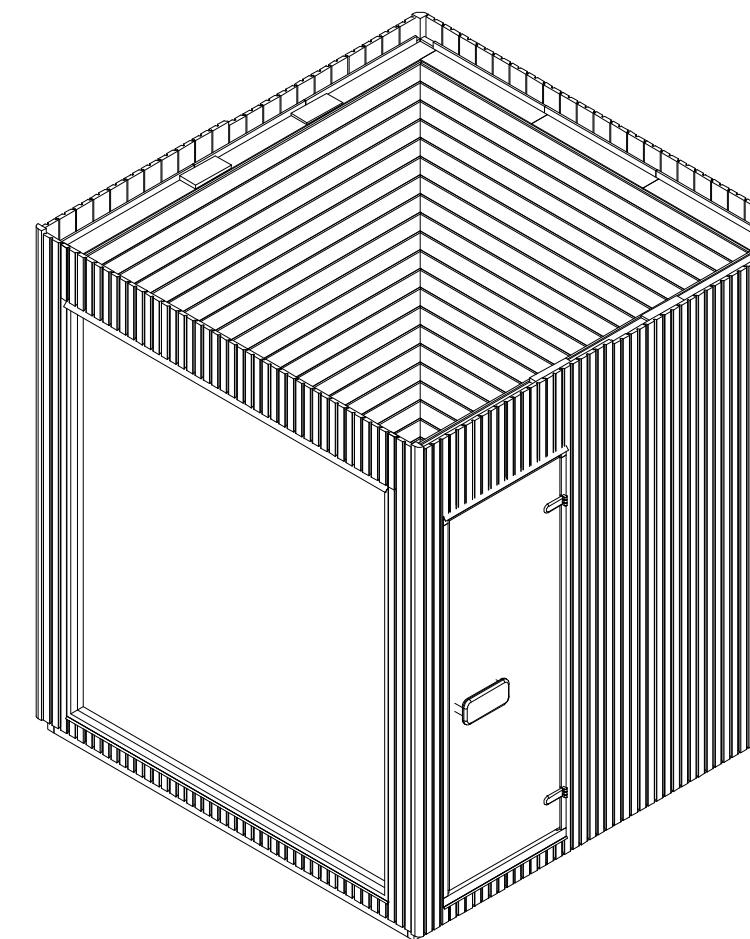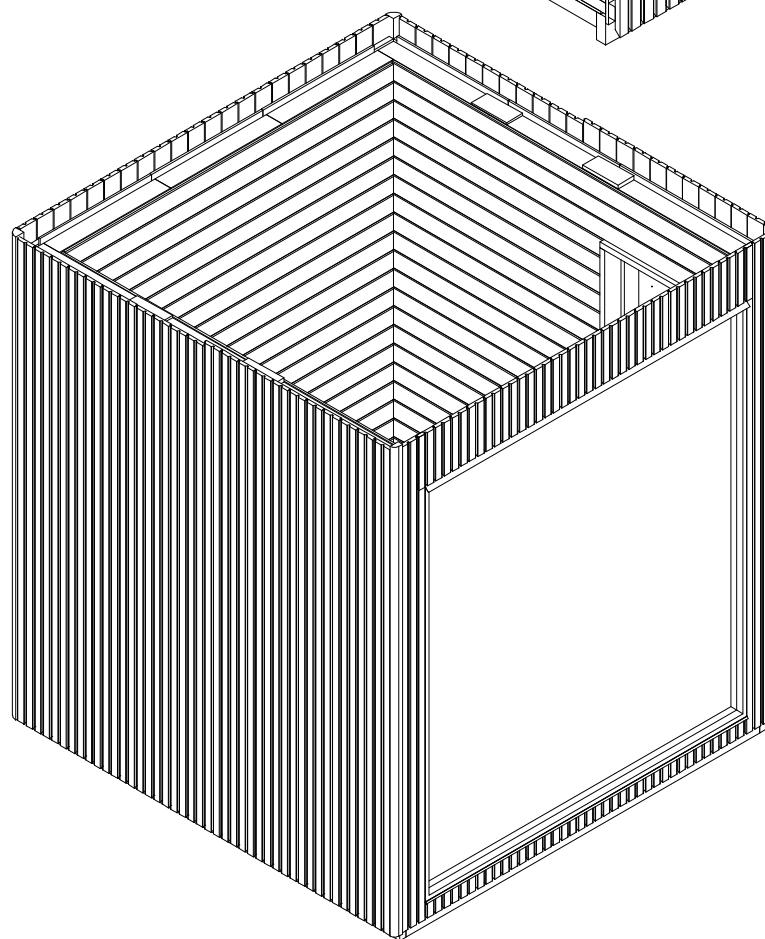


Attach 90x28 boards with nails around door niche.

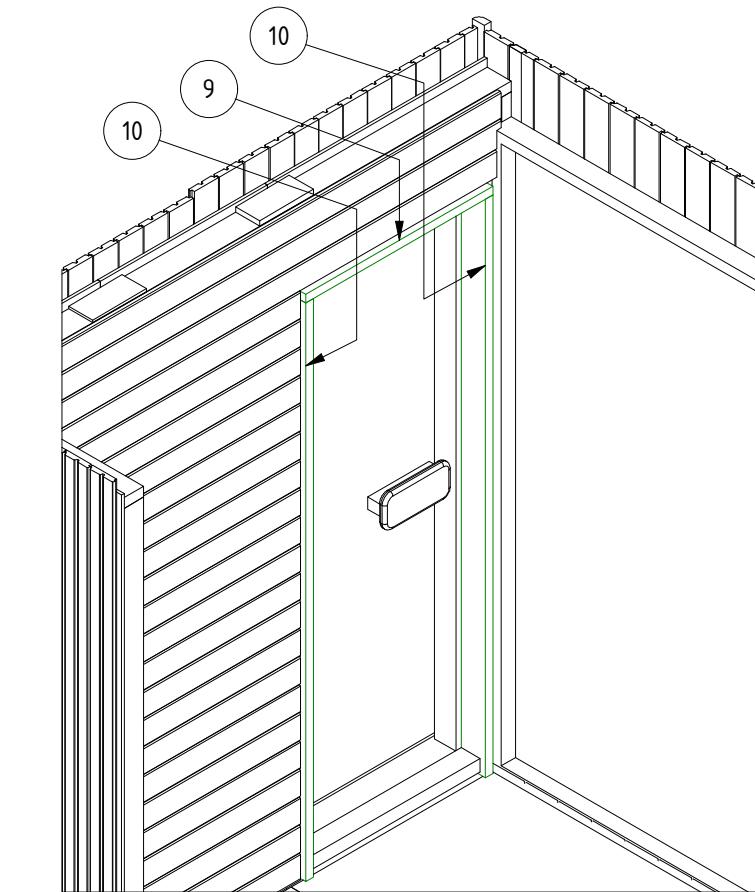


Step 18. Air vent installation.

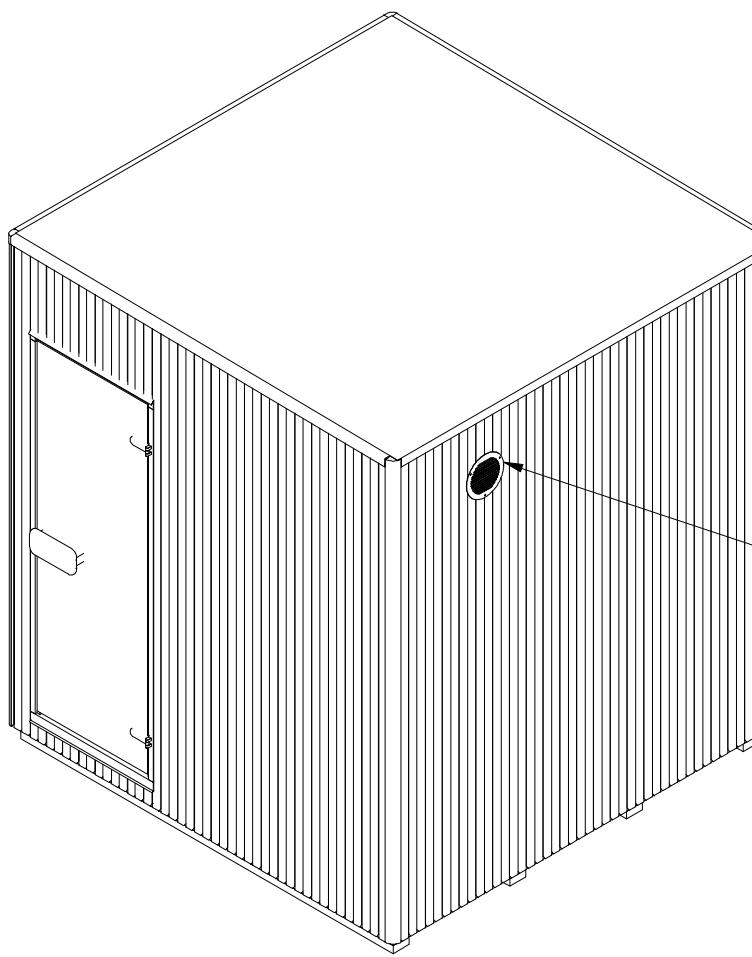

Air vent

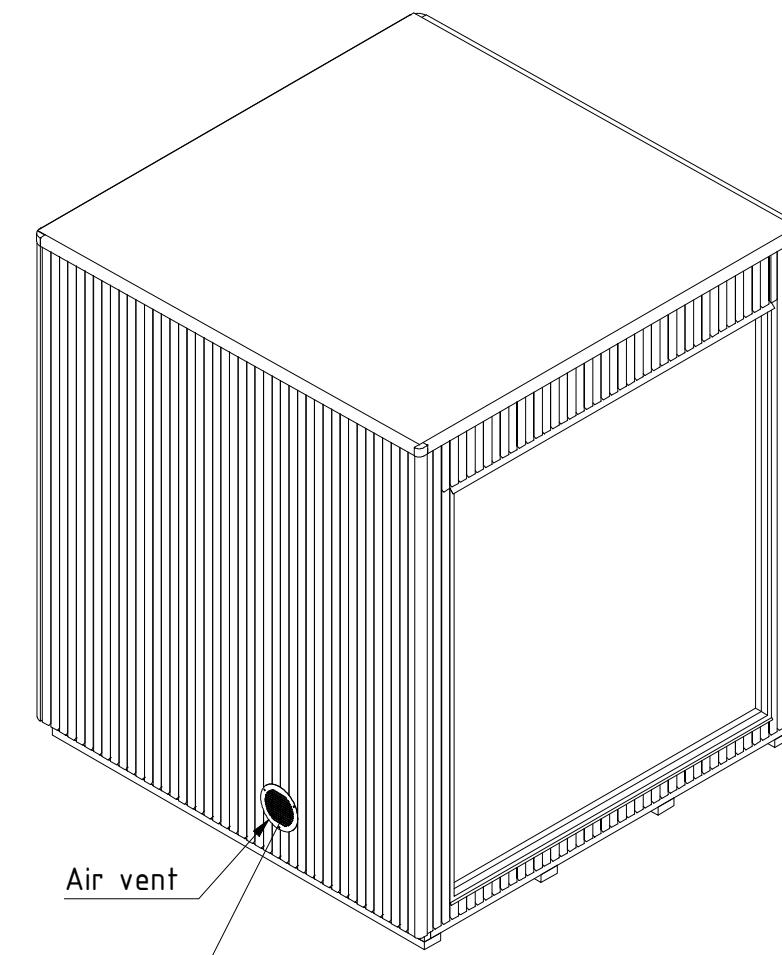



Air vent

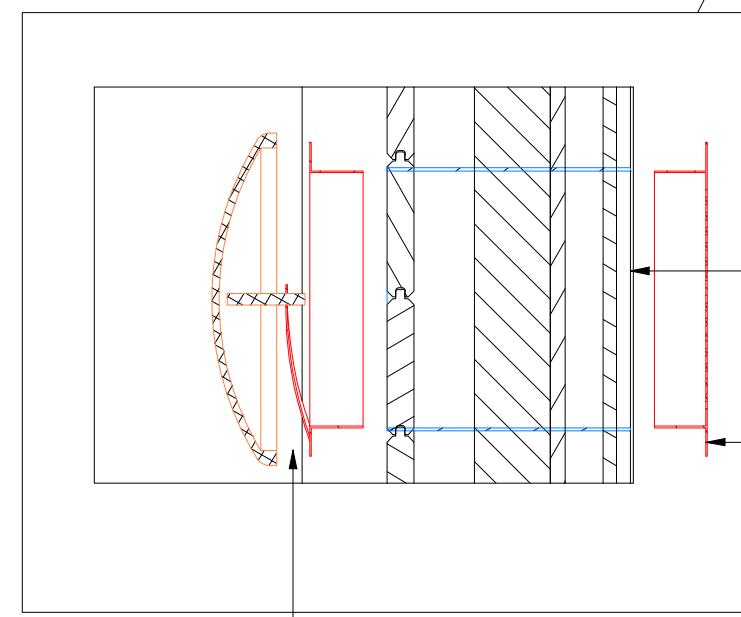


1. Cut a hole.
2. Insert hose for ventilation.

3. Fix grill on the outside.

4. Fix internal cover on the inside.


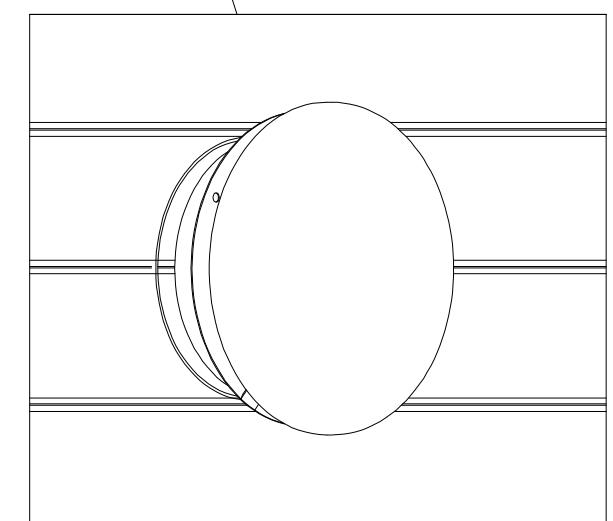
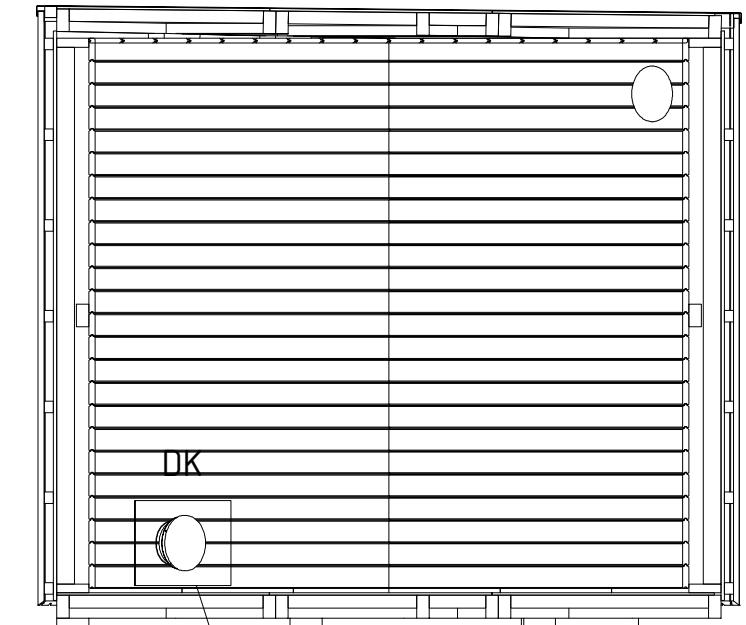


INTERIOR BENCHES


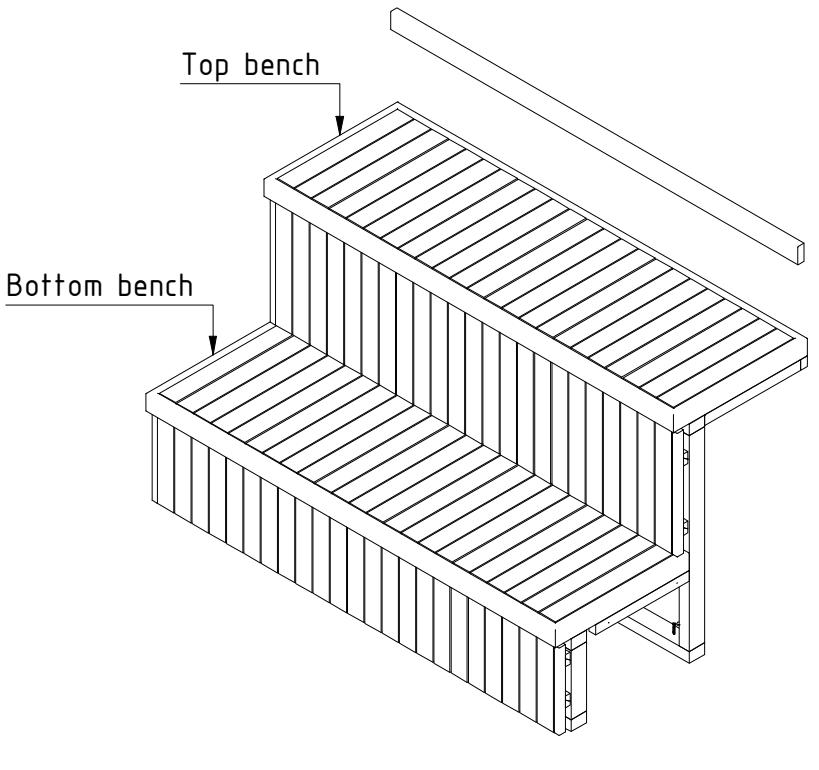


Step 1. Subframe plank installation.

Use spirit level for installation.

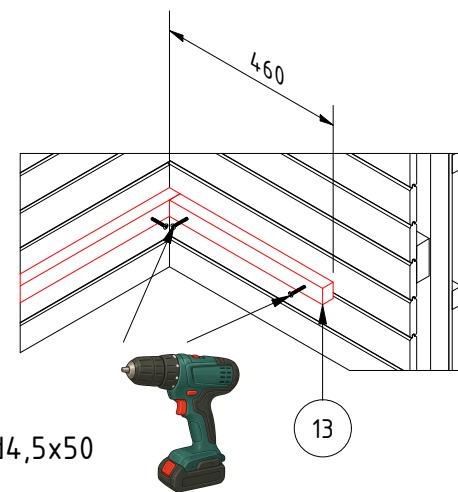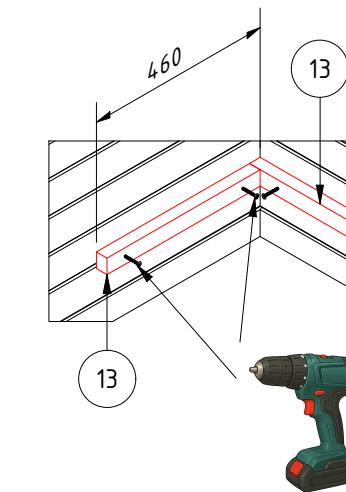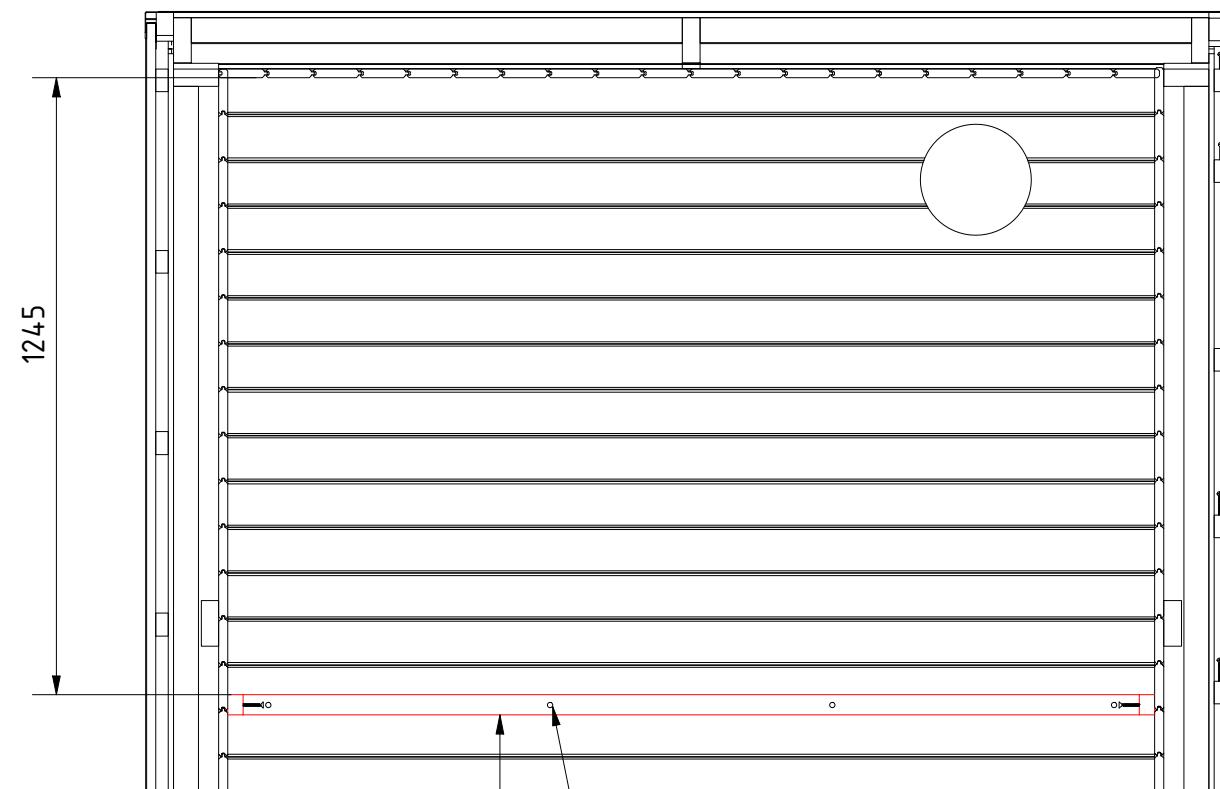

Step 2. Top bench frame.

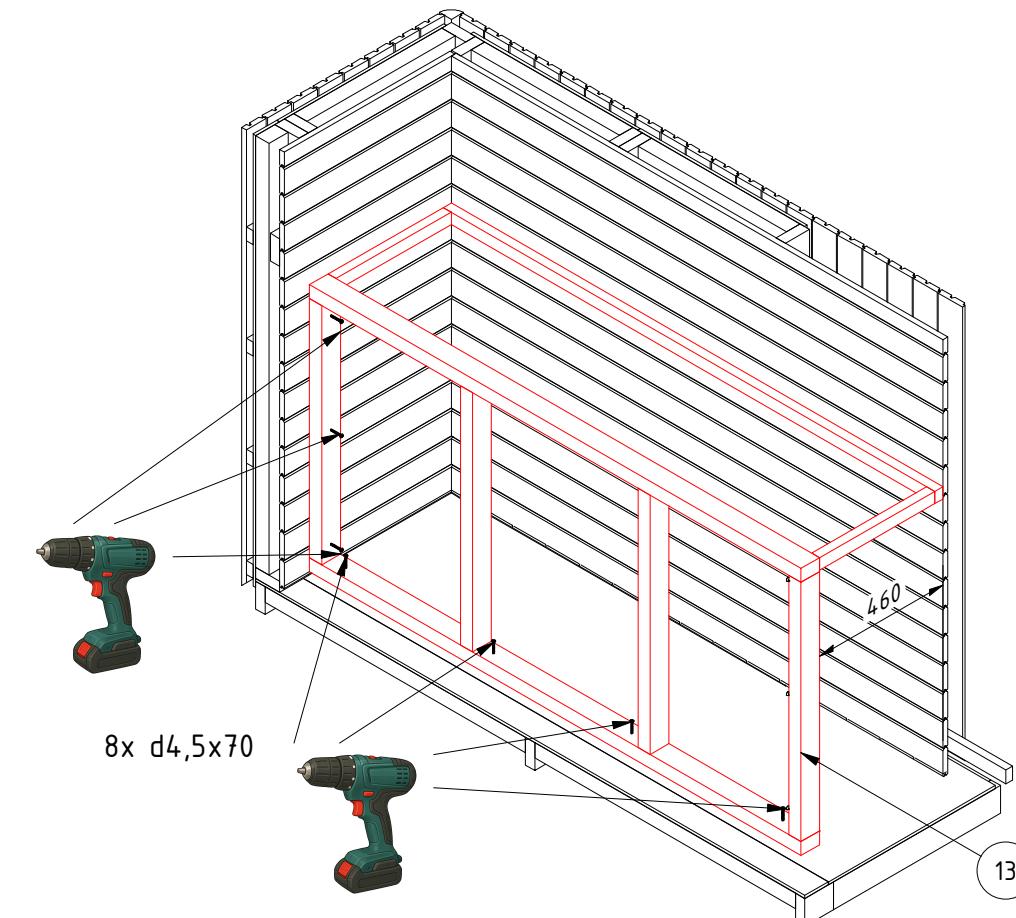
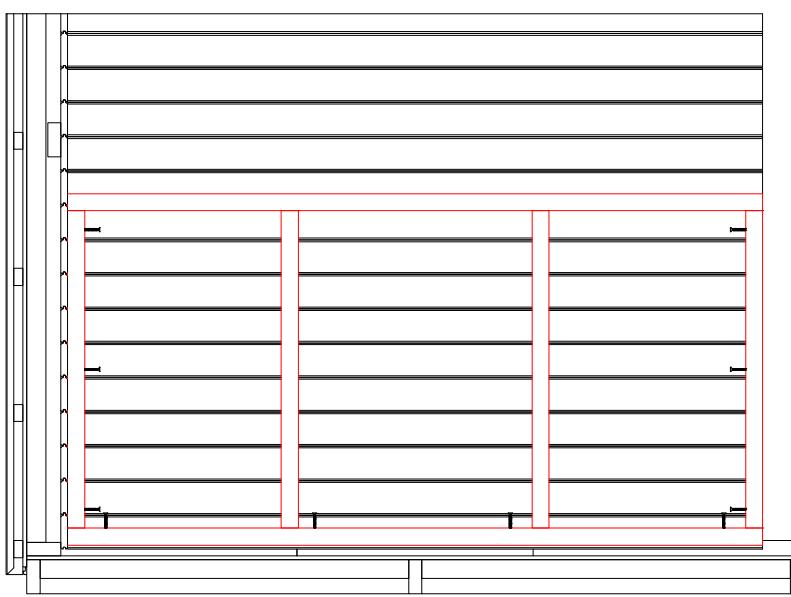


Step 3. Bottom bench frame.


Use spirit level for installation!





4x d4,5x70

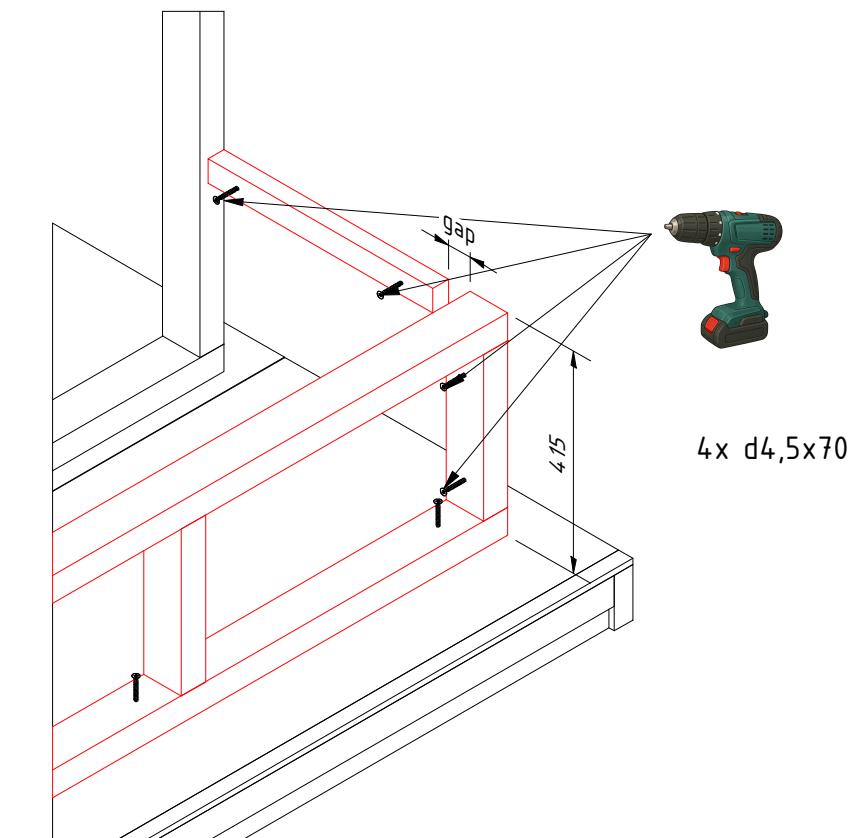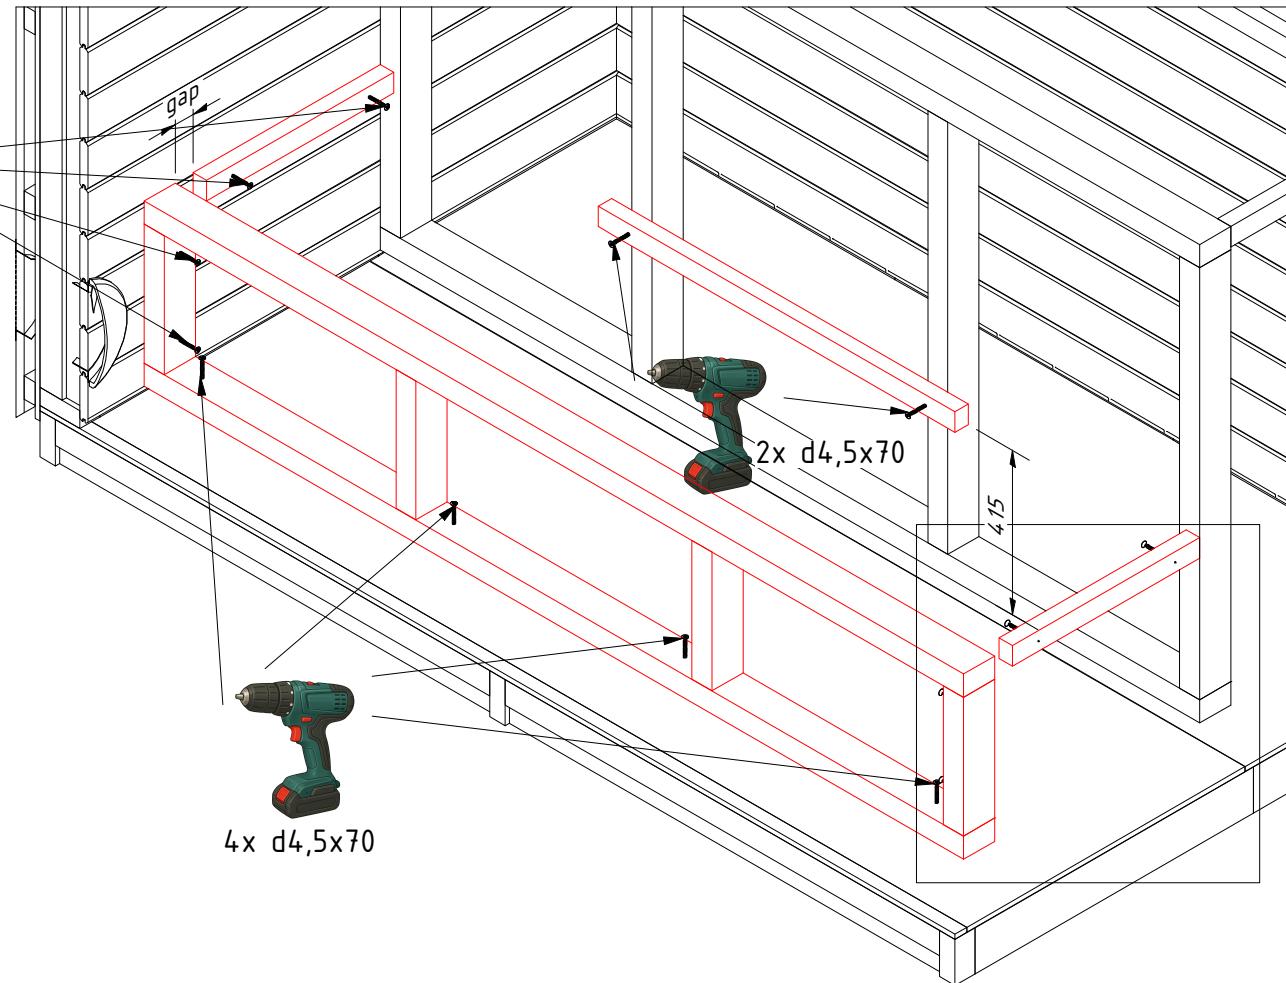

Step 4. Benches installation.

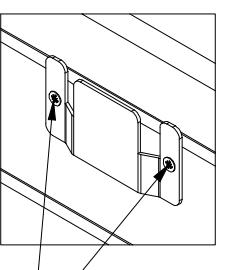

2x d4,5x20

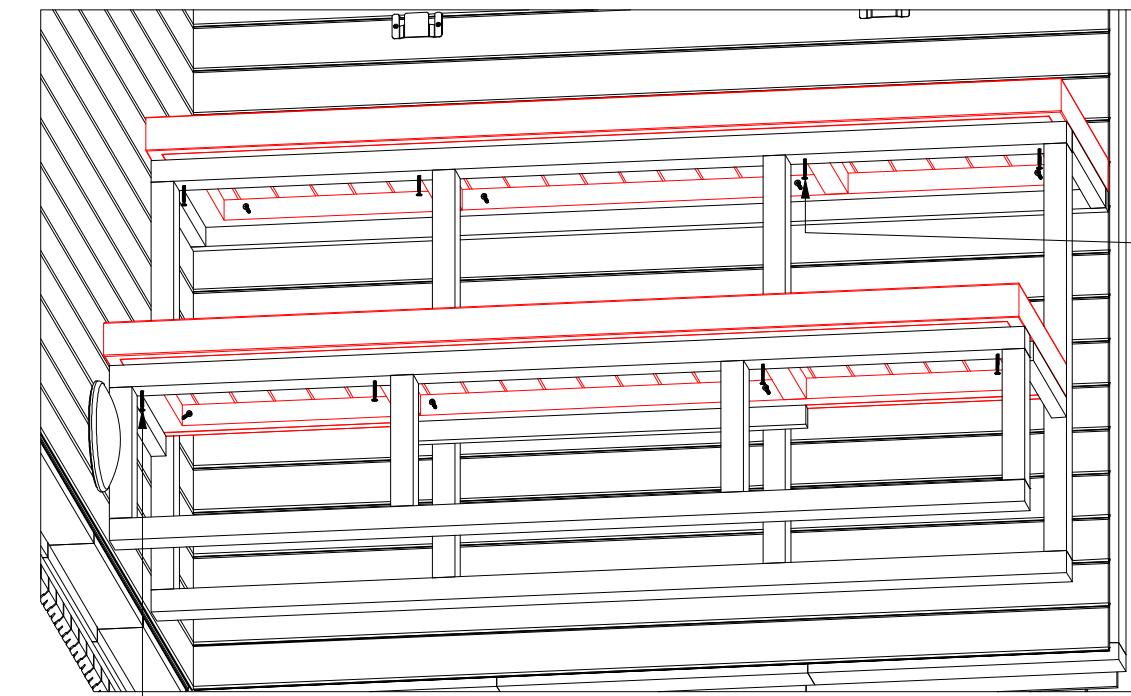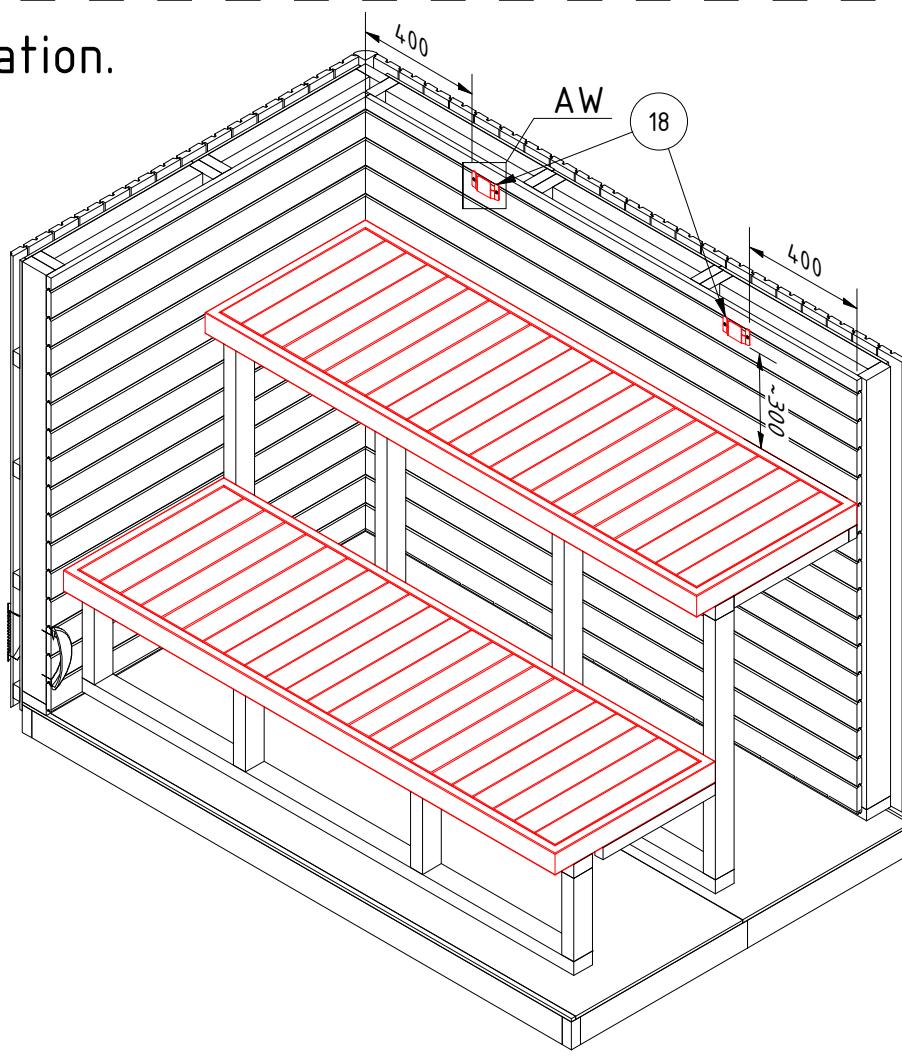


4x d4,5x70
screws for bottom bench




4x d4,5x70
screws for top bench


Step 5. LED wiring under the benches.

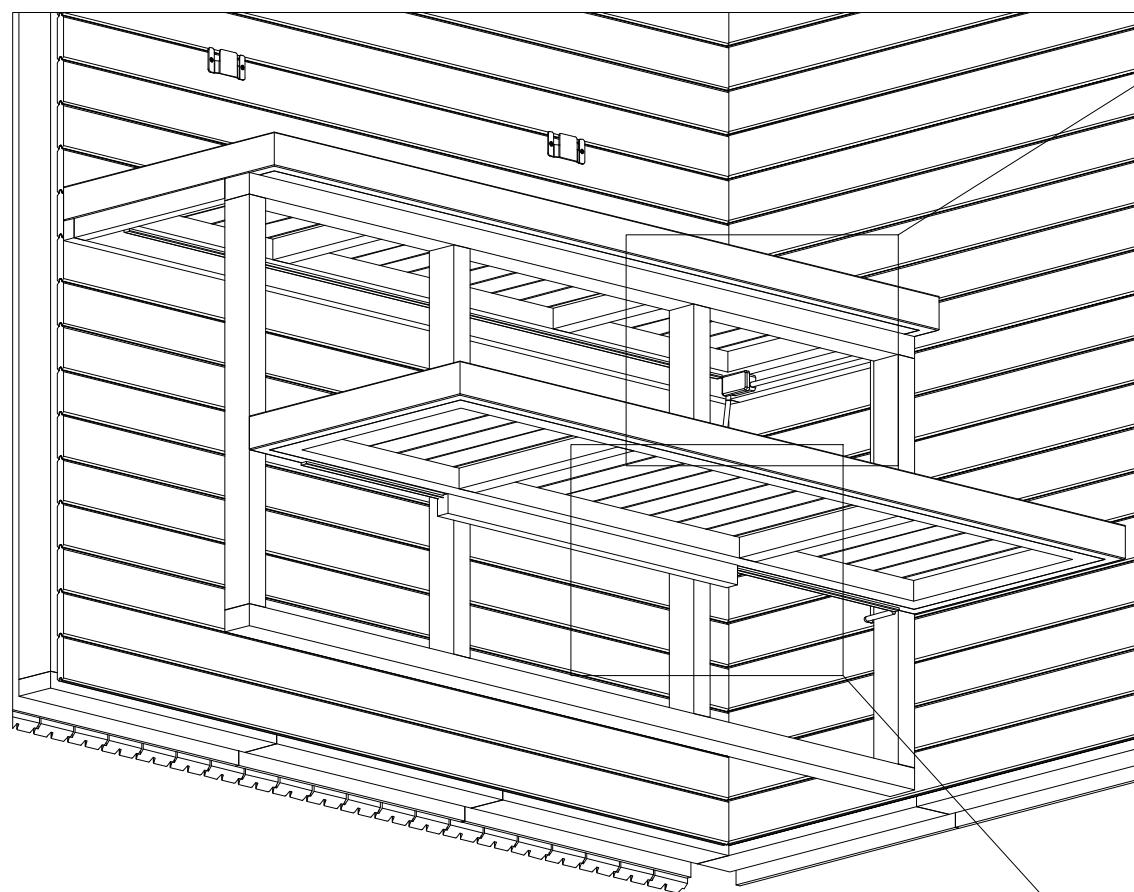



Led for top bench

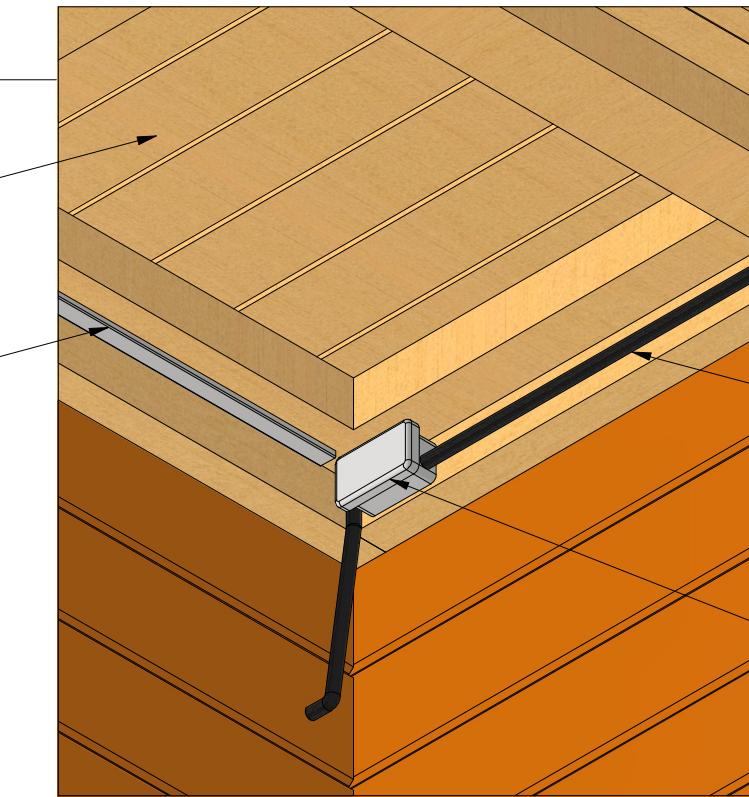


Led for bottom bench

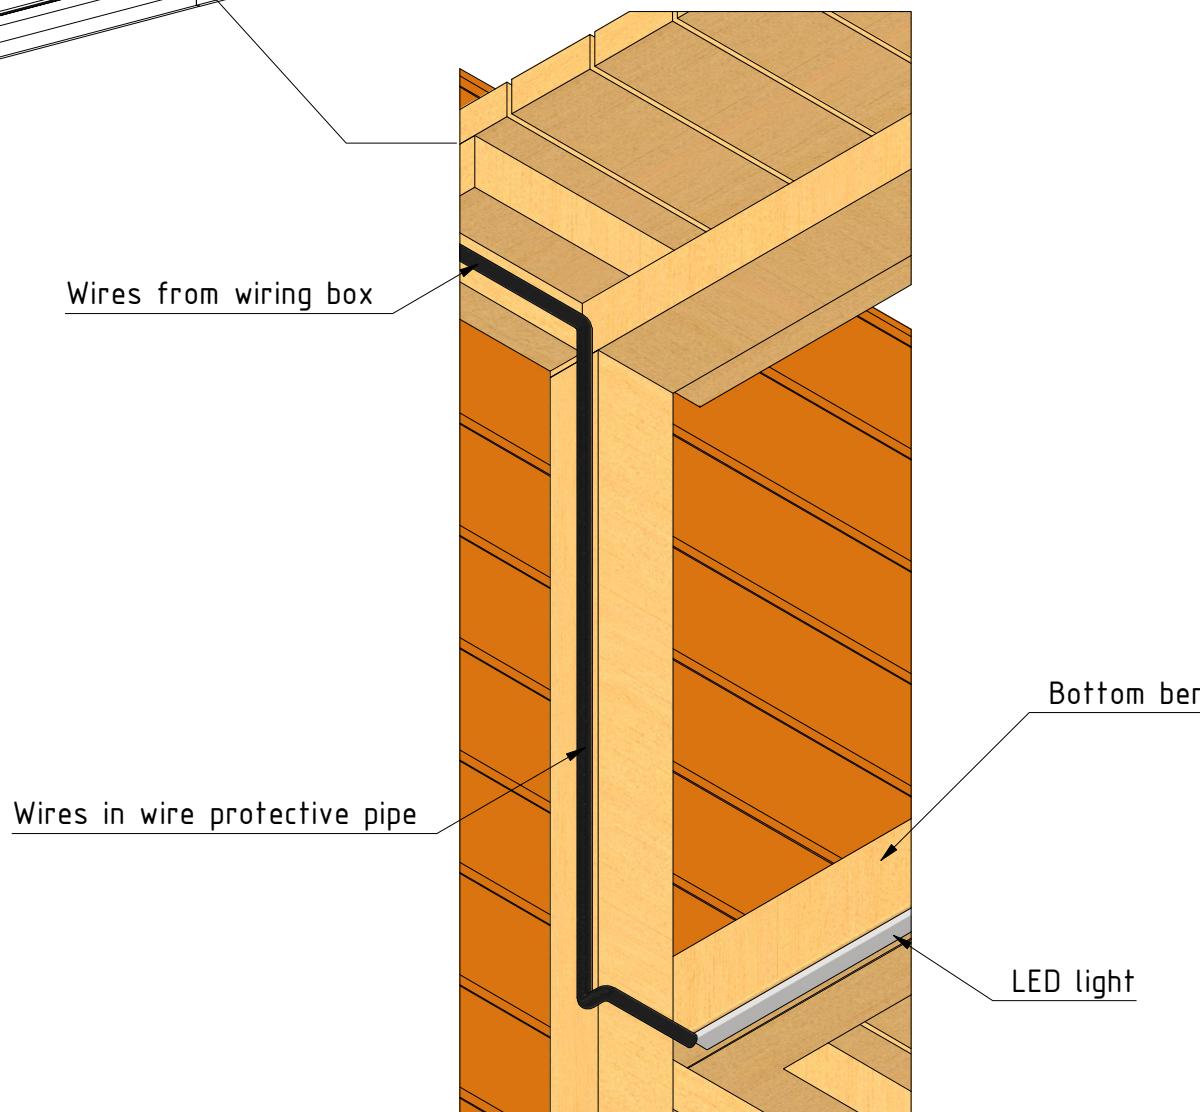



Step 6. Covers installation.

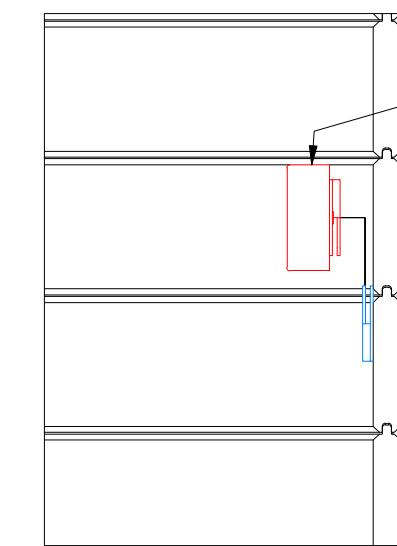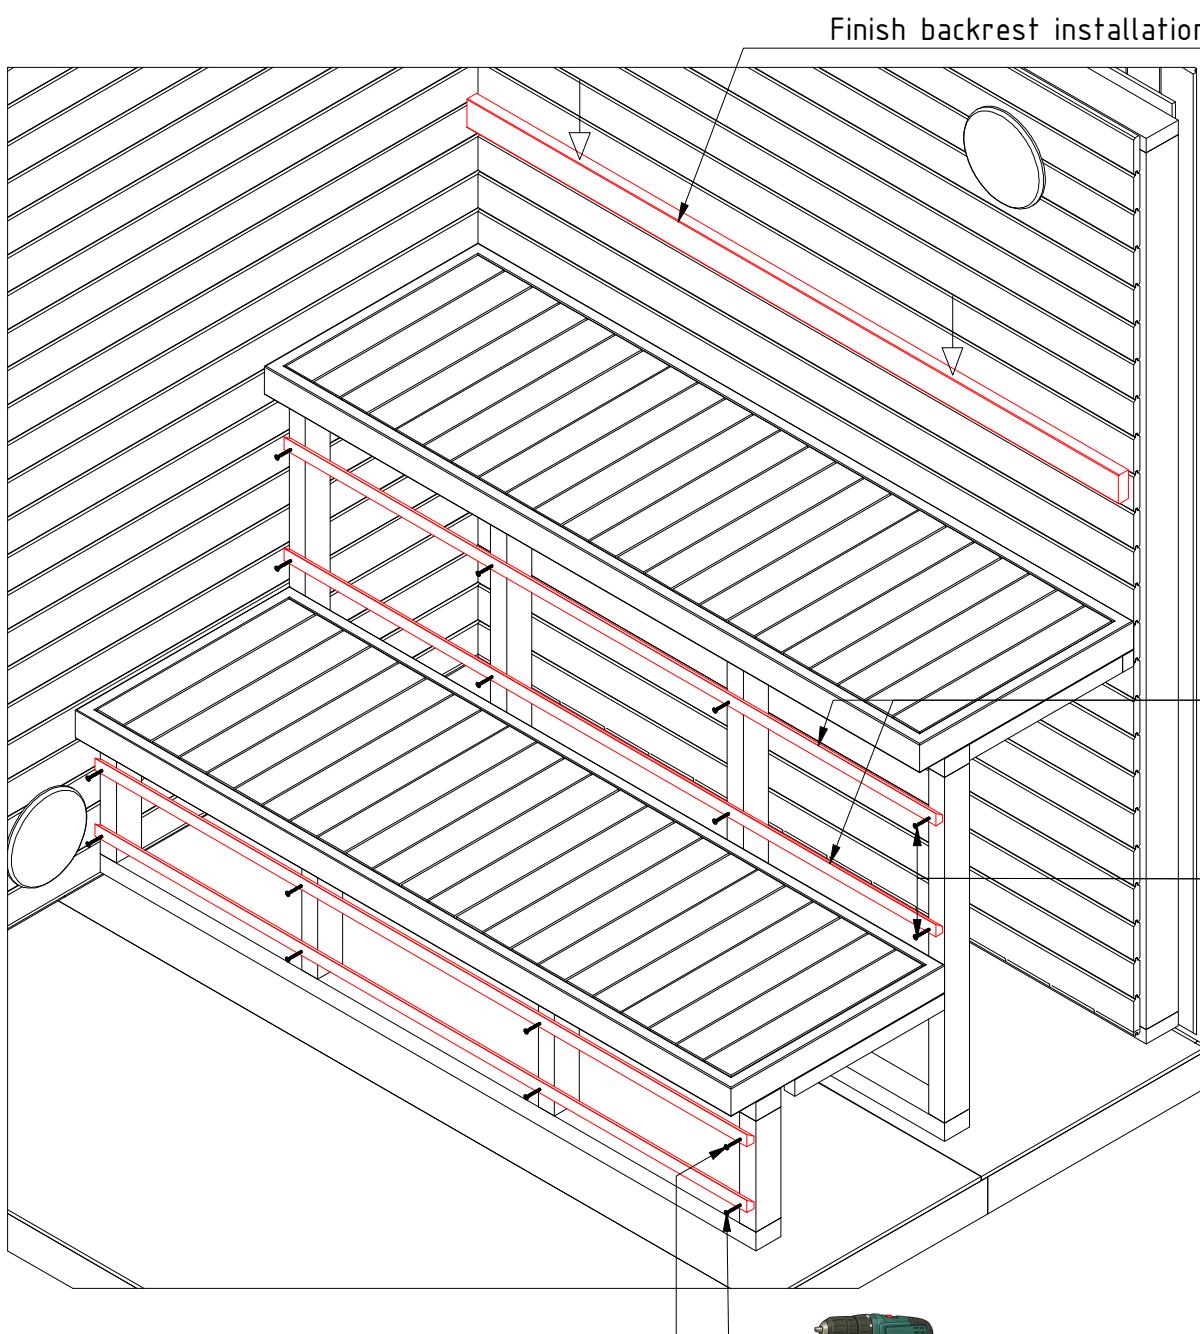

5.1. Install plank for covers mounting.

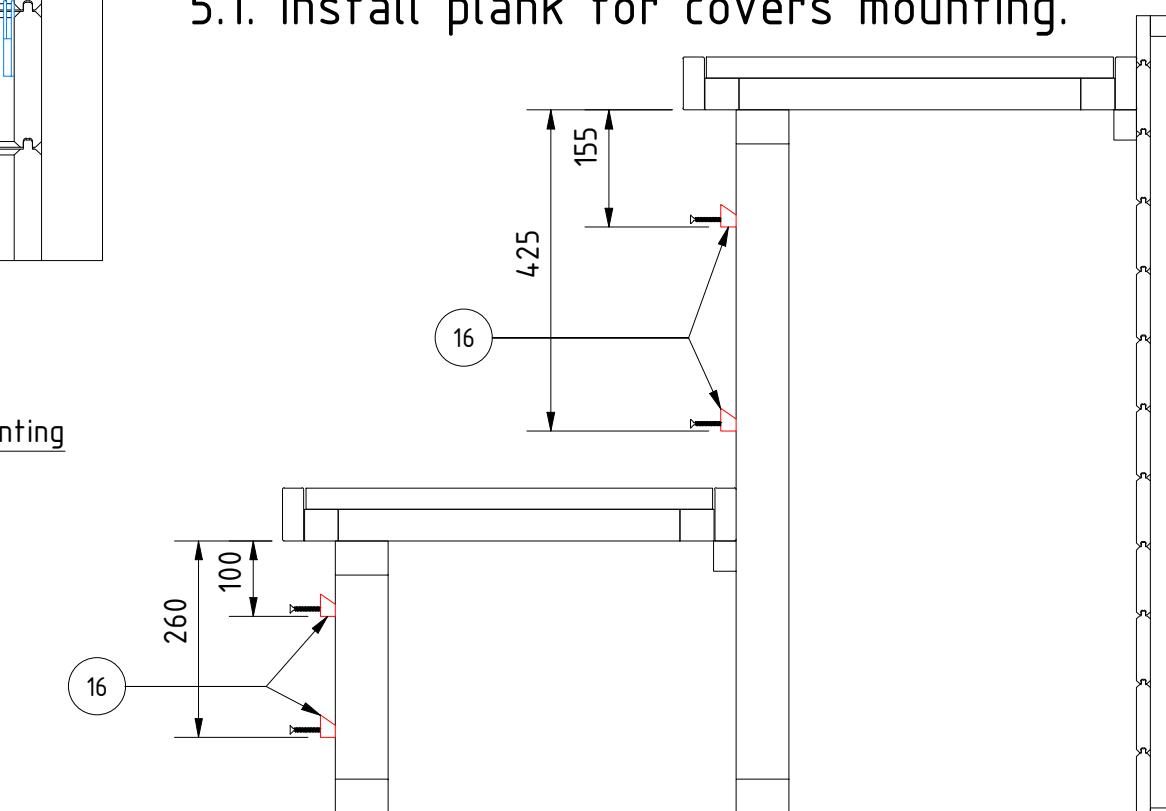

5.2. Mount the covers.

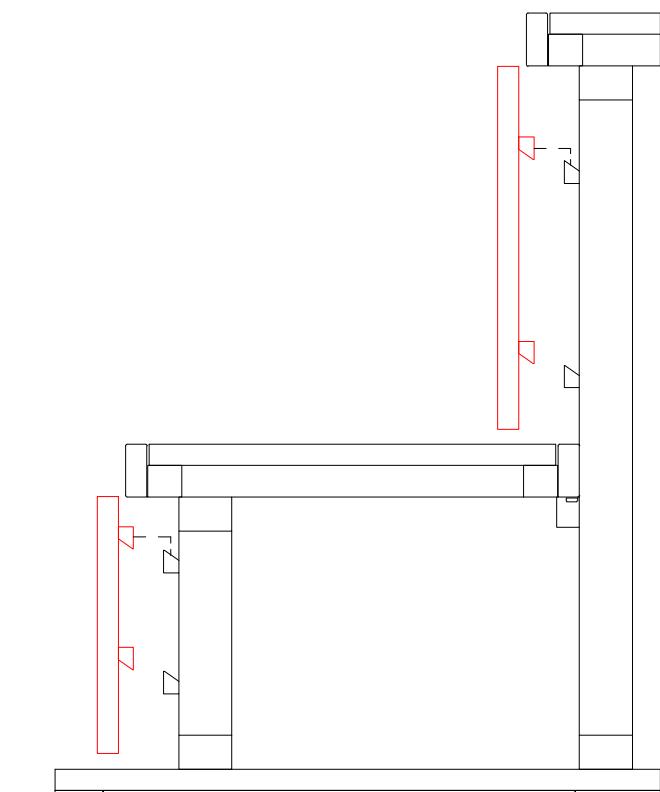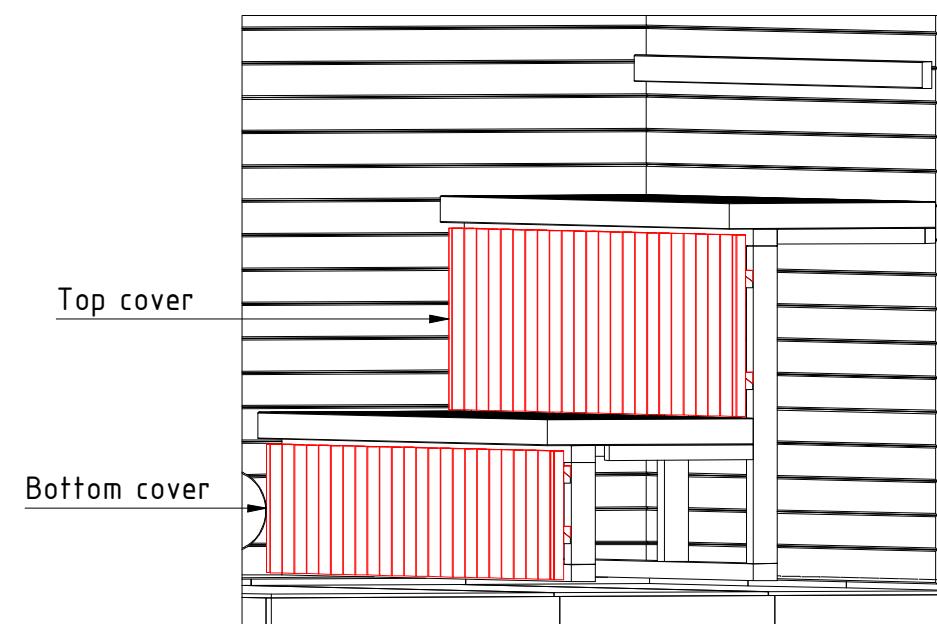

Step 7. Stove installation.

