


Ergo-Series E8W Barrel Sauna




Note: Please read manual before construction

Front & Back Walls

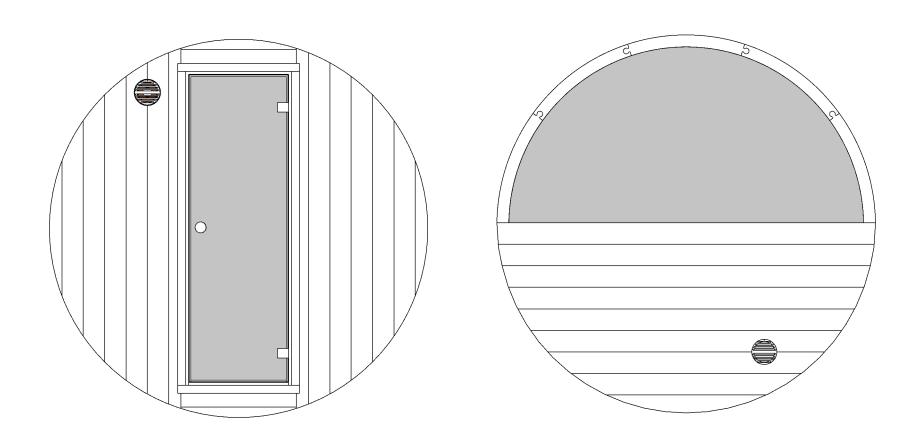


E8W Barrel Sauna 87D" x 81H" **Details list.** 6c 4 6d 4 6a • 6b • 63" + 87 16" + 733 16" (x2)(x1) (x1) (x2) (x2)(x1) (x1) (x2) (x1)10a 15a. • L=~256" B .5d (x2) (x2)x2 drain set (x2)(x2) (x2)(x2) (x2) • B1 (x1) (x38/50/62) 20d 20b (x5/7/8)(x2)(x2)(x2) (x1) Bit PH2 (x16) (x2)~2lbs. (x15) (x90) (x45) (x150) (x50) (x1)20c € (x2) 20a 🖢 (x2) (x3)


Tools needed

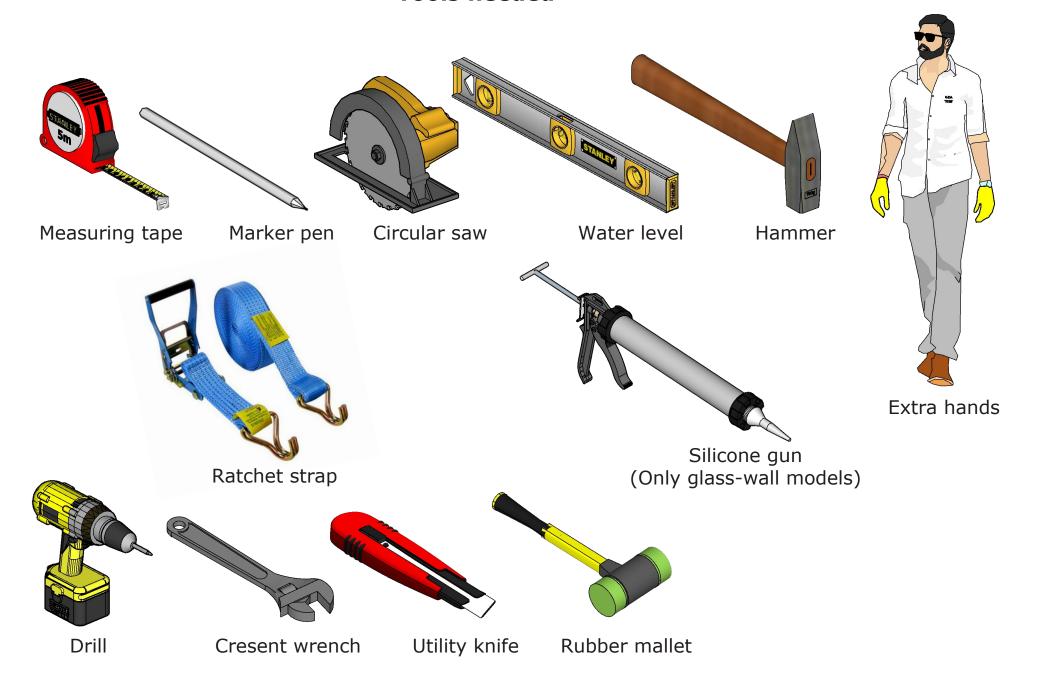


Wooden front wall installation

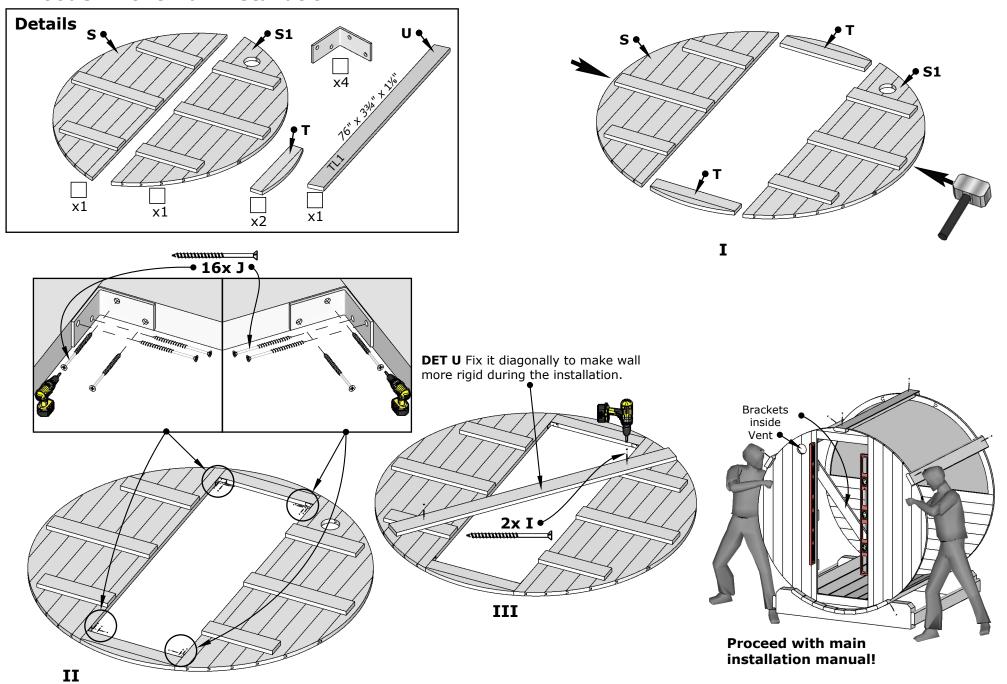



Half-moon wall installation

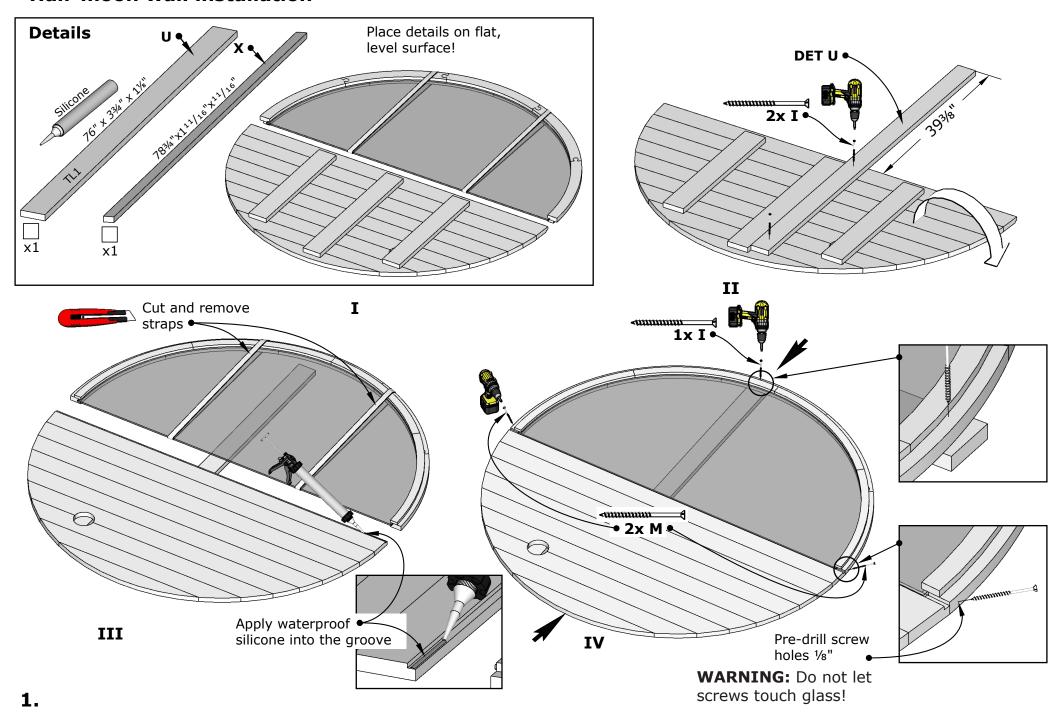



Half-moon wall installation

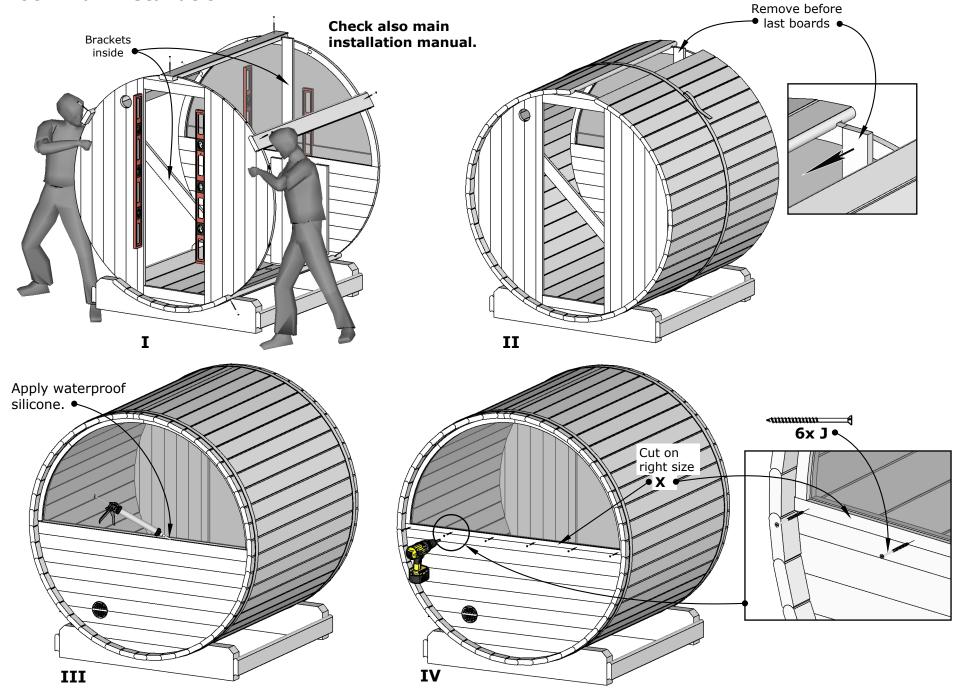


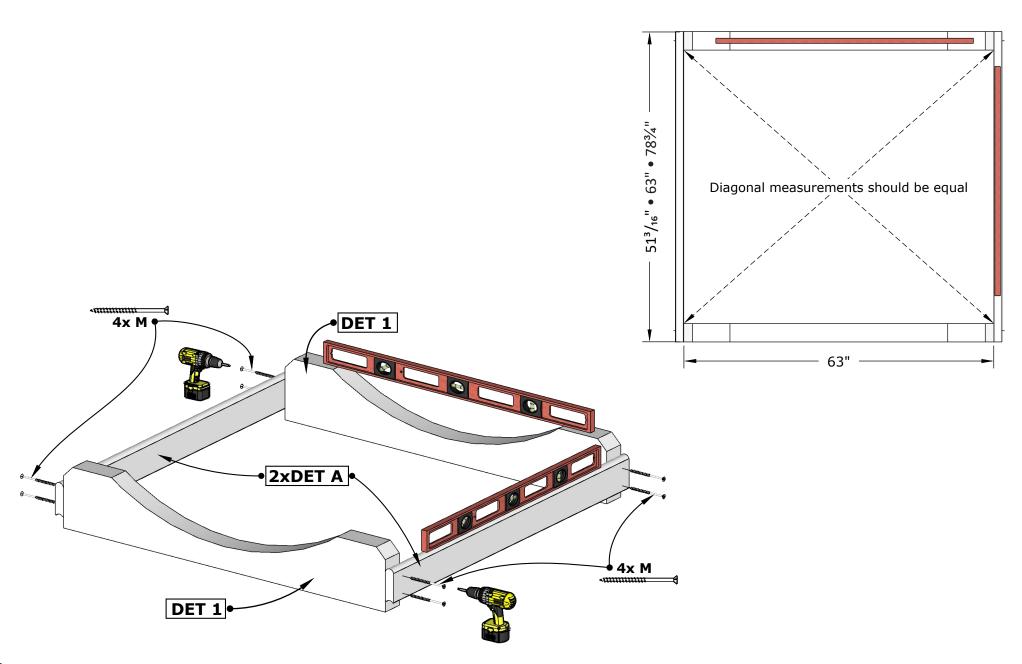


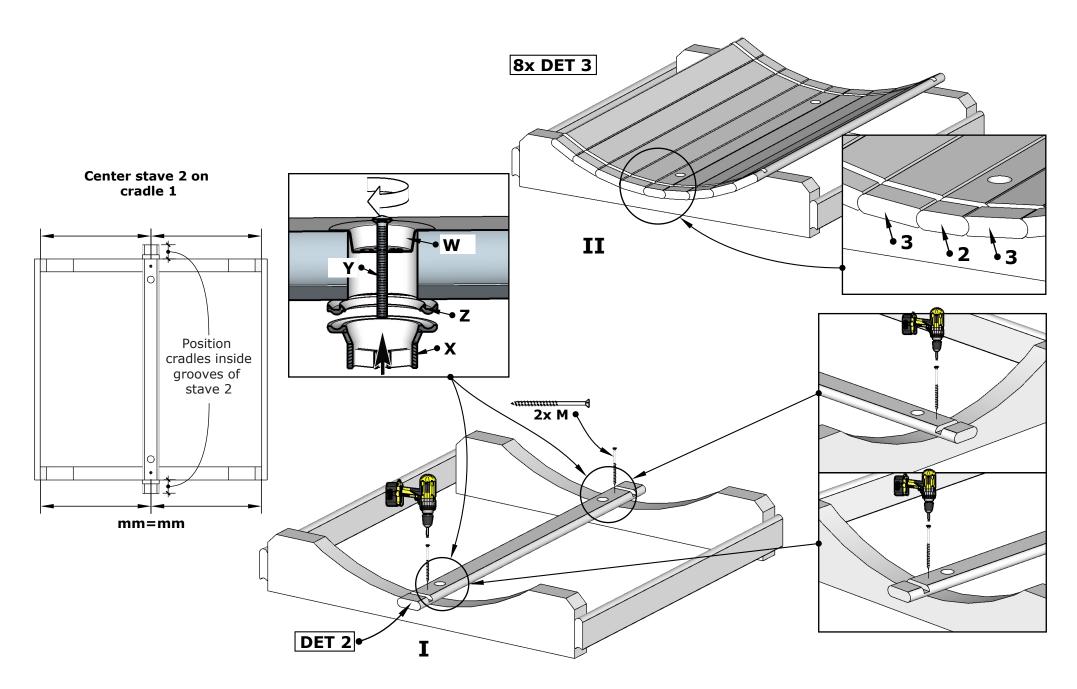

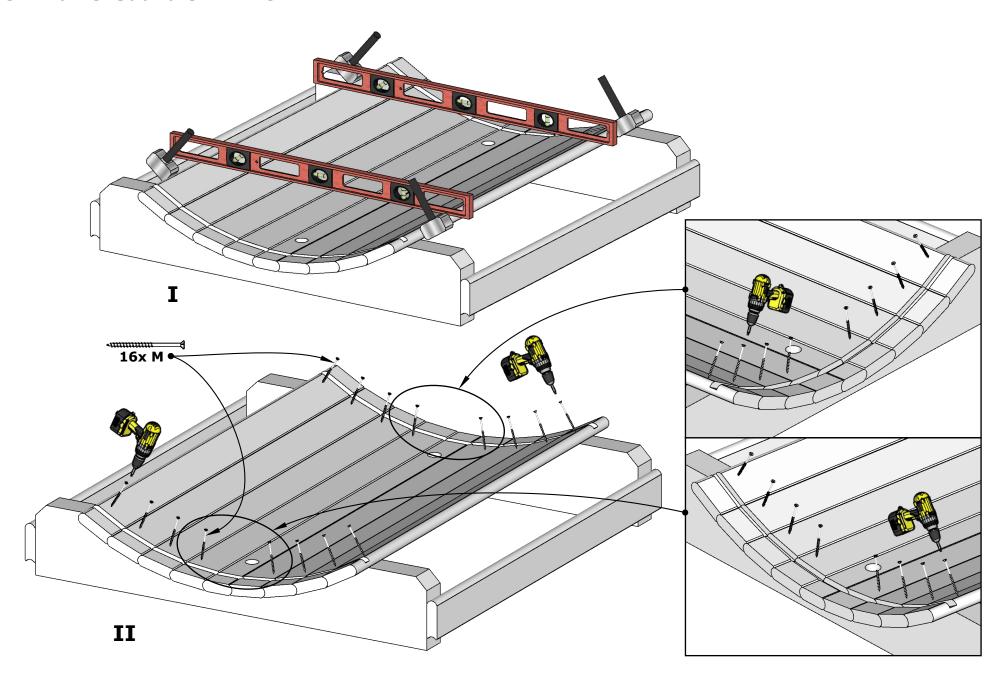

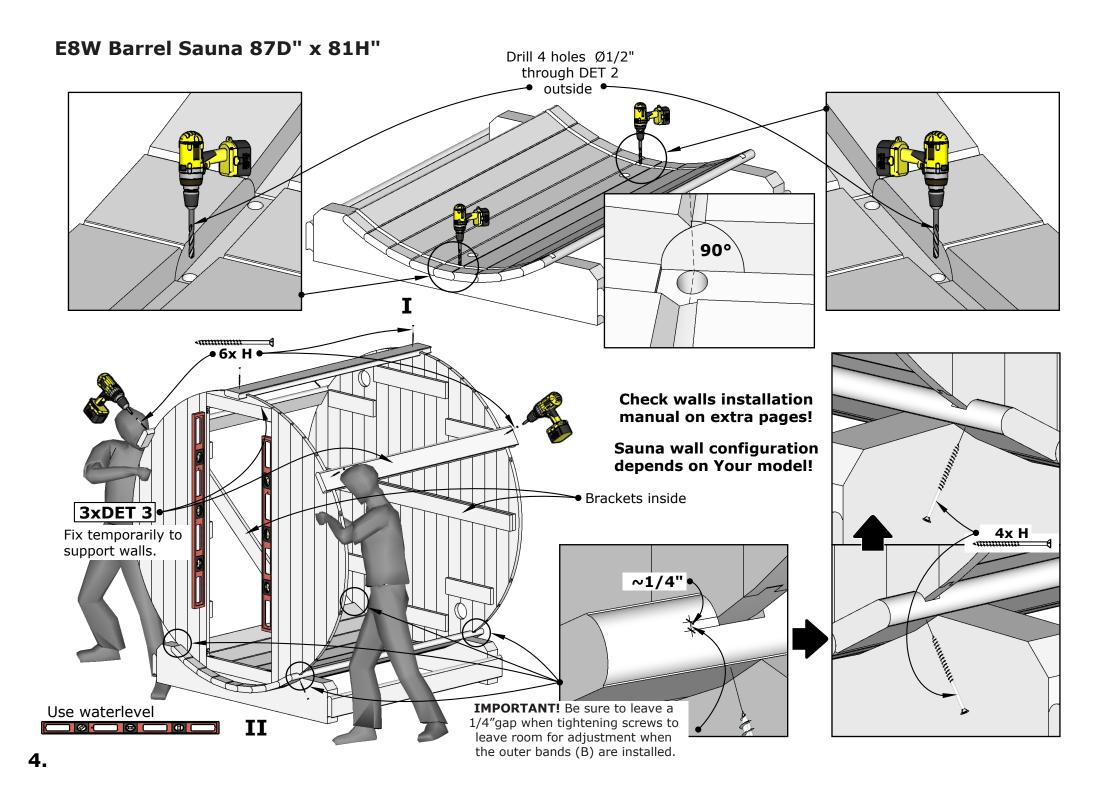


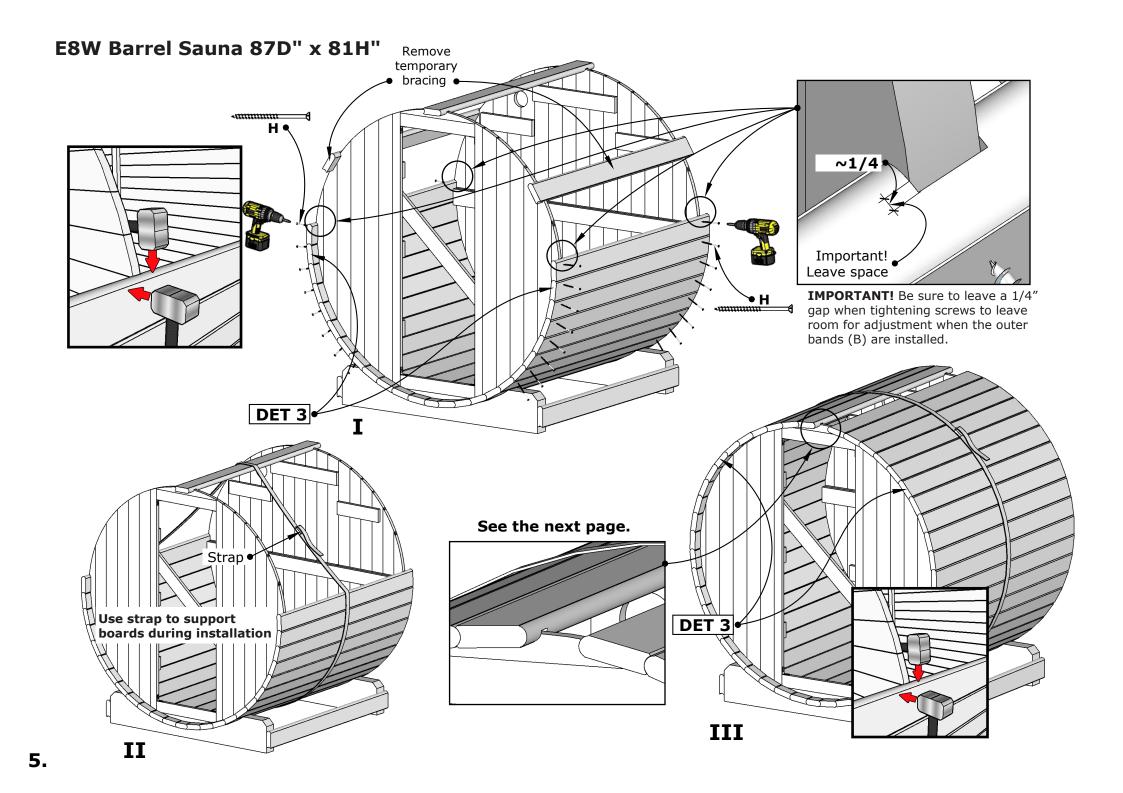


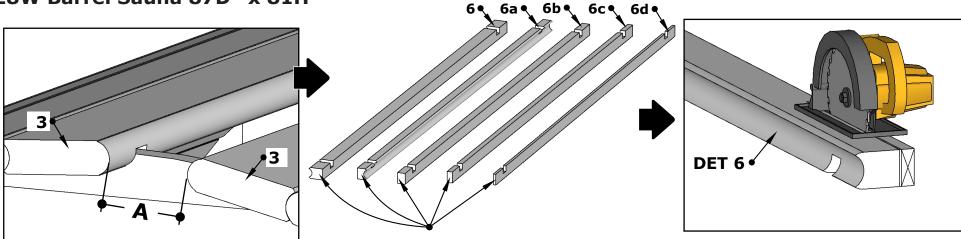


Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately 1/4" wider than the gap.


If needed, trim the flat edge of the board to create the desired width.

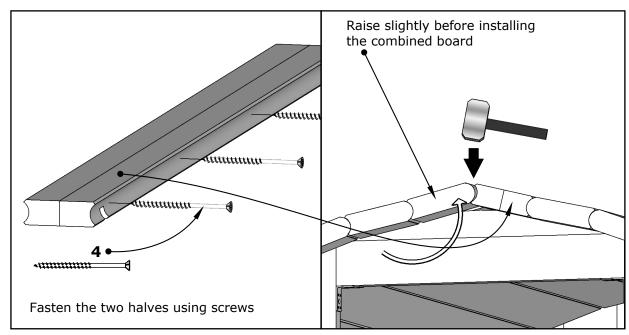


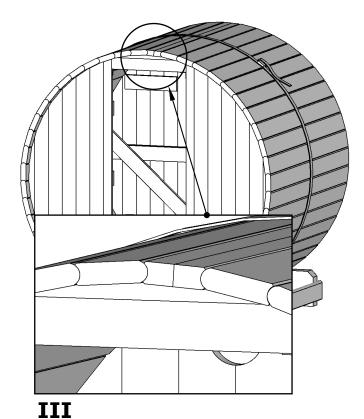



Ι

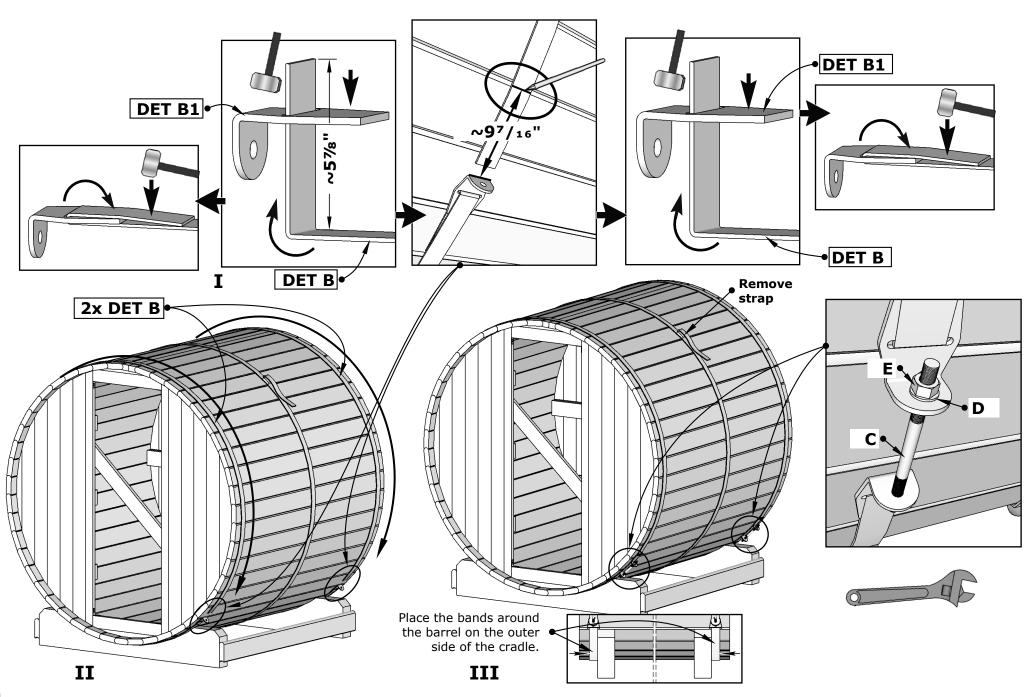


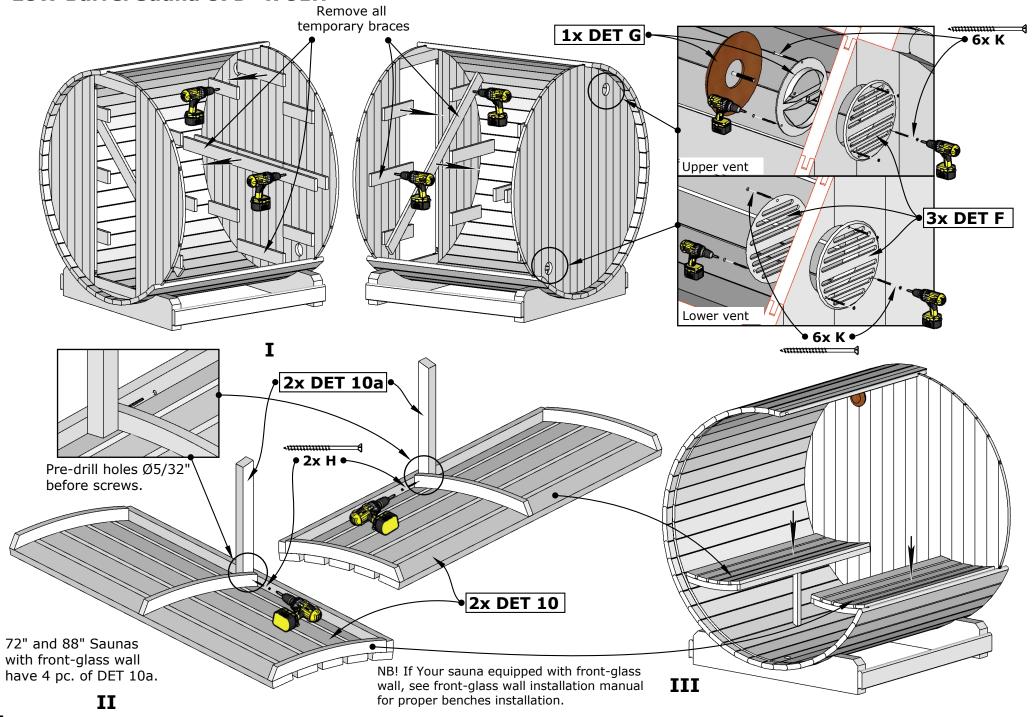

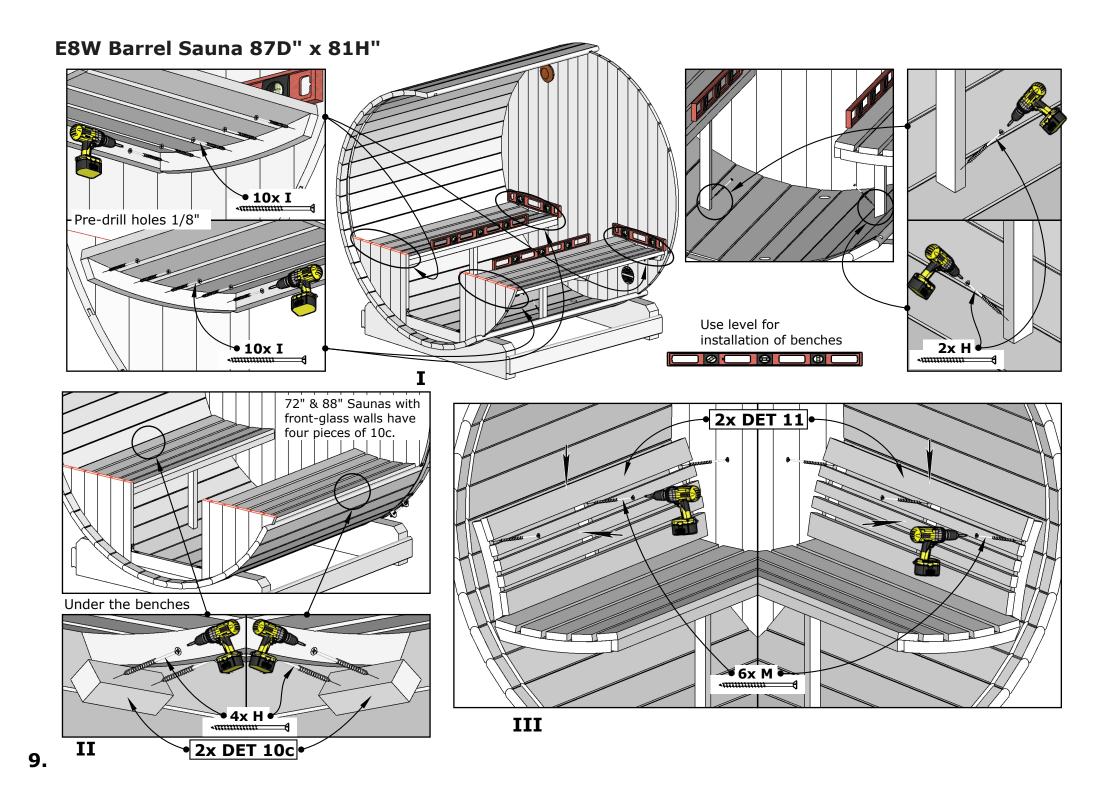

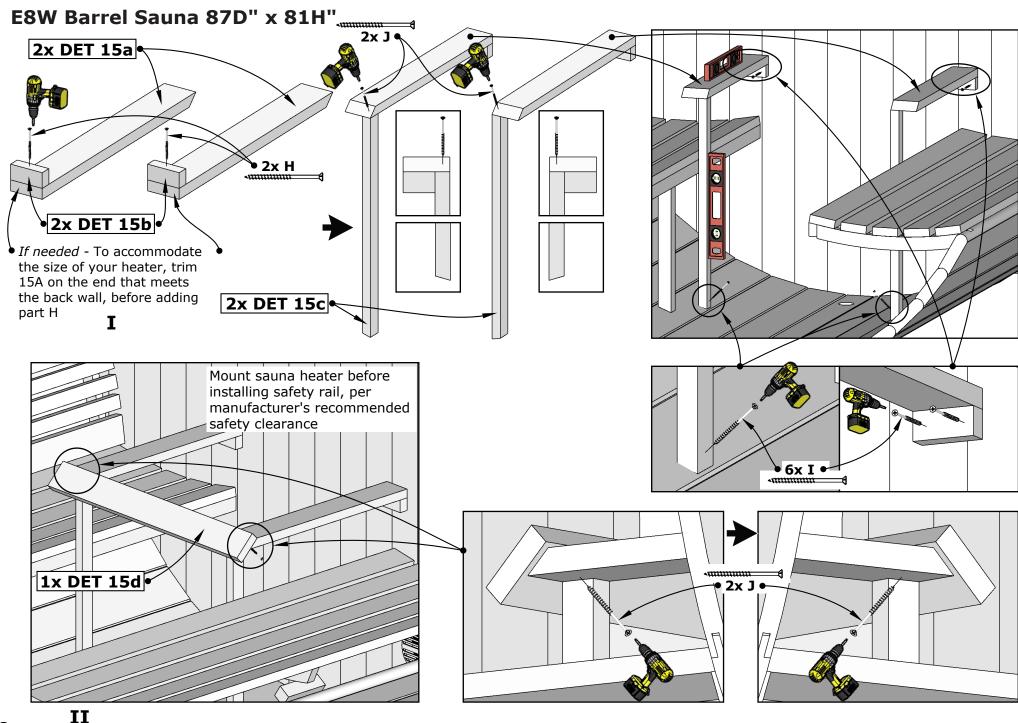

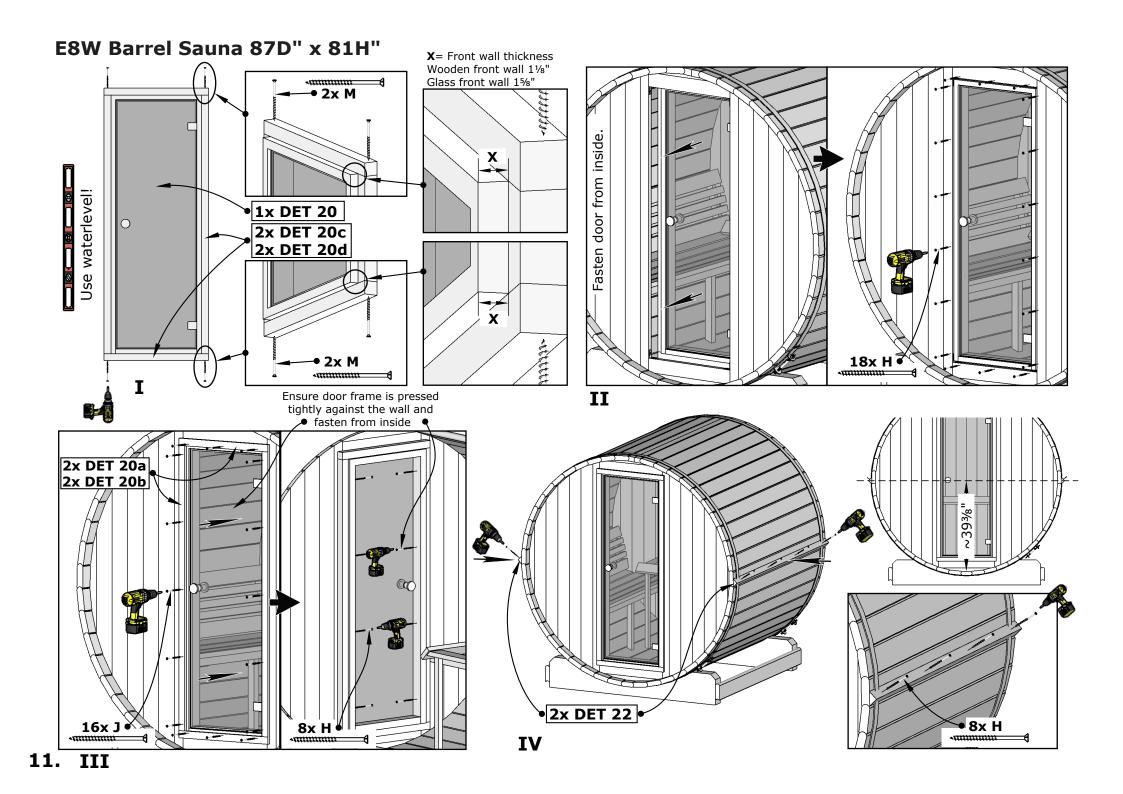

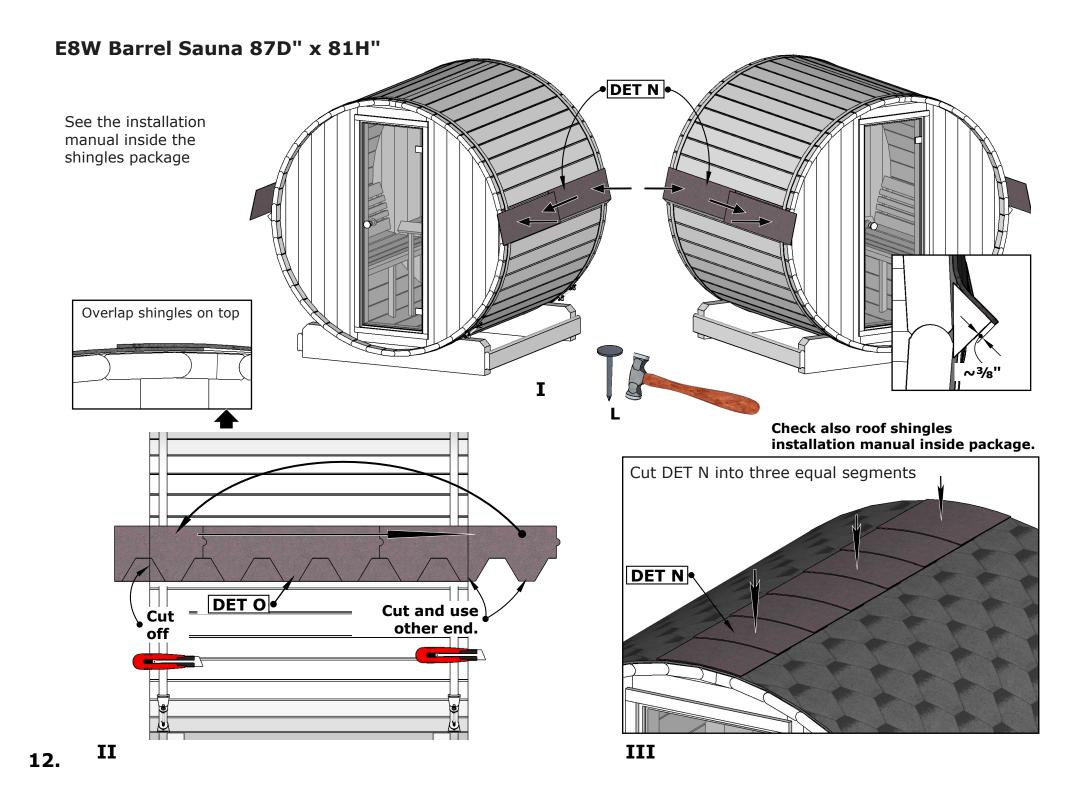

E8W Barrel Sauna 87D" x 81H"

